

DYNACODE

Interface Description



Copyright by Carl Valentin GmbH / 7957015.0220

Information on the scope of delivery, appearance, performance, dimensions and weight reflect our knowledge at the time of printing.

We reserve the rights to make modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy or any other method) or edited, copied or distributed electronically without written permission from Carl Valentin GmbH.

Due to the constant further development of our devices discrepancies between manual and device can occur.

Please check www.carl-valentin.de for the latest update.

Trademarks

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin direct print modules comply with the following safety guidelines:

- CE** EG Machinery Directive (98/37/EC)
- EG Low-Voltage Directive (2006/95/EC)
- EG Electromagnetic Compatibility Directive (89/336/EEC)



Carl Valentin GmbH
Postfach 3744
78026 Villingen-Schwenningen
Neckarstraße 78 – 86 u. 94
78056 Villingen-Schwenningen

Phone +49 7720 9712-0
Fax +49 7720 9712-9901

E-Mail info@carl-valentin.de
Internet www.carl-valentin.de

SERIAL DATA TRANSMISSION	1
XON / XOFF - Protocol.....	1
Connector assignment (9-pin DSUB socket)	1
Connecion RS 232	2
Connector assignment RS485 and RS422	3
PARALLEL DATA TRANSMISSION.....	4
Connection	5
ROTATION OF TEXT, CODE AND GRAPHIC	6
DATUMPOINT	6
DATA FORMAT.....	7
Explanations.....	8
Definition of field attributes/field properties (optional)	9
Field name.....	10
Field selection by free definable field number.....	14
MASK SET	15
Text	15
Standard code	17
2D bar codes	19
Rectangle	27
Line.....	27
Internal graphic.....	28
TEXT SET	29
GRAPHIC.....	31
General graphic format.....	31
Graphic in PCX format.....	32
VARIABLES	34
Set structure	34
Link field	34
Counter.....	35
Extended counter	36
Date / Time	37
Currency variable	41
Shift variable.....	42
User guiding	43
Memory card data.....	44
GS1-128 Parser.....	44
EPC calculation (Electronic Product Code)	45
Check digit.....	46
Substring	47

PARAMETER SETS.....	48
Layout parameters.....	48
Device parameters	52
Interface	56
Network	58
Sensors	61
Service functions	62
Date & Time.....	65
Password.....	68
Compact Flash Card.....	70
Printing	73
Emulation	76
PARAMETER SETS FOR CONTINUOUS MODE	77
Machine parameters.....	77
Ribbon save.....	79
I/O parameters.....	81
PARAMETER SETS FOR INTERMITTENT MODE	83
Machine parameters.....	83
I/O parameters.....	84
AUTOSTATUS	88
CHARACTER SETS.....	90
International ANSI character font.....	92
Codepage 437	93
Codepage 850.....	94
Codepage 852.....	95
Codepage 857	96
GEM German	97
GEM English.....	98
GEM French	99
GEM Swedish.....	100
GEM Danish	101
FONT EXAMPLES	102
Bitmap fonts (not proportional)	102
Bitmap fonts (proportional)	102
Vector fonts	102
INDEX	103

SERIAL DATA TRANSMISSION

XON / XOFF - Protocol

The XON / XOFF protocol is used in "memory"-mode. The XON-code (HEX 11) indicates that the print module is ready to receive data. When XOFF-code (HEX 13) is shown the transmission of data has to be interrupted. To avoid possible data loss some information will be stored into the data-memory. When receiving, that the memory is empty the XON-code (HEX 11) will be shown again.

Connector assignment (9-pin DSUB socket)




Pin	Signal	Beschreibung
2	R x D	Receiving data line
3	T x D	Transmitting data line
4	DTR	HW Handshake
5	GND	GND Signal

Connecion RS 232


Terminal assignment (cable)

XON / XOFF - report: e.g. connection to an IBM-compatible computer

1. printer (DSUB 9-plug) PC (DSUB 25-socket)

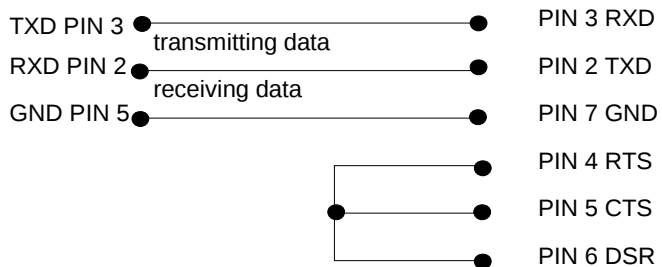


2. printer (DSUB 9-plug) PC (DSUB 9-socket)

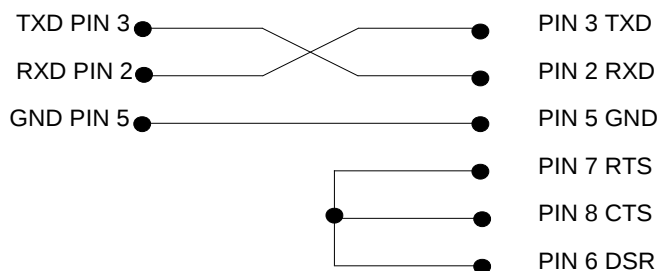


Hardware handshake:

1. printer (DSUB 9-plug) PC (DSUB 25-socket)

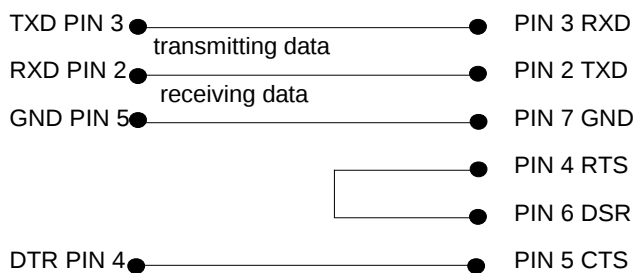

2. printer (DSUB 9-plug) PC (DSUB 9-socket)

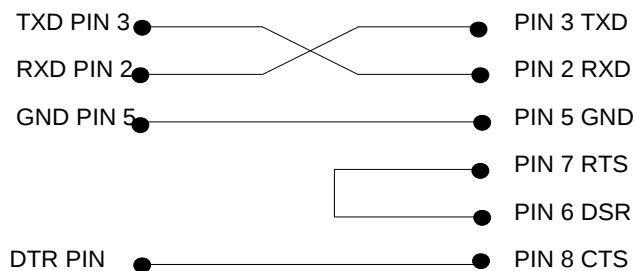

Connector assignment RS485 and RS422

9-pin DSUB socket)



PIN at DSUB socket	Function RS422 (full duplex)	Function RS485 (semi duplex)
1	GND	GND
2	n/c	n/c
3	n/c	n/c
4	RxD-	n/c
5	RxD+	n/c
6	n/c	TxD (RxD)-
7	n/c	TxD (RxD)+
8	TxD-	n/c
9	TxD+	n/c

PARALLEL DATA TRANSMISSION


Interface:	parallel Interface	
	synchronising with STROBE - signal	
	handshake with BUSY - signal	
	all signals are TTL - compatible	
Connection:	AMPHENOL - plug 57-30360	
	PIN 1	In regular condition, this signal is in "HIGH" position. With decreasing amplitude the data acceptance is completed from DATA 1 DATA 8.
	PIN 2 . . . 9	DATA 1 DATA 8 parallel data information
	PIN 10	<u>ACKNLG</u>
	PIN 11	In regular condition this signal is "LOW". With decreasing amplitude of STROBE- signals, BUSY will change onto "HIGH" - level. This level will stay as long as the print module is busy with the already received data byte.

Connection

AMP 36 (Centronic's socket)

Signal Pin-No.	Signal name	Direction	Function
1	<u>STROBE</u>	(input)	The <u>STROBE</u> signal indicates that data can be received. The impulse width to the receiving line has to be 0,5 μ s at least.
2	DATA 0	(input)	The signals are data bits sent to the print module. A HIGH level corresponds to logical 1 and a LOW level to logical 0.
3	DATA 1	(input)	
4	DATA 2	(input)	
5	DATA 3	(input)	
6	DATA 4	(input)	
7	DATA 5	(input)	
8	DATA 6	(input)	
9	DATA 7	(input)	
10	<u>ACKNLG</u>	(output)	An impulse of approx. 12 μ s confirms data input for a LOW level and signals the further listening watch of the print module.
11	BUSY	(output)	A HIGH level indicates that the print module cannot receive any data. On the following conditions the signal HIGH is possible: 1) for data input (impulse for each sign) 2) during a printing process 3) in Offline status 4) for print module failures
12	PE	(output)	A HIGH level indicates that paper is used up.
13	SELECT	(output)	High Online
14	AUTOFEED		
15	GND		
16	GND		Signal ground.
17	CHASSISGND		Mass, not connected with signal ground.
18	+ 5V		Approx. 4,8 V (max. 100mA)
19-30	GND		Return conductor for twisted pair conductors.
31	not used		-
32	<u>FAULT</u>	(output)	Signal goes to LOW, in case 1) the paper is used up 2) the print module is Offline or 3) an error occurs.
33	not used		
34	not used		
35	not used		
36	not used		


ROTATION OF TEXT, CODE AND GRAPHIC

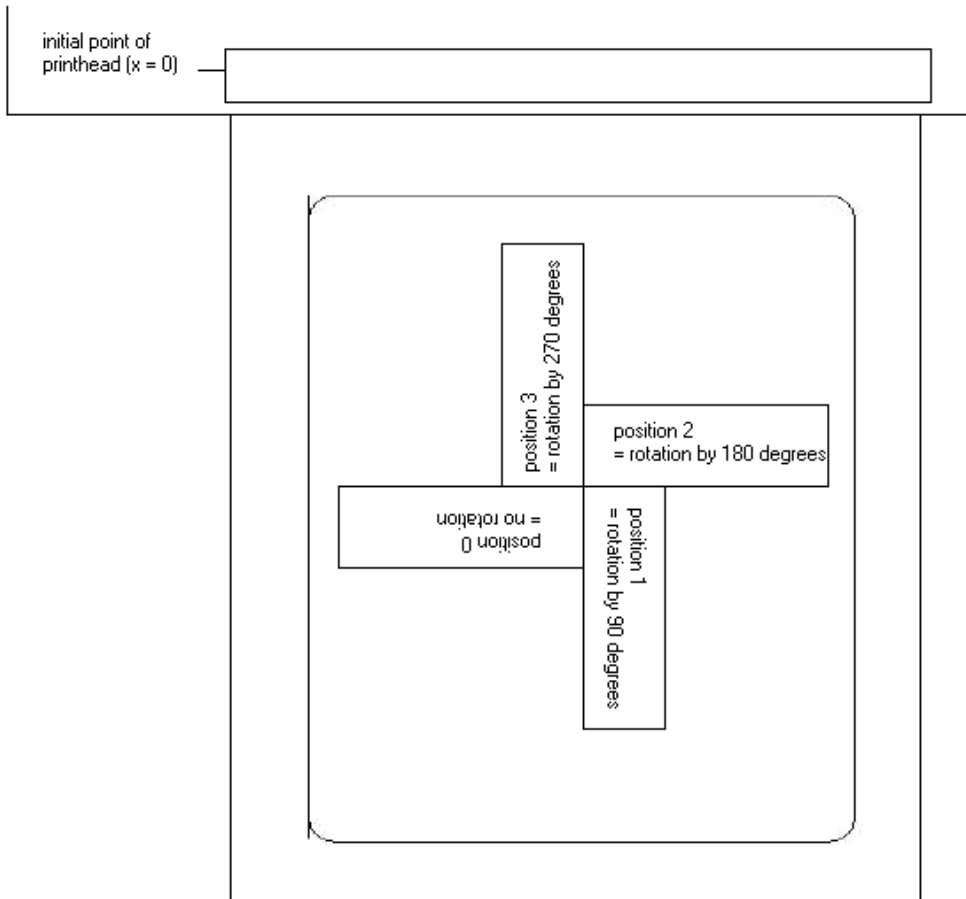

DATUMPOINT

The so-called datum point is the relation point for indication of position. In the meantime the datum point is also the point at which the selected object is rotated.

To determine the datum point in the mask sets, the possible datum points are numbered from left top (1) to right bottom (9). The default datum point is left bottom (7). This datum point is also used even if no indication is found in the mask set.

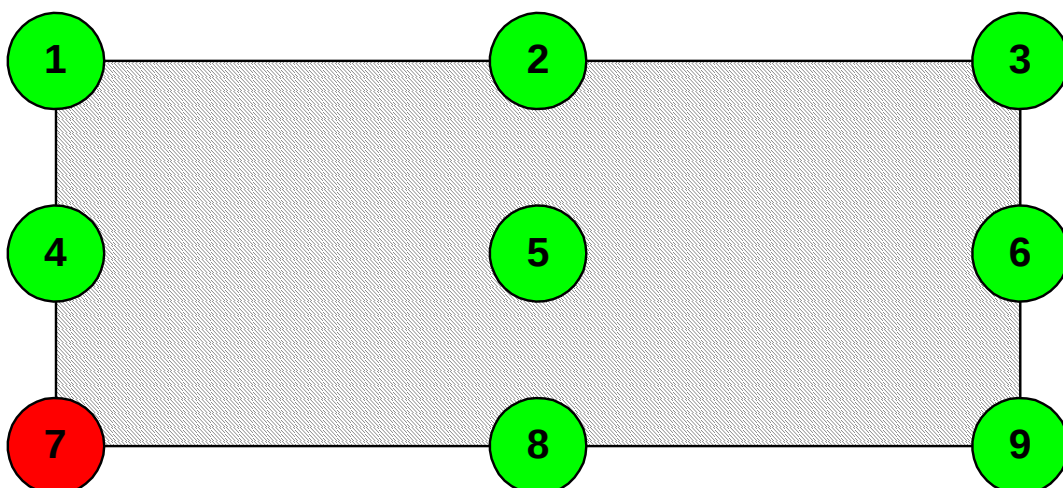

DATA FORMAT

The format of data consists of 4 parts, the mask part, the text, the code (if necessary) and the command part.

For a n-line layout the following has to be transmitted:

- n mask sets
- n text sets
- n graphic sets (if necessary)
- 1 command set

The command set always has to be transmitted at the end!

To each text on a layout belongs one MASK SET and one TEXT SET with the same field number.

To each code on a layout belongs one MASK SET, one TEXT SET and one CODE SET with the same field number.

To each box or line on a layout belongs only one MASK SET.

To each graphic on a layout belong several GRAPHIC SETS according to its size res. height, e.g. a graphic with a height of 10 mm needs 80 graphic sets.

Examples:

layout with 3 lines text:	3 mask sets 3 text sets 1 command set
layout with 3 lines text and 1 code:	4 mask sets 4 text sets 1 code set 1 command set
layout with 2 lines text, 1 box and 3 lines:	6 mask sets 2 text sets 1 command set

For all data sets the following is valid:

Each set starts with: SOH = start of header → HEX format 01

and ends with: ETB = end of data transmission block → HEX format 17

Alternatively, the start character SOH can be set to 5E_{Hex}, the end character ETB to 5F_{Hex}. This is necessary if the connected system (e.g. UNIX) cannot transfer control signs.

All other data sets → ASCII format, but they will be transmitted as hexadecimal characters.

Example: A = identification of mask set - transmission: 41_{HEX}
n = field number '01' - transmission: 30_{HEX}, 31_{HEX}

Explanations

x coordinate: distance from right layout rim in mm
is measured from the right layout rim up to the lower left point of the corresponding line

y coordinate: distance from upper layout rim in mm
is measured from the beginning of the layout down to the lower left point of the corresponding line

Bitmap fonts not proportional: bitmap fonts - not proportional (Matrix – mm)

01 = FONT 01	0,8 x 1,1 mm	- 127 characters
02 = FONT 02	1,2 x 1,7 mm	- 255 characters
03 = FONT 03	1,8 x 2,6 mm	- 255 characters
04 = FONT 04	4,0 x 5,6 mm	- 127 characters
05 = FONT 05	1,8 x 3,2 mm - descender	- 255 characters
06 = FONT 06	1,5 x 2,9 mm	- 127 characters
07 = FONT 07	1,2 x 2,2 mm - descender	- 255 characters

Bitmap fonts proportional: bitmap fonts – proportional

21 = FONT 21	1,0; 9 (1,0; 13)	- 255 characters
22 = FONT 22	1,8; 14 (1,8; 21)	- 255 characters
23 = FONT 23	2,6; 21 (2,6; 31)	- 255 characters
24 = FONT 24	5,6; 45 (5,6; 67)	- 255 characters
28 = FONT 28	4,0; 32 (4,0; 48)	- 255 characters
29 = FONT 29	0,8; 6 (0,8; 9)	- 255 characters

To reach best print results it is recommended always to chose the biggest possible font.

Vector fonts proportional text: When in mode "proportional text", the height and width of text have to be entered in mm.
These values refer to the capital "M", i.e. the values of other characters are changing in proportion.

Vector fonts autoscale: When in autoscale mode, height and width of text has to be entered in mm.
The height of the text refers to all capital letters. When using small characters and descenders the height is changing in proportion. When entering the width, the complete file has to be considered. The text will be adjusted automatically, which means that the width of the characters is changing.

Definition of field attributes/field properties (optional)

Explanation: Additionally to mask set 'AM[] ...' the possibility was created to define further field properties. In order to achieve a high flexibility, the field properties received own names/identifications. Therefore the sequence as well as the number of field properties are free. If necessary, the mask set 'AC[]' is transferred additionally to mask set 'AM[]' to the printer.

Structure mask set: (SOH)AC[]at1=*value*;at2= *value*;...(ETB)

Attribute (at):	Description
BT BW QZ	ITF 14 (see chapter 'Mask set ITF code') Bearer bar type Bearer bar width Quiet zone in 1/100 mm
NAME	Field name (see page 10) Definition of field name
FN	Field number (see page 14) Free definable field number

This table is constantly extended. The current version is available on demand.

Field name

Application (customized)

When direct print modules are connected to a computer system or machine controls, there is often the requirement that variable data is to be inserted into an existing layout. This data contents come from the superordinate computer system (database) or a machine control (e.g. PLC, scale, ERP system, etc.). Basically, it was always possible to integrate variable data into a 'loaded' layout (mask). The access to certain fields has been effected via the field index, i.e. a consecutive number. This field index is generated by Labelstar Office and can also change with layout changes, whereby the data allocation to the computer system/control is no longer correct.

Example



Print data

```
...
// TEXT (1/100 mm)
(SOH)AM[1]2405;803;0;1;2;4;1;1;0(ETB)
(SOH)BM[1]Feld 1(ETB)
// TEXT (1/100 mm)
(SOH)AM[2]421;856;0;1;2;4;1;1;0(ETB)
(SOH)BM[2]Feld 2(ETB)
// LINES: 2
...
```

The print data contains the definitions for the two text fields. The field index is always in '[']' of the mask or text setting.

If the text field 'Feld 1' is deleted on the layout and then recreated, it gets a new index. In this case '2'. The text field 'Feld 2' gets the index '1'. As a result, an assignment via the field index is used only to a limited extend, without manual post-processing of the layout data.

Explanation

As an alternative to the field index, the assignment can also be made via the field name. A change in the field index has no longer any influence, and a changed layout is still filled in the right places with variable data of the computer system/control system.

Labelstar Office: The print data is supplemented by the following line:

```
(SOH)AC[1]NAME="Field name"(ETB)
```

The field content defined via the text block can be changed by the computer system/control with the following command:

```
(SOH)BV[Field name]Feld 2(ETB)
```

This results in the following standard procedure for the connection to a high-level control and/or computer system.


Layout design with Labelstar Office

The field names are automatically transferred by Labelstar Office.





The desired field name (Field1) is entered in the properties of the text field.

For text fields, a printer-internal font must be used. The device-internal fonts are marked by a printer symbol in the list.

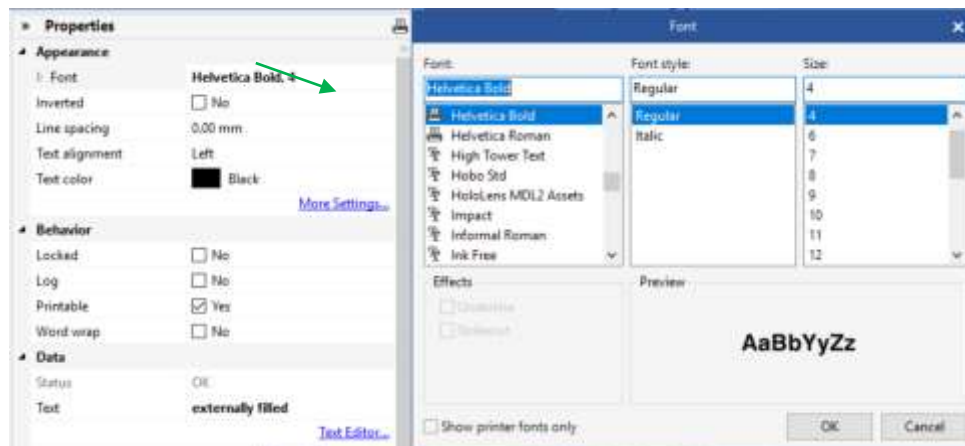

Export to a print file and save the layout in the external controller

When the layout design is finished, the layout is exported to a print file. For this, Labelstar Office uses the function **File – Export – Create Print Template**.

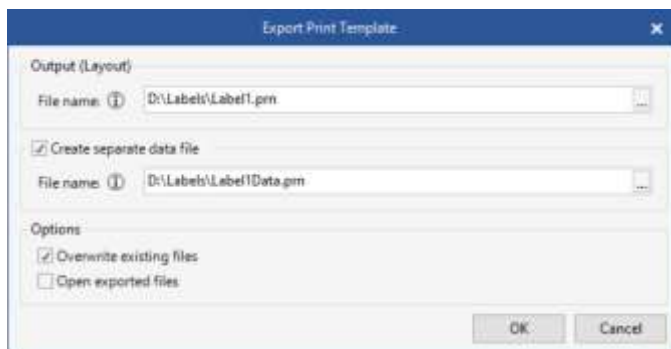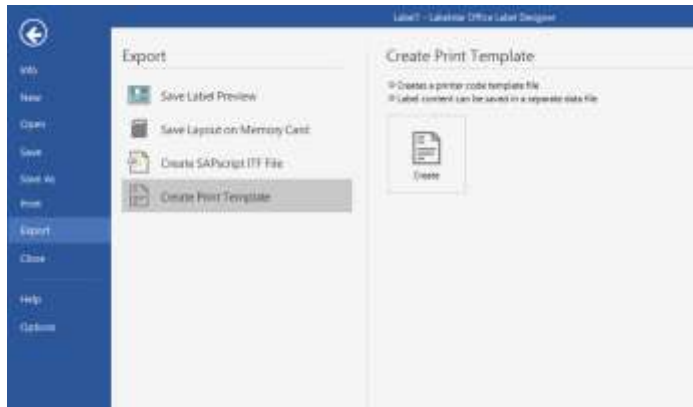


The option **Create separate data file** must be selected, otherwise the line (SOH)**FBC---r-----**(ETB) is included in the print file, which would immediately release a print procedure.

By starting a print procedure, this print file (layout definition / mask definition) is transferred from the controller/computer system to the direct print module first.

Save the layout on the memory card of the direct print module

As an alternative to 'Export to a print file' the layout is saved on the memory card of the direct print module. For this, the memory card tool from Labelstar Office can be used.

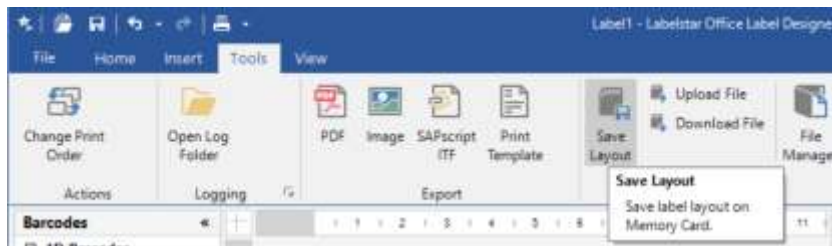

The layout must be called by the controller/computer system **before** filling the variable fields.

The following parameter set is used:

(SOH)**FMA**---**rfilename**(ETB)

The path name is determined when saving and possibly contains a path.

Example: "A:\Standard\eti1".

Filling the variable fields by the controller/computer system

The higher-level control can select the variable fields by the field names and set the contents.

Subsequently, the print job is restarted.

Example

(SOH)**FMB**---**rfilename**(ETB)

(SOH)**BV**[**ArtBez**]**screws**(ETB)

(SOH)**BV**[**ArtNr**]**123456789**(ETB)

(SOH)**FBC**---**r**-----**r**(ETB)

Loading the layout from mc

Filling the field "ArtBez" with "screws"

Filling the field "ArtNr" with "123456789"

Start printing

Field selection by free definable field number

With the following described attribute it is possible to assign a free definable field number to a field. This field number does not have to be clear, i.e. several fields can have the same field number. In this way the same field contents can be assigned to different fields.

The following attribute identification is defined:

Attribute	Description
FN	free definable field number

After the field number was assigned with AC mask statement,

(SOH) AC [n] FN=nr (ETB)

n = field index

nr = free definable field number

it is possible to access to the field and/or the fields with the new BF text statement:

(SOH) BF [nr] text (ETB)

nr = field number

text = field contents

Example

// Assignment of field number for field 1 and field 2

(SOH) AM[1]1000;2500;0;4;2;7;400;400;0 (ETB)

(SOH) AC [1] FN=100 (ETB)

(SOH) AM[2]2000;2500;0;30;2;4000;9;3;0;1 (ETB)

(SOH) AC [2] FN=100 (ETB)

// Access to field 1 and field 2 by field number

(SOH) BF [100]1234567890 (ETB)

MASK SET

Text

AM[n]y;x;p;a;d;z;dy;dx;lp;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y coordinate in 1/100 mm
x	X coordinate in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 1 = Bitmap Font 2 = Bitmap Font inverse 4 = Vector Font proportional 5 = Vector Font Autoscale 6 = Vector Font proportional inverse 7 = Vector Font Autoscale inverse
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
z	character font for not proportional Bitmap fonts (1+2) 01 = FONT 01 0,8 x 1,1 mm 127 characters 02 = FONT 02 1,2 x 1,7 mm 255 characters 03 = FONT 03 1,8 x 2,6 mm 255 characters 04 = FONT 04 4,0 x 5,6 mm 127 characters 05 = FONT 05 1,8 x 3,2 mm - descender 255 characters 07 = FONT 07 1,2 x 2,2 mm - descender 255 characters
	character font for proportional Bitmap fonts (1+2) 21 = FONT 21 (1,0; 13) 255 characters 22 = FONT 22 (1,8; 21) 255 characters 23 = FONT 23 (2,6; 31) 255 characters 24 = FONT 24 (5,6; 67) 255 characters 28 = FONT 28 (4,0; 48) 255 characters 29 = FONT 29 (0,8; 9) 255 characters
	character font for vector fonts (4-7) 01 = Helvetica Bold 02 = Helvetica Bold italics 03 = Helvetica Roman 04 = Helvetica Roman italics 05 = Swiss Light 06 = Swiss Light italics 07 = Baskerville 08 = Baskerville italics 09 = Brush Script 10 = Brush Script italics 11 = Monospace 12 = Monospace italics 17 = OCR-A 18 = OCR-A italics 19 = OCR-B 20 = OCR-B italics

dy	extension in direction Y Bitmap fonts factor 0...9 Vecor fonts character size in 1/100 mm Vector fonts Autoscale field height
dx	extension in direction X Bitmap fonts factor 0-9 Vector fonts character sign in 1/100 mm Vector fonts Autoscale field width
lp	distance between single characters in 1/100 mm
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

Standard code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp		
A	identification for mask set	
M	identification for protocol version	
n	field number	
y	Y position in 1/100 mm	
x	X position in 1/100 mm	
p	identification for phantom field 0 = print 1 = no print	
a	identification for field type 30 = Code 39 31 = Code 2/5 interleaved 32 = EAN 8 33 = EAN 13 34 = UPC A 35 = UPC E 36 = CODABAR 37 = Code 128 38 = EAN ADD ON 39 = GS1-128 40 = Code 93 41 = PZN 7 42 = 2/5 Industrie 43 = Leitcode 44 = Identcode 46 = Code 39 extended 47 = Code 128 A 48 = Code 128 B 49 = Pharmacode 60 = PZN 8 62 = USPS Intelligent Mail 63 = POSTNET	
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°	
h	height of symbol in 1/100 mm	
v1	relation 1; module width 'THICK'	
v2	relation 2; module width 'THIN' res. SC factor	
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation	
z	human readable line 0 = no human readable line 1 = with human readable line	
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom	

ITF Code

AM[n]y;x;p;a;d;h;v1;v2;pz;z;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print - 1 = no print
a	identification for field type 56 = ITF 14
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	height of symbol in 1/100 mm
v1	relation 1; module width 'THICK'
v2	relation 2; module width 'THIN' res. SC factor
pz	check digit calculation 0 = no check digit calculation 1 = check digit calculation 4 = inverse - no check digit calculation 5 = inverse - check digit calculation
z	human readable line 0 = no human readable line 1 = with human readable line
dp	datapoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom


In order to print the bearer bars of an ITF 14 barcode, the following additional properties for Code 2/5 interleaved must be set:

For this the following field properties are determined:

Property identifier	Description
BT	bearer bar type 0 = no bars 1 = above/below 2 = rectangle
BW	bearer bar width in 1/100 mm
QZ	quiet zone in 1/100 mm

Example

```
// BARCODE (1/100 mm)
(SOH)AM[1]4498;7076;0;31;2;3000;12;4;0;1;3(ETB)
(SOH)AC[1]BT=2;BW=150;QZ=600(ETB)
(SOH)BM[1]1234567890123(ETB)
```

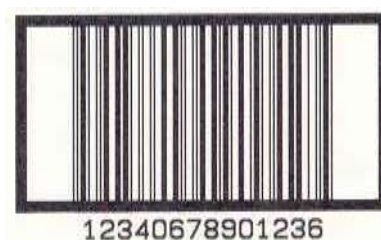

2D bar codes

PDF417

AM[n]y;x;p:a;d;s;rw;rh;ec;z;dp;c;r	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 50 = PDF417
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size
rw	relation width
rh	relation height
ec	error correction level 0 - ECC Level = 0 1 - ECC Level = 2 2 - ECC Level = 6 3 - ECC Level = 14 4 - ECC Level = 30 5 - ECC Level = 62 6 - ECC Level = 126 7 - ECC Level = 254 8 - ECC Level = 510
z	style 0 = Standard 1 = Truncated 2 = Naked 3 = Bare
dp	datapoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom
c	number of columns 0 = automatic, 1-30
r	number of rows 0 = automatic, 3-90

MAXICODE

AM[n]y;x;p;a;d;0;sn;ns;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 51 = MAXICODE
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
0	dummy
sn	symbol number
ns	quantity of symbols
m	mode 2 = Structured Message (US Carrier) 3 = Structured Message (International Carrier) 4 = Default message
0	dummy
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for phantom field
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print; 1 = no print
a	identification for field type 52 = DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	error correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

GS1 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp	
A	identification for mask set
M	identification for phantom field
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print; 1 = no print
a	identification for field type 59 = GS1 DataMatrix
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size in 1/100 mm
aw	relation width
ah	relation height
ec	error correction 0 - ECC Type = 0 ECC Level = 0 Overhead = 0 % 1 - ECC Type = 2* ECC Level = 40 Overhead = 33 % 2 - ECC Type = 3 ECC Level = 50 Overhead = 25 % 3 - ECC Type = 6 ECC Level = 80 Overhead = 33 % 4 - ECC Type = 8 ECC Level = 100 Overhead = 50 % 5 - ECC Type = 9* ECC Level = 110 Overhead = 75 % 6 - ECC Type = 10* ECC Level = 120 Overhead = 50 % 7 - ECC Type = 11* ECC Level = 130 Overhead = 67 % 8 - ECC Type = 12 ECC Level = 140 Overhead = 75 % 9 - ECC Type = 26 ECC Level = 200 Overhead = 0 %
f	format ID 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

* not supported from printer

CODABLOCK F

AM[n]y;x;p;a;d;h;nc;nl;m;s;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 53 = CODABLOCK F
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	height of line in symbole
nc	quantity of characters/line
nl	quantity of lines
m	mode
s	module size
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

GS1 DataBar (RSS)

AM[n]y;x;p;a;d;s;m;k;t;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 54 = GS1 DataBar (RSS)
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	number of segments per line [2...22]
m	module width [1 ...12]
k	spacing correction [0,1,2]
t	symbol type 1 = GS1 DataBar Omnidirectional (RSS-14) 2 = GS1 DataBar Truncated (RSS-14 Truncated) 3 = GS1 DataBar Stacked (RSS-14 Stacked) 4 = GS1 DataBar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional) 5 = GS1 DataBar Limited (RSS Limited) 6 = GS1 DataBar Expanded (RSS Expanded)
z	not in use
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

QR Code

AM[n];x;p;a;d;mo;cs;ms;cw;ec;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 57 = QR Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
mo	code model 1 = code model 1 2 = code model 2
cs	character set N = numeric A = alphanumeric B = 8-bit Byte K = Kanji
ms	masking -1 = auto 0-7 = mask x 8 = no masking
cw	line width in 1/100 mm per module possible values: 0-800
ec	error correction (restoring capacity) L = 7 % M = 15 % Q = 25 % H = 30 %
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

Aztec Code

AM[n]y;x;p;a;d;mo;cs;ms;cw;ec;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 61 = Aztec Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	symbol size in 1/100 mm (max 1 cm)
f	format 0 = Auto 1 = C15xC15 Compact 2 = C19xC19 Compact 3 = C23xC23 Compact 4 = C27xC27 Compact 5 = C19xC19 6 = C23xC23 7 = C27xC27 8 = C31xC31 9 = C37xC37 10 = C41xC41 11 = C45xC45 12 = C49xC49 13 = C53xC53 14 = C57xC57 15 = C61xC61 16 = C67xC67 17 = C71xC71 18 = C75xC75 19 = C79xC79 20 = C83xC83 21 = C87xC87 22 = C91xC91 23 = C95xC95 24 = C101xC101 25 = C105xC105 26 = C109xC109 27 = C113xC113 28 = C117xC117 29 = C121xC121 30 = C125xC125 31 = C131xC131 32 = C135xC135 33 = C139xC139 34 = C143xC143 35 = C147xC147 36 = C151xC151
ec	error correction (only if format = 0) 1 = 10 % 2 = 23 % 3 = 36 % 4 = 50 %
m	mode 0 = data 1 = runes (figures 0-255) 2 = Unicode (8 Bit ASCII) 3 = GS1 (not yet available)
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

Rectangle

AM[n]y;x;p;a;h;b;s;m;dp			
A	identification for mask set		
M	identification for protocol number		
n	field number		
y	Y position in 1/100 mm		
x	X position in 1/100 mm		
p	identification for phantom field 0 = print 1 = no print		
a	identification for field type 10 = rectangle		
h	height of rectangle in 1/100 mm		
b	width of rectangle in 1/100 mm		
s	line width in 1/100 mm		
m	line style; 1 digit		
dp	Datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom		

Line

AM[n]y;x;p;a;d;l;s;m;dp			
A	identification for mask set		
M	identification for protocol version		
n	field number		
y	Y position in 1/100 mm		
x	X position in 1/100 mm		
p	identification for phantom field 0 = print 1 = no print		
a	identification for field type 11 = line		
d	rotation 0 = horizontal 1 = vertical		
l	length in 1/100 mm		
s	line width in 1/100 mm		
m	line style, 1 digit		
dp	datapoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom		

Internal graphic

AM[n]y;x;p;a;d;dy;dx;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 3 = internal graphic
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
dy	extension in direction Y
dx	extension in direction X
dp	datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom



TEXT SET

BM[n]text	
B	identification for text set
M	identification for extended protocol
n	field number
text	data contents, text

BV[n]text	
B	identification for text set
V	identification for selection by field name
n	field name
text	data contents, text

BF[n]text	
B	identification for text set
F	identification for selection by free definable field number
n	field number
text	data contents, text

 Examples

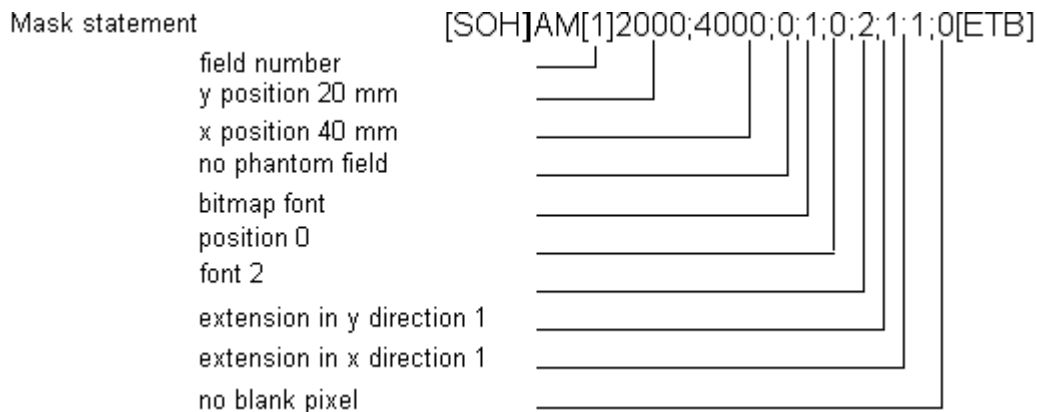

text set with variable definition: [SOH]BM[125]=CN(0,0,3,1,1)000[ETB]

Example layout

ASCII data	Identification
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ C _R L _F	mask set for bar code
⊗BM[1]444444444444⊕ C _R L _F	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ C _R L _F	five mask sets vector font / proportional font
⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ C _R L _F	
⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ C _R L _F	
⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ C _R L _F	
⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ C _R L _F	
⊗BM[2]Art.Nr. ⊕ C _R L _F	five appropriate text sets
⊗BM[3]44444⊕ C _R L _F	
⊗BM[4]Artikelbezeichnung⊕ C _R L _F	
⊗BM[5]DM⊕ C _R L _F	
⊗BM[6]99,-- ⊕ C _R L _F	
⊗FBA000r06000000⊕	number of lines
⊗FBBA00r00001000⊕	number of items
⊗FBC000r00000000⊕	start

: graphic data in PCX format
 ⊗: SOH (1_{hex} bzw 5E_{hex})
 ⊕: ETB (17_{hex} bzw. 5F_{hex})
 C_R: CarriageReturn (0D_{hex})
 L_F: LineFeed (0A_{hex})

GRAPHIC

General graphic format

This format is supported by all our print modules but note that a 8 bit transmission is absolute necessary.

SOH	D	p	p	p	p	lb	lb	lb	b	b	b	gb.....	ETB
-----	---	---	---	---	---	----	----	----	---	---	---	---------	-----

			min.	max.
D	=	identification for graphic set		
p	=	pixel line from above	'0000'	'1900'
lb	=	1. byte from left	'000'	'100'
b	=	quantity of bytes	'1'	'100'
gb	=	graphic bytes		

Graphic byte:



1 graphic bit = 0,083 x 0,083 mm

Graphic in PCX format

It is possible to transfer graphic data as a PCX-file (e.g. PaintBrush) to the print module. With this type of data transfer the PCX-file is transferred in a compressed form. Hereby the RLE-procedure is used and therefore the graphic data were reduced by approx. 30 %. This means that the effective transferring time for 300 dpi print modules is cut in halves.

To set the print module ready for receiving PCX-data the protocol has to be switched over and hereby the following command set will be defined:

SOH	A	X	n	n	n	y	y	y	y	y	y	x	x	x	x	x	x	m	dp	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	-----

n	Index of transferred graphic to print module internal maintenance at present not processed (000)		
y	Y coordinate of graphic in 1/100 mm		
x	X coordinate of graphic in 1/100 mm		
m	Mode 0 = standard Mode 1 = transparency Mode 2 = inverse Mode 3 = inverse transparency - background is overwritten - background is maintained - background is overwritten - background is maintained		
dp	Datumpoint 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom		

- It is recommended to observe that directly after the final sign (ETB) no separator res. fill character such as $C_R L_F$ is indicated.
- The print module supports the following PCX versions: 5, 3, 2 and 0.
- It is necessary that the corresponding PCX-file is available as monochrome (black/white).
- The graphic has to be available in the original size as the print module is not able to change the size by itself.

Before print start, indicated by parameter set 'FBC', the definition of field number, lines and pieces has to be effected via the parameter sets (FBA res. FBB).

Example of PCX file

_*** PCX_GRAPHIC-INFO ***-	
⊗AX0010015300100941⊕#####	
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ ^{C_R} ^{L_F}	mask set for bar code
⊗BM[1]444444444444⊕ ^{C_R} ^{L_F}	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F} ⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F} ⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F} ⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F} ⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ ^{C_R} ^{L_F}	five mask set vector font / proportional font
⊗BM[2]Art.Nr. ⊕ ^{C_R} ^{L_F} ⊗BM[3]44444⊕ ^{C_R} ^{L_F} ⊗BM[4]Artikelbezeichnung⊕ ^{C_R} ^{L_F} ⊗BM[5]DM⊕ ^{C_R} ^{L_F} ⊗BM[6]99,-- ⊕ ^{C_R} ^{L_F}	Five appropriate text sets
⊗FBA00r06000000⊕	set number of lines (FBA...)
⊗FBBA00r00001000⊕	set quantity (FBBA...)
⊗FBC000r00000000⊕	start print order (FBC...)

: graphic data in PCX format

⊗: SOH (1_{hex} bzw 5E_{hex})

⊕: ETB (17_{hex} bzw. 5F_{hex})

^{C_R}: CarriageReturn (0D_{hex})

^{L_F}: LineFeed (0A_{hex})

VARIABLES

Set structure

SOH	BM	[n]	=	v	v	(	p1	p2	p...	pn	)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	----	----	------	----	---	----	----	------	-----	-----

The grey marked part corresponds to the variable definition. The text entered from t1 to t70 is added to the function result of variable.

= start of function

vv variable type
 SC link field
 CN counter
 CC extended counter
 CL date/time
 CU currency variable
 SH shift variable
 UG user guiding
 MD memory card data

(start of variable parameter block

p1...pn variable parameter

) end of variable parameter block

Note: In case you want to print a text which corresponds exactly to the variable definition then you have to place '!' before.

SOH	BM	[n]	!	=	v	v	(	p1	p2	p...	pn	)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	---	----	----	------	----	---	----	----	------	-----	-----

Link field

SOH	BM	[n]	=	S	C	(	p1	;	p2	;	p...	;	pn	)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	----	---	----	---	------	---	----	---	----	----	------	-----	-----

= SC identification of link field

p1...pn identification of link elements (field number or constant text)
 field number is entered without leading '0'
 constant text is included in " but these marks are not printed

Note: Reference fields can be constant text or variables but no link fields.

Example: =SC(1;2;3) print: field1field2field3
 =SC(1;"constant";2) print: field1constantfield2

Counter

SOH	BM	[n]	=	C	N	(	t	;	m	;	c	;	+/-	s	;	i	;	h	;	r	)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	-----	---	---	---	---	---	---	---	---	----	----	------	-----	-----

= CN identification counter

t type of counter
 0 numerical
 1 letters only
 2...36 radix, base of the counter

m function mode of counter
 0 standard
 1 return to start value
 2 enter the start value at the beginning of printing
 (default = existing start value)
 3 enter the start value at the beginning of printing
 (default = last final number)
 4 reset start value at cycle end
 (only for DPM IIIi)
 5 reset start value by I/O signal
 6 time-controlled resetting
 7 time-controlled resetting with input of initial value
 (default = last final value)

c digit where the numbering starts counting

+/- direction
 + adding
 - subtracting

s step width

i update interval
 (number of labels with identical number)

h time by which the counter is reset (function mode 6 and 7) in format 'HH:MM'
 e.g. 00:00 = reset counter at 0:00
 (optional, only for function mode 6 and 7)

r reset value
 (optional, only for function mode 6 and 7; default = text and/or initial value)

Limitation:

The time-controlled resetting of counter variable is only effected in case of an active print order. If a print order is cancelled before the specified time and afterwards again restarted then no resetting of counter value is effected.

t1, t2, ... text res. start value of counter

Example:

Entry: =CN(10;7;4;+1;1;06:00;0001)1234

The enquiry for the initial value is effected at print start and at 6:00 the counter variable is reset to value 0001.

Extended counter

SOH	BM	[n]	=	C	C	(	+/-	s	;	i	;	m	;	z	;	n	;	x	)	t	ETB
-----	----	-----	---	---	---	---	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

= CC identification of numeric counter

+/- direction

+ counter adding

- counter subtracting

s step width

i update interval
(number of labels with identical number)

m function mode of counter

0 standard

1 return to start value

2 enter the start value at the beginning of printing
(default = existing start value)

3 enter the start value at the beginning of printing
(default = last final number)

4 reset start value at cycle end
(only for DPM IIIi)

5 set min. / max. value

6 set start value

7 print end

z leading zeros

0 no leading zeros

1 printout with leading zeros

n minimum value (max. -999999999)

x maximum value (max. 999999999)

t start value

(the number of digits determines the format for the printout with leading zeros
(max. 999999999))

Example:

Entry: =CC(+1;2;5;0;1,999)0050

Print: 50, 51,...999, 1, 2, ...

Date / Time

SOH	BM	[n]	=	C	L	(	m	:	d	:	i	:	n	:	c	:	mo	:	pd	:	pm	:	md	:	mm	:	rw	:	ws	)	t1	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	---	----	---	----	---	----	---	----	---	----	---	----	---	----	------	-----	-----

= CL identification date/time
 m month offset to the actual date
 d day offset to the actual date
 i update interval (0 = at the beginning of a print order, 1 = each label)

Optional parameters

n minute offset to the actual time
 (negative entry/value possible)
 c correction month overflow (0 = change to the next month, 1 = remain in current month)

Optional parameters for BBE date

mo entry mode 0: standard; display current date of real time clock
 1: display calculated date, modification possible
 2: display calculated date, no modification possible
 pd max. positive correction days
 pm max. positive correction months
 md max. negative correction days
 mm max. negative correction months

Optional parameters for rounded date

rw rounded weekday: 1 = Sunday ... 7 = Saturday; 0 = no rounding
 ws start of week, format: "D-HH:MM", e.g. 1-00:00 = Sunday, 0:00 Uhr

Examples:

Actual date as per Real Time Clock: 25.02.08

Entry:	=CL(0;0;0)<DD.MO.YY>	Print:	25.02.08
Entry:	=CL(1;1;0)<DD.MO.YY>	Print:	26.03.08

Example for BBE date

Entry: =CL(0;0;0;0;0;1;3;2;3;2)<DD.MO.YY> At print start the calculated date is displayed at the printer and can be modified (+/- 3 days and +/- 2 months):

Display:

ID_01	DD:MO:YY
	25:02:08

Example for rounded date

The beginning of the week is on Sunday at 00:00. The date of Monday should be printed the whole week.

Entry: =CL (0;0;0;0;0;0;0;0;0;2;1-00:00)<DD.MO.YY>

Current date	Rounded date
23.02.2008 23:59:59	18.02.2008
24.02.2008 00:00:00	25.02.2008
25.02.2008	25.02.2008
01.03.2008 23:59:59	25.02.2008
02.03.2008 00:00:00	03.03.2008

Format identifier

Standard format	
HH	Hours 2-digit (24 hours)
HE	Hours 2-digit (12 hours)
MI	Minutes 2-digit
SS	Seconds 2-digit
AM	AM/PM output
DD	Day 2-digit
MO	Month 2-digit
YYYY	Year 4-digit
YY	Year 2-digit
Y	Year 1-digit
WW	Calendar week
DW	Day of week (Sunday = 0)
DW1	Day of week (Sunday = 1)
DwX	Day of week An arbitrary ASCII character can be used for x, from which it is counted consecutively.
DOWxxxxxx	Day of week - variable For x, any ASCII character can be used The first ,x' denominates Sunday, the next denominates Monday and so on until Saturday For each weekday a character must be created
DOY	Day of year 3-digit (First January = 1)
DY	Day of year 3-digit (First January = 0)
Examples	
DD.MO.YY	10.09.06
MO/DD/YYYY	09/10/2006
YY-MO-DD	06-09-10
YYMODD	060910

The format identifier 'HE' and 'AM'/'am'/'Am' are supplemented. Therefore the output of hours in 12-hours mode is possible. By the additional output of format identifier 'AM' the output of time in american/english format is possible.

Examples:

=CL(0;0;0;0)<HH:MI:SS>	->	15:30:00
=CL(0;0;0;0)<HE:MI:SS>	->	03:30:00
=CL(0;0;0;0)<HE:MI:SS AM>	->	03:30:00 PM
=CL(0;0;0;0)<HE:MI:SS am>	->	03:30:00 pm
=CL(0;0;0;0)<HE:MI:SS Am>	->	03:30:00 p.m.

By separating the output of time and AM/PM output in 2 text fields, also the following output format is possible:

03:30:00 pm

Extended format	
XMO	Name of month short
XSO	Name of month long
XSD	Weekday short
XLD	Weekday long
For X you can enter the country identification of desired language	
C = Canadian D = Danish E = English F = French G = German I = Italian N = Dutch O = Norwegian S = Spanish U = Finnish W = Swedish	
Examples:	
DD.EMO.YY	10.SEP.06
DD.ESO YYYY	10. September 2006
ELD,DD.GMO.YY	Sunday, 10. SEP.06
ESD,DD.MO.YY	DO, 10.09.06

Extended format - XMO

C	JA	FE	MR	AL	MA	JN	JL	AU	SE	OC	NO	DE
D	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC
E	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
F	JAN	FEV	MAR	AVR	MAI	JUIN	JUIL	AOU	SEP	OCT	NOV	DEC
G	JAN	FEB	MRZ	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DEZ
I	GEN	FEB	MAR	APR	MAG	GIU	LUG	AGO	SET	OTT	NOV	DIC
N	JAN	FEB	MRT	APR	MEI	JUN	JUL	AUG	SEP	OKT	NOV	DEC
O	JAN	FEB	MAR	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DES
S	ENE	FEB	MAR	ABR	MAY	JUN	JUL	AGO	SEP	OCT	NOV	DIC
U	TAM	HEL	MAA	HUH	TOU	KES	HEI	ELO	SYU	LOK	MAR	JOU
W	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC

Extended format - XSO

C	January	February	March	April	May	June
D	Januar	Februar	Marts	April	Maj	Juni
E	January	February	March	April	May	June
F	Janvier	Février	Mars	Avril	Mai	Juin
G	Januar	Februar	Maerz	April	Mai	Juni
I	Gennaio	Febbraio	Marzo	Aprile	Maggio	Giugno
N	Januari	Februari	Maart	April	Mei	Juni
O	Januar	Februar	Mars	April	Mai	Juni
S	Enero	Febrero	Marzo	Abril	Mayo	Junio
U	Tammikuu	Helmikuu	Maaliskuu	Huhtikuu	Toukokuu	Kesaekuu
W	Januari	Februari	Mars	April	Maj	Juni

C	July	August	September	October	November	December
D	Juli	August	September	Oktober	November	December
E	July	August	September	October	November	December
F	Juillet	Août	Septembre	Octobre	Novembre	Décembre
G	Juli	August	September	Oktober	November	Dezember
I	Luglio	Agosto	Settembre	Ottobre	Novembre	Dicembre
N	Juli	Augustus	September	Oktober	November	December
O	Juli	August	September	Oktober	November	Desember
S	Julio	Agosto	Septiembre	Octubre	Noviembre	Diciembre
U	Heinaekuu	Elokuu	Syyskuu	Lokakuu	Marraksuu	Joulukuu
W	Juli	Augusti	September	Oktober	November	December

Extended format - XSD

C	SUN	MON	TUE	WED	THU	FRI	SAT
D	SO	MA	TI	ON	TO	FR	LO
E	SUN	MON	TUE	WED	THU	FRI	SAT
F	DIM	LUN	MAR	MER	JEU	VEN	SAM
G	SO	MO	DI	MI	DO	FR	SA
I	DOM	LUN	MAR	MER	GIO	VEN	SAB
N	ZO	MA	DI	WO	DO	VR	ZA
O	SO	MA	TI	ON	TO	FR	LO
S	DOM	LUN	MAR	MIE	JUE	VIE	SAB
U	SU	MA	TI	KE	TO	PE	LA
W	SO	LA	TI	ON	TO	FR	LO

Extended format - XLD

C	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
D	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
E	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
F	Dimanche	Lundi	Mardi	Mercredi	Jeudi	Vendredi	Samedi
G	Sonntag	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag
I	Domenica	Lunedì	Martedì	Mercoledì	Giovedì	Venerdì	Sabato
N	Zondag	Maandag	Dinsdag	Woensdag	Donderdag	Vrijdag	Zaterdag
O	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
S	Domingo	Lunes	Martes	Miércoles	Jueves	Viernes	Sábado
U	Sunnuntai	Maanantai	Tiistai	Keski-viikko	Torstai	Perjantai	Lauantai
W	Söndag	Måndag	Tisdag	Onsdag	Torsdag	Fredag	Lördag

Currency variable

SOH	B	n	n	=	C	U	(	a	;	b	;	c	;	d	;	e	;	f	;	g	)	t1	t2	t...	t70	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	------	-----	-----

= CU Signification of variable Euro

a ANSI-Code of thousand separator as decimal figure

b ANSI-Code of comma separator as decimal figure

c Quantity of numbers after the comma as decimal figure

d Operand A Before the processing the variable Euro calculates the term

e Operand B

f Operand C $A \times B$
 C

g Rounding format

t1, t2, ... Format string, is indicated by "< >"

Example:

In case the contents of field 20 has to be converted from USD into EUR the definition of variable for the user defined format is as follows:

B01 "=CU(46;44;2;20;"1,0";"0,68861";"0,01")Result: <>Euro"

B20 1.250,44 USD

Printout: 1.250,44 USD

Result: 1.815,89 Euro *

* 1 USD = 0,68861 Euro (11.01.2010)

= SH identification of shift variable

```

Example:      The shift times are defined: 00:00 - 11:59  "Shift1"
                                           12:00 - 23:59  "Shift2"
=SH()        Printout at 10:00 o'clock:      "Shift1"
=SH()        Printout at 13:00 o'clock:      "Shift2"

```

NN = ID [01 ... 24]
HH = start hour
MM = start minute
hh = end hour
mm = end minute

NN = ID [01 ... 24]
T = max. 10 characters

User guiding

SOH	BM	[n]	=	U	G	(	c	;	t	;	m	;	ap	;	ae	;	sp	)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	----	---	----	---	----	---	----	----	------	-----	-----

= UG identification user guiding

c start position for the entry

t type of entry

0 numerical

1 alphanumeric

m mode of entry

0 do not jump over special characters

1 jump over special characters

ap alignment print

0 aligned to the right side

ae alignment entry

 
0 aligned to the right

sp prompt text for the variable, max. 24 characters
The entry has to be included in ".

Example:

Entry: =UG(1;0;0;0;0;"Enter article no")<000000>

Display:



```
Enter article no
000000
```

Memory card data

SOH	BM	[n]	=	M	D	(	FN="filename"	;	SE='x'	;	CH=x	;	SC="x"	;	SF="x"	;	RC="x"	)	ETB
-----	----	-----	---	---	---	---	---------------	---	--------	---	------	---	--------	---	--------	---	--------	---	-----

= MD identification of memory card data

FN file name of table onto memory card with CSV data

SE Separator sign (default = ';')

CH column name in the first line (0 = no, 1 = yes)

SC name and/or number of column that should be referenced

SF field name and/or field index of field onto the label, which contains the searched data

RC name and/or number of column, which contains the data to be printed

Remark: If in parameter SF a field name is indicated, this must have been defined for the appropriate field by an AC attribute statement!

Example:


AC[1]NAME="FCODE"

BM[2]=MD(FN="a:\daten.csv";SE=';';CH=1;SC="Farbcode";SF="FCODE";RC="IC-Nummer")

Field 1 Printout field Feld 2

00001 121478242

23252 784587448

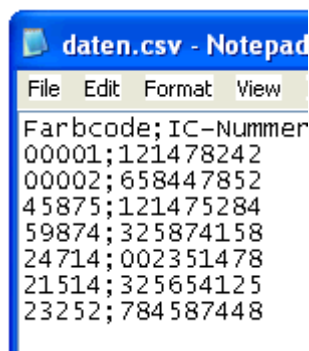

GS1-128 Parser

Note: By means of this variable type, the content of an application identifier in a GS1-128 bar code can be determined.

SOH	BM	[n]	=	A	I	(	p	;	Ai	)	ETB
-----	----	-----	---	---	---	---	---	---	----	---	-----

= AI identification of GS1-128 parser

p identification of the link element (field number)

Ai application identifier

Example: Field 1 ="00123456789012345675"

GS1-128 with AI00

=AI(1;"00")

Printout: 123456789012345675

EPC calculation (Electronic Product Code)*

SOH	BM	[n]	=	E	P	C	(	M	;	L	;	F	;	P	;	N1	;	{N2}	)	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	----	---	------	---	-----

= EPC identification of EPC calculationKennung EPC Berechnung

M coding method

L length of manufacturer number (company prefix)

F filter value

P verification of check digit

N1 identification of link element (field number)

N2 identification of link element (field number) - optional

Note: For more information, visit the following web sites: www.epcglobalinc.org or www.gs1.org

Parameter	Value range		
M	0 = Coding method SSCC96		3 = Coding method GRAI96
	1 = Coding method SGTIN96		4 = Coding method GIAI96
	2 = Coding method SGLN96		
L	6...12		
F	Coding	Filter value	Binary value
	SSCC96	All Others	000
		Undefined	001
		Logistical / Shipping Unit	010
	SGTIN96	All Others	000
		Retail Consumer Trade Item	001
		Standard Trade Item Grouping	010
		Single Shipping / Consumer Trade Item	011
	SGLN	All Others	000
		Physical Location	001
	GRAI	All Others	000
	GIAI	All Others	000
P	0 = no verification; 1 = verification of check digit		
N1	any		
N2	any		

Example 1: Field 1 ="00123456789012345675"

Field 2 =AI(1;"00")

Field 3 =EPC(0;12;0;1;2)

GS1-128 with AI00

Printout: 123456789012345675

Printout: 3100DA7557D32C38E7000000

The EPC is calculated with the content of Field 2. The coding method SSCC96 is used. In Field 2 a valid NVE must be represented (18-digit, correct check digit).

Example 2: Field 1 ="4141234567890128254123"

Field 2 =AI(1;"414")

Field 3 =AI(1;"254")

Field 4 =EPC(2;10;0;0;2;3)

GS1-128 with AI00, AI254

Printout: 1234567890128

Printout: 123

Printout: 3208499602D218000000007B

The EPC is calculated with the content of Field 2 and Field 3. The coding method SGLN96 is used. In Field 2 a valid ILN must be represented (13-digit). In the example, Field 3 contains an optional serial number. No verification of check digit of ILN (8) is effected.

* only when using option RFID

Check digit

SOH	BM	[n]	=	C	D	(	d	;	s	;	l	;	t	;	w	;	m	;	r	;	o	)	t1	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	------	-----	-----

= CD Identification of check digit

d Data for check digit calculation (field number of constant text)
Constant text is enclosed in "".

s Start position within data

1 ...n Start calculation at digit x

l Number of digits. If the parameter is not indicated, the remaining data (from start position) is used for the check digit calculation.

t Check digit type

0 Modulo 10 (weighting 3)

1 Modulo 11

2 Modulo 43

3 Modulo 47 (weighting 15)

4 Modulo 47 (weighting 20)

5 Modulo 103

6 Benutzerdefiniert

Optional parameters for customized check digit

w Weighting.

Constant text enclosed in "" - contains the individual weighting values or an interval.

Individual values: "x₁,x₂"

Interval: "x₁...x₂"

m Modulo

r Add result to

o Print only one digit

0 No

1 Yes

Example: Entry: =CD("123456789012";0;0;0)
Printout: 8

Entry: =CD("1234567890";0;0;6;"1,3";10;10;1)
Printout: 5

Substring

SOH	BM	[n]	=	S	S	(	d	;	s	;	l	)	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	-----

= SS Identification of substring

d Data used for substring extraction (field number or field name or constant text.
Constant text is enclosed in "").

s Start position within data. If this parameter is omitted, the substring extraction starts with
the 1st character of the data string.

1 n Start at digit x

l Number of digits. If this parameter is omitted, all characters from the start position to the
end of the data string are returned.

1 ...n At the start position x digits

Example: Entry: =SS("1234567890";4;3)

Printout: 456

Field "ARTIKELNR" has the contents "370012330295"

Entry: =SS(ARTIKELNR;1;4)

Printout: 3700

PARAMETER SETS

Layout parameters

Set layout length in 1/100 mm

SOH	F	C	C	L	-	-	r	N	N	N	N	N	N	N	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: value of layout length in 1/100 mm, 7 digit ASCII number

Enquire layout length in 1/100 mm

SOH	F	C	C	L	-	-	w	N	N	N	N	N	N	N	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set layout width in 1/100 mm

SOH	F	C	C	O	-	-	r	N	N	N	N	N	N	N	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: indication of layout width in 1/100 mm, 7 digit ASCII number

Enquire layout width in 1/100 mm

SOH	F	C	C	O	-	-	w	P	P	P	P	P	P	P	P	P	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set X offset

SOH	F	C	C	E	-	-	r	V	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V: pre-sign of offset (+ or -)

NNN: offset value, 3 digit ASCII number in 1/10 mm

Enquire X offset

SOH	F	C	C	E	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set layouts per cycle

SOH	F	C	A	D	I	-	r	N	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NN: number of layouts per cycle (01 ... 25)

Enquire layouts per cycle

SOH	F	C	A	D	I	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NN: current layouts per cycle

Set layout alignment

SOH	F	C	C	J	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: left

N = 1: centre

N = 2: right

Enquire layout alignment

SOH	F	C	C	J	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set contrast

SOH	F	C	A	B	-	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Indication of contrast in % (010 ... 200)

It is necessary to transmit a 3 digit ASCII number

Enquire contrast

SOH	F	C	A	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set material

SOH	F	C	D	N	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: indication of material

Type 1: paper

Type 2: foil

Enquire material

SOH	F	C	D	N	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set number of columns

SOH	F	C	C	H	A	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = number of columns (1 ... 9)

Enquire number of columns

SOH	F	C	C	H	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set column width

SOH	F	C	C	H	B	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: indication of column width in 1/10 mm (0 ... 999)

Enquire column width

SOH	F	C	C	H	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set line number of layout (n digits)

SOH	F	B	A	A	-	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N: Indication of line number in ASCII (1, 10, 100, ...)

Enquire line number of layout

SOH	F	B	A	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set flip layout

SOH	F	C	D	O	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – flip layout Off

N = 1 – flip layout On

Enquire flip layout

SOH	F	C	D	O	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set layout rotation

SOH	F	C	D	N	-	-	r	X	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X = 0 – rotate layout Off

X = 1 – rotate layout On

Enquire layout rotation

SOH	F	C	D	N	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	X	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set operating mode flip/rotate label

SOH	F	C	D	S	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – flip/rotate label at the centre point of label

N = 1 – flip/rotate label at the centre point of printhead

Enquire operating mode flip/rotate label

SOH	F	C	D	S	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Device parameters

Set print position

SOH	F	C	A	D	K	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: print position in 1/10 mm (0120 ... 0900)

Enquire print position

SOH	F	C	A	D	K	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: print position in 1/10 mm

Set operating mode

SOH	F	C	A	D	O	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 - intermittent mode

N = 1 - continuous mode

After changing the operating mode, the module is re-started automatically.

Enquire operating mode

SOH	F	C	A	D	O	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transfer ribbon control On/Off

SOH	F	C	D	B	-	-	r	N	M	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 1 – transfer ribbon control Off

N = 0 – transfer ribbon control On

Enquire transfer ribbon control On/Off

SOH	F	C	D	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	M	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set field handling

SOH	F	C	D	K	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – field handling Off

N = 1 – graphic received

N = 2 – delete graphic

N = 3 – restore graphic

Enquire field handling

SOH	F	C	D	K	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set print module language

SOH	F	C	D	I	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – German
 N = 1 – English
 N = 2 – French
 N = 3 – Spanish
 N = 4 – Finnish
 N = 5 – Czech
 N = 6 – Portuguese
 N = 7 – Netherlands
 N = 8 – Italian
 N = 9 – Danish
 N = 10 – Polish

Enquire print module language

SOH	F	C	D	I	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set external print module parameter

SOH	F	C	C	P	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = only parameter settings by interface for label length, gap length and label width are taken into consideration.
 1 = parameter settings by interface are processed
 2 = parameter settings by interface are not taken into consideration

Enquire external print module parameter

SOH	F	C	C	P	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Codepage

SOH	F	C	C	N	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 - ANSI
 N = 1 - Codepage 437 (english)
 N = 2 - Codepage 850
 N = 3 - GEM German
 N = 4 - GEM English
 N = 5 - GEM French
 N = 6 - GEM Swedish
 N = 7 - GEM Danish
 N = 8 - Codepage 437 (Greek)
 N = 9 - Codepage 852 (Eastern European)
 N = 10 - Codepage 857 (Turkish)

Enquire Codepage

SOH	F	C	C	N	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set user guiding

SOH	F	C	D	U	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 - Off, no entries are possible but pre-set values are printed

N = 1 - On, the user has to enter a value for each variable or to confirm the pre-set values by pressing the enter key. This default value is set each time the print module is switched on

N = 2 - Auto, the entries for a layout are repeated after each print and the last entered values are the new pre-set values

Enquire user guiding

SOH	F	C	D	U	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set keyboard layout

SOH	F	C	C	K	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – German keyboard

N = 1 – English keyboard

N = 2 – French keyboard

N = 3 – Greek keyboard

N = 4 – Spanish keyboard

N = 5 – Swedish keyboard

N = 6 – Czech keyboard

Enquire keyboard layout

SOH	F	C	C	K	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sound level of key click (buzzer)

SOH	F	C	C	B	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – Buzzer Off

N = '1-7' – Sound level of key click

Enquire sound level of key click (buzzer)

SOH	F	C	C	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set hotstart On/Off

SOH	F	C	D	W	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – hotstart Off

N = '1' – hotstart On

Enquire hotstart On/Off

SOH	F	C	D	W	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set default layout On/Off

SOH	F	C	M	K	E	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – Off: Print start without layout definition signals error.

N = '1' – On: Default layout is printed without layout definition.

Default: Off

Enquire default layout On/Off

SOH	F	C	M	K	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set layout change confirmation

SOH	F	C	S	D	F	C	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – Confirmation Off

N = '1' – Confirmation On

Enquire layout change confirmation

SOH	F	C	S	D	F	C	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set 'print after measuring'

SOH	F	C	S	D	F	D	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – Off

N = '1' – On

Enquire 'print after measuring'

SOH	F	C	S	D	F	D	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Interface

You can set the parameter of the serial interface by the following commands but you have to note that after sending one of the commands also the host computer changes the corresponding parameter of its interface to allow further communications Host computer – print module.

For all interface commands the interface is fixed with x. Allowed are the following values:

x = 1 $\Rightarrow$ COM 1

x = 2 $\Rightarrow$ COM 2

In all other cases automatically the first serial interface is addressed.

In the answers the addressed interface is also returned.

Set all interface parameter

SOH	F	C	F	F	x	-	r	m	;	b	;	p	;	d	;	s	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

m = mode (0 = Off, 1 = On, 2 = On, without error message)

b = Baudrate (2400, 4800, 9600, 19200, 38400, 57600, 115200)

p = parity (n = no parity, e = even parity, o = odd parity)

d = number of data bits (7, 8)

s = number of stop bits (1, 2)

Enquire all interface parameter

SOH	F	C	F	F	x	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	x	;	m	;	b	;	p	;	d	;	s	;	p	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Example: activate interface COM1 and set 9600 Baud, no parity, 8 data bits, 2 stop bits
[SOH]FCFF1-r1;9600;n;8;2[ETB]

Interface protocol

There are two different interface protocols available. Usually SOH = 01_{Hex} and ETB = 17_{Hex}. However there are host computers (e.g. AS/400), which cannot work with these characters. Therefore you can switch SOH = 5E_{Hex} and ETB = 5F_{Hex}. The host computer has to change the corresponding parameter as well.

Set SOH and ETB

SOH	F	C	G	C	-	-	r	N	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 - SOH = 01_{Hex}, ETB = 17_{Hex}

N = 1 - SOH = 5E_{Hex}, ETB = 5F_{Hex}

Enquire SOH and ETB

SOH	F	C	G	C	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Data memory

Set data memory

SOH	F	C	G	D	-	-	r	M	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M = 0 Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M = 1 Standard, after starting a print order no data of the receiving buffer are processed but it is possible to write more data in the receiving buffer until it is full.

M = 2 Extended, after starting a print order it is possible to write more data in the receiving buffer. These data is processed during the print and the next layout is prepared.

Enquire data memory

SOH	F	C	G	D	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set reaction to unknown interrogative set

SOH	F	C	G	E	A	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N – Indication of value between 0 and 3

Enquire reaction to unknown interrogative set

SOH	F	C	G	E	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Network

General

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

All network parameter sets start in the third column with a 'L'. Column 4 shows the identification for the corresponding network parameter. Column 5 can show another sub-identification.

Because of the fact that the argument size is limited to 8 characters, the IP addresses (IP address, network mask, gateway address) which consist of 32 bit are transmitted in HEX presentation. For all data which is transmitted in HEX presentation (also the MAC address) it is allowed to use capital as well as small letters.

In contrary to the parameter settings of the other interfaces, the settings of the following sets were saved immediately onto Flash, i.e. it is not necessary to save the currently set configuration before switching off the printer so the modifications are still available after switching on.

So that the made modifications become active, also without printer Reset it is necessary to transmit a corresponding Z set which effects a Reset of the network devices.

Set IP address (e.g. 192.168.0.21)

SOH	F	C	L	A	-	-	r	C	0	A	8	0	0	1	5	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire IP address

SOH	F	C	L	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	C	0	A	8	0	0	1	5	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set netmask (e.g. 255.255.255.0)

SOH	F	C	L	B	-	-	r	F	F	F	F	F	F	0	0	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire netmask

SOH	F	C	L	B	-	-	w	F	F	F	F	F	F	0	0	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	F	F	F	F	F	F	0	0	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Gateway address (e.g. 192.168.0.1)

SOH	F	C	L	C	-	-	r	C	0	A	8	0	0	0	1	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire Gateway address

SOH	F	C	L	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	C	0	A	8	0	0	0	1	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transmission mode (e.g. auto recognition)

SOH	F	C	L	D	-	-	r	0	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

0 = auto recognition

1 = 10 MBit/s half duplex

2 = 10 MBit/s full duplex

3 = 100 MBit/s half duplex

4 = 100 MBit/s full duplex

Enquire transmission mode

SOH	F	C	L	D	-	-	w	0	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set support DHCP

SOH	F	C	L	E	-	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N: 0 = Off

1 = On

Enquire support DHCP

SOH	F	C	L	E	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Assign printer name

SOH	F	C	L	F	-	-	r	N	N	N	N	N	N	N	N	N	N	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: printer name is allowed to exist of max. 11 characters (A...Z, a...z, 0...9, -,)

Enquire printer name

SOH	F	C	L	F	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	;	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set MAC address (e.g. 00-07-4A-43-19-08)

SOH	F	C	L	M	B	-	r	0	0	0	7	4	A	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	A	-	r	4	3	1	9	0	8	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	C	-	r	0	0	0	7	4	A	4	3	1	9	0	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

A MAC address has a width of 48 bit and is normally indicated in hexadecimal.

With the B record our identifier of the MAC address can be changed. All our machines start with 00-07-4A as default. This corresponds to the Memory-Pool which the MAC address committee assigned to us to guarantee that the MAC address is world-wide manufacturer-spreading unique.

With the A record any address can be set in our pool.

With the C record any address in our pool and the identification of the MAC address can be set/changed at the same time.

Enquire MAC address

SOH	F	C	L	M	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	F	C	L	M	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	0	0	7	4	A	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	A	4	3	1	9	0	8	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

SOH	A	0	0	0	7	4	A	4	3	1	9	0	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NTP Server

NTP (Network Time Protocol) is a standardized Internet protocol permitting the synchronization of real-time clocks of network participants. The printer connects itself with a time server and align every 60 minutes its internal real-time clock with that of the time server in order to correct possible differences.

The address of server (IP address) can be freely configured in the printer. The communication is effected by UDP and the fixed set port 123. The service in the printer is deactivated by transmitting the server address 0.0.0.0.

The time servers work together with the coordinated world time (UTC) and therefore an additional time shift is needed compared to the reference time. For Germany it is e.g. +1 hour.

The current state of the connexion can be queried with a status set.

Set NTP Server IP

SOH	F	C	L	N	I	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N = X.X.X.X (X = 0 ... 255)

Enquire NTP Server IP

SOH	F	C	L	N	I	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

0.0.0.0 deactivates the NTP service

Readout NTP status

SOH	F	C	L	N	S	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = OK

N: 2 = Error

Set time zone (hour offset)

SOH	F	C	L	N	Z	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N: -12, 12

Enquire time zone (hour offset)

SOH	F	C	L	N	Z	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Reset network device

SOH	F	C	L	Z	-	-	r	-----	ETB
-----	---	---	---	---	---	---	---	-------	-----

For this set is no enquiry possible. This set causes that modifications made by the transfer of the previous sets become effective.

Sensors**Enquire condition of compressed air**

SOH	F	C	M	B	H	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – no or not enough compressed air

N = 1 – compressed air OK

Enquire condition of cover*

SOH	F	C	M	B	I	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – cover is open

N = 1 – cover is closed

Service functions

Set Online / Offline

SOH	F	C	M	K	C	-	r	M	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

M = 0 – Online/Offline Off

M = 1 – Online/Offline On

Enquire Online/Offline

SOH	F	C	M	K	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	M	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

After changing by interface the display is automatically new initialised (by activated online/offline changing to online indication).

Set reprint action

SOH	F	C	M	K	D	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire reprint action

SOH	F	C	M	K	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: Reprint complete

N = 1: Reprint is blank

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Close printhead

SOH	F	C	M	B	C	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 1 – printhead down (closed)

Enquire condition of printhead photocell

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: printhead is open

N = 1: printhead is closed

Open printhead

SOH	F	C	M	B	D	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 1 – printhead up (open)

Enquire condition of printhead

SOH	F	C	M	B	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answet

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: printhead is open

N = 1: printhead is down

Enquire printhead temperature

SOH	F	C	M	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value of printhead temperature, 3 digit ASCII number in 1/100 degree

Set transfer ribbon length

SOH	F	C	D	Q	A	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: value of transfer ribbon length in m
Possible entries: 300, 450, 600, 900 or 1000

Enquire transfer ribbon length

SOH	F	C	D	Q	A	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transfer ribbon prior warning

SOH	F	C	M	L	A	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: Off

N = 1: On

Enquire transfer ribbon prior warning

SOH	F	C	M	L	A	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set diameter for transfer ribbon prior warning

SOH	F	C	M	L	B	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = 030 ... 090 diameter in mm

Enquire diameter for transfer ribbon prior warning

SOH	F	C	M	L	B	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set printhead resistance

SOH	F	C	M	G	-	-	r	N	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN = Indication of resistance value in Ohm.

Enquire printhead resistance

SOH	F	C	M	G	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set custom logo

SOH	F	C	N	R	A	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off

N: 1 = On

Enquire custom logo

SOH	F	C	N	R	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Mileage (kilometre) counter

It is only possible to enquire the kilometre values of print module and printhead by interface and not to set them to 0.

Enquire print module's mileage

SOH	F	C	H	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire printhead's mileage

SOH	F	C	H	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	N	N	N	N	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNNNNN = Indication of mileage of print module res. printhead in meters
(e.g. '00000123' = 123 m)

Date & Time

Set date

SOH	F	C	I	A	-	-	r	D	D	M	O	Y	Y	D	W	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

DD = day of month

MO = month

YY = year

DW = day of week ('00' = Sunday)

Enquire date

SOH	F	C	I	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	D	D	M	O	Y	Y	D	W	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set time

SOH	F	C	I	B	-	-	r	H	H	M	I	S	S	A	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

HH = hours

MI = minutes

SS = seconds

AM = mode ('am' = 12 hours mode AM, 'pm' = 12 hours mode PM, '—' = 24 hours mode)

Enquire time

SOH	F	C	I	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	H	H	M	I	S	S	A	M	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Automatically adjust clock for daylight saving changes

Because of the fact that there is no world-wide regulation if and when a changing of time between summer and wintertime (normal time) in the individual countries takes place, we distinguish between the following four formats for the definition for beginning and end of summertime.

F 0:	european format start of summertime = last Sunday in March end of summertime = last Sunday in October W: week (1 = first, ..., 5 = last) WD: day of week (0 = Sunday, ..., 6 = Saturday) MM: month (01 = January, ..., 12 = December)
F 1:	fix date with indication of year DD: day MM: month (01 = January, ..., 12 = December) YY: year
F 2:	fix date without indication of year DD: day MM: month (01 = January, ..., 12 = December)
F 3:	week day after day in month WD: day of week (0 = Sunday, ..., 6 = Saturday) DD: after day (only the first day is taken into consideration) MM: month (01 = January, ..., 12 = December)

Set automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire automatically adjust clock for daylight saving changes

SOH	F	C	I	G	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – Automatically adjust clock for daylight saving changes Off

N = 1 – Automatically adjust clock for daylight saving changes On

Set beginning of summertimeF 0:

SOH	F	C	I	H	-	-	r	F	W	;	W	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 1:

SOH	F	C	I	H	-	-	r	F	D	D	;	M	M	;	Y	Y	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 2:

SOH	F	C	I	H	-	-	r	F	D	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 3:

SOH	F	C	I	H	-	-	r	F	W	D	;	D	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire beginning of summertime

SOH	F	C	I	H	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	F	W	W	D	M	M	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

The answer depends on each set format.

Set end of summertimeF 0:

SOH	F	C	I	I	-	-	r	F	W	;	W	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 1:

SOH	F	C	I	I	-	-	r	F	D	D	;	M	M	;	Y	Y	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 2:

SOH	F	C	I	I	-	-	r	F	D	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

F 3:

SOH	F	C	I	I	-	-	r	F	W	D	;	D	D	;	M	M	;	H	H	;	M	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire end of summertime

SOH	F	C	I	I	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	F	W	W	D	M	M	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

The answer depends on each set format.

Set time shifting

SOH	F	C	I	J	-	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = minutes

Enquire time shifting

SOH	F	C	I	J	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	-----

Password

Set password

SOH	F	C	K	A	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Indication of password, 4 digit ASCII number in mm (0000 ... 9999)

Enquire password

SOH	F	C	K	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set function group

SOH	F	C	K	B	-	-	r	A	B	C	D	E	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

A - Function menu

0 = free

1 = blocked

B - Memory card

0 = free

1 = only reading access

2 = access blocked

C - Entry

0 = free

1 = only masks blocked

2 = no entry possible

D - Print module guiding

0 = free

1 = entry of number of pieces possible

2 = no manual print release

E – Favorites menu

0 = free

1 = blocked

Enquire function group

SOH	F	C	K	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	a	b	c	d	e	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password active

SOH	F	C	K	C	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – inactive (N in display)

N = 1 – active (J in display)

Enquire password active

SOH	F	C	K	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password function menu

SOH	F	C	K	D	A	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire password function menu

SOH	F	C	K	D	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password favorites menu

SOH	F	C	K	D	B	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire password favorites menu

SOH	F	C	K	D	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password memory card

SOH	F	C	K	D	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire password memory card

SOH	F	C	K	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password printing manually

SOH	F	C	K	D	D	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire printing manually

SOH	F	C	K	D	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Compact Flash Card

Save a layout onto Compact Flash card

SOH	F	M	A	O	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

O: In case a layout with the entered name exists already then the layout is overwritten without an enquiry. If you enter another value as 0, an enquiry appears demanding if you want to overwrite.

P: File name of the layout which is to save. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Load a file from Compact Flash card

SOH	F	M	B	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: File name of the layout which is to load. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Delete a layout from Compact Flash card

SOH	F	M	C	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: File name of the layout which is to delete. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Format Compact Flash card

SOH	F	M	D	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is formatted.

Readout contents of CF card

SOH	F	M	G	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is read out.

Answer

SOH	File name/directory name	ETB
-----	--------------------------	-----

A list of all file entries is indicated, each entry is included in (SOH) and (ETB).

Readout free memory space

SOH	F	M	H	-	-	-	w	X	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X = Drive [A,B] (optional)

Answer

SOH	A	X	n	n	n	n	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X = Drive [A,B]

n = Memory space in KB

Create directory

SOH	F	M	I	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = Drive and path indication

Delete directory

SOH	F	M	J	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = Drive and path indication

**NOTICE!**

The current directory cannot be deleted.

Delete directory path

SOH	F	M	J	A	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

Deletes the indicated directory including all containing sub-directories and files.

Change standard directory

SOH	F	M	K	-	-	-	r	P	ETB
-----	---	---	---	---	---	---	---	---	-----

P = Drive and path indication

Readout current directory

SOH	F	M	K	-	-	-	w	ETB
-----	---	---	---	---	---	---	---	-----

Answer

SOH	A	P	ETB
-----	---	---	-----

P = Current directory

Transfer file

SOH	F	M	L	-	-	-	w	F	ETB
-----	---	---	---	---	---	---	---	---	-----

F: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH	A	F	*	S	ETB	Data
-----	---	---	---	---	-----	------

F = File name

S = File size in Byte

Data = Binary data

Readout size of Compact Flash card

SOH	F	M	P	O	-	-	w	X	ETB
-----	---	---	---	---	---	---	---	---	-----

O: In case O is indicated, no error messages are displayed at the printing system e.g. if no card is inserted.

X: Drive [A,B] (optional)

Answer

SOH	A	D	n	n	n	n	-	-	-	X	ETB
-----	---	---	---	---	---	---	---	---	---	---	-----

X = Drive [A,B]

n = Memory in KB

D = enquired drive

Drive status

SOH	F	M	S	-	-	-	w	X	ETB
-----	---	---	---	---	---	---	---	---	-----

X - Drive [A,B]

Answer

SOH	A	X	S	ETB
-----	---	---	---	-----

X = Drive [A,B]

S = Status

0: no storage medium

1: not formatted

2: ready

3: not determinable

Printing

Start /Stop command

In addition to the actual start/stop command, the print order can also be interrupted via the parameter/remote record.

SOH	F	D	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = '0' – interrupt printing

N = '1' – continue printing

N = '2' – cancel print order, when it is already stopped

Reset error

Reset error

SOH	F	C	M	H	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Indication of current error ID or '9999"

Enquire error

SOH	F	C	M	H	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	0	0	0	0	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Readout error ID and error text

SOH	F	C	M	H	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	;	error text	;	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	------------	---	---	---	---	---	---	---	---	---	-----

Item number of print order

By means of this command the Host computer can enquire following item numbers:

Complete numbe of current print order

SOH	F	B	B	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of layouts which are still to print

SOH	F	B	B	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of layouts which are already printed

SOH	F	B	B	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

At the end of one of these commands the print module returns the corresponding number as ASCII value

(4 res. 5 digits) in the answer set.

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

With this set it is also possible to transmit the item number of print order and the interval (in cutter mode) to the print module.

Item number of print order

SOH	F	B	B	A	-	-	r	N	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN: 5 digits item number of order

Start printing

SOH	F	B	C	-	-	-	r	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

This command starts the print order which is actually set in the print module. The current parameter such as print mode, speed, initialisation etc. are used.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)

S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

SOH	F	B	E	-	-	-	r	n	n	n	n	n	n	n	n	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

With this command the printjob identifier which appears in "printing" res. "stopped" window is assigned to a print order. In case only blanks are transmitted, then the printjob identifier is deleted and the display shows "noname".

Initialisation of page handling

SOH	F	B	F	-	-	-	r	ETB
-----	---	---	---	---	---	---	---	-----

Selection of current page

SOH	F	B	G	-	-	-	r	N	ETB
-----	---	---	---	---	---	---	---	---	-----

N: current page number (1 ... 10)

Select order of pages which are to print

SOH	F	B	H	-	-	-	r	P ₁	P ₂	P ₃	ETB
-----	---	---	---	---	---	---	---	----------------	----------------	----------------	-----

P₁; P₂;...= pages which are to print

Generation of page without print start

SOH	F	B	I	-	-	-	r	S	ETB
-----	---	---	---	---	---	---	---	---	-----

With this command the corresponding page is only generated, i.e. no print start signal is sent.

S = x: sorted (printed are e.g. pages 1-5, then again 1-5 etc.)

S = 1: unsorted (printed are x times page 1, then x times page 2, etc.)

Feed**Release a layout feed**

SOH	F	E	-	-	-	-	r	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Ribbon feed**Parameter set to release a ribbon feed**

SOH	F	E	B	-	-	-	r	d	;	v	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Direct Coder: Ribbon feed with indication of distance and speed

d: Distance in mm

v: Speed in mm/s

Test print**Release a test print**

SOH	F	F	-	-	-	-	r	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Status print**Parameter set in order to print status report**

SOH	F	C	M	Q	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: Print module settings

N = 1: Bar codes

N = 2: Fonts

Cancel print orders

Cancel all active print orders

SOH	F	G	A	-	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = -: Cancel active print orders and delete all label data

N = 1: Cancel active print orders and receive label data

With the execution of this command:

- possible upcoming errors are confirmed
- possible upcoming customised entries are cancelled

Emulation

Set emulation

SOH	F	Z	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – CVPL (Carl Valentin Programming Language)

N = 1 – ZPL II® (Zebra Programming Language)

Enquire emulation

SOH	F	Z	-	-	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

PARAMETER SETS FOR CONTINUOUS MODE

Machine parameters

Set operating mode

SOH	F	C	D	C	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 1: external I/O static

N = 3: external I/O static continuous

N = 5: external I/O dynamic

N = 6: external I/O dynamic continuous

Enquire operating mode

SOH	F	C	D	C	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set print offset

SOH	F	C	A	D	L	A	r	N	N	N	N	N	-	-	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: print offset value

M: unit: 0 = print offset in 1/10 mm (00000 ... 99999)

1 = print offset in 1/10 ms (00000 ... 99999)

Enquire print offset

SOH	F	C	A	D	L	A	w	P	P	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	-	-	M	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: print offset value

M: unit: 0 = print offset in 1/10 mm

1 = print offset in 1/10 ms

Set material speed at print start signal

SOH	F	C	A	D	U	D	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0: Off; 1: On

Enquire material speed at print start signal

SOH	F	C	A	D	U	D	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0: Off; 1: On

Set encoder resolution

SOH	F	C	A	D	U	A	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: value of encoder resolution (0100 ... 9999)

Enquire encoder resolution

SOH	F	C	A	D	U	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set material feed per encoder turn

SOH	F	C	A	D	U	B	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: value of material feed in mm (0010 ... 9999)

Enquire material feed per encoder turn

SOH	F	C	A	D	U	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Enquire material speed

SOH	F	C	A	D	U	C	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

By means of this command set it is possible to enquire material speed in mm/s. Please note that it is only possible to enquire the value and not to set.

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Ribbon save

Set ribbon save mode

SOH	F	C	D	R	A	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0: Off

N = 1: standard

N = 2: stage 2

N = 3: manually

Enquire ribbon save mode

SOH	F	C	D	R	A	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set synchronisation of transfer ribbon and printhead

SOH	F	C	D	R	B	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Value of synchronization in % (000 ... 100)

Enquire synchronization of transfer ribbon and printhead

SOH	F	C	D	R	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set time for printhead move down

SOH	F	C	D	R	C	A	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: value of time for printhead move down in ms (0000 ... 9999)

Enquire time for printhead move down

SOH	F	C	D	R	C	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set feedback distance

SOH	F	C	D	R	F	A	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: distance in mm

Enquire feedback distance

SOH	F	C	D	R	F	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set feedback speed

SOH	F	C	D	R	F	B	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: feedback speed in mm/s

Enquire feedback speed

SOH	F	C	D	R	F	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set power of transfer ribbon motor

SOH	F	C	D	R	D	A	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value of transfer ribbon motor power in % (010 ... 200)

Enquire power of transfer ribbon motor

SOH	F	C	D	R	D	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set brake power for acceleration and braking

SOH	F	C	D	R	E	A	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value of brake power for acceleration and braking in % (000 ... 200)

Enquire brake power for acceleration and braking

SOH	F	C	D	R	E	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set brake power during printing

SOH	F	C	D	R	E	B	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value of brake power during printing in % (000 ... 200)

Enquire brake power during printing

SOH	F	C	D	R	E	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

I/O parameters

Set IN signal level

SOH	F	C	M	D	C	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (inputs 1-8): 2 – increased and decreased
 1 – increased
 0 – decreased
 s – I/O signal by interface
 x – I/O signal blocked

Enquire signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (outputs 1-8): 1 – signal level 1
 0 – signal level 0
 s – I/O signal by interface
 x – I/O signal blocked

Enquire OUT signal level

SOH	F	C	M	D	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set software input

SOH	F	C	M	D	F	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (inputs 1-8): 1 – set software input
 0 – delete software input
 - – not considering software input
 p – pulse, execute software input once

Example: Enter a start impulse = FCMDf-rP-----

Enquire current status of software inputs

SOH	F	C	M	D	F	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set software output

SOH	F	C	M	D	G	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (outputs 1-8): 1 – set software output
 0 – delete software output

Set start signal delay

SOH	F	C	S	D	D	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: start signal delay in 1/100 s (0 ... 999)

Enquire start signal delay

SOH	F	C	S	D	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cancel continuous print (operating mode)

SOH	F	C	S	D	F	A	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off
 1 = On

Enquire cancel continuous print (operating mode)

SOH	F	C	S	D	F	A	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set output signal 'print ready' active

SOH	F	C	S	D	J	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off; at print start the 'print ready' signal is inactive.
 1 = On; at print start the 'print ready' signal remains active.

Enquire output signal 'print ready' active

SOH	F	C	S	D	J	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current setting (see above)

PARAMETER SETS FOR INTERMITTENT MODE

Machine parameters

Set operating mode

SOH	F	C	A	D	H	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 1 – process single items

N = 2 – continuous

Enquire operating mode

SOH	F	C	A	D	H	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: current operating mode

Set print speed

SOH	F	C	A	A	-	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Indication of print speed in mm/s

It is necessary to transmit a 3 digit ASCII number

Enquire speed

SOH	F	C	A	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set back speed

SOH	F	C	A	D	G	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: indication of back speed in mm/s (050 ... 400)

Enquire back speed

SOH	F	C	A	D	G	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: current back speed

Set print offset

SOH	F	C	A	D	L	A	r	N	N	N	N	N	-	-	M	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: print offset in 1/10 mm (0000 ... 9999)

Enquire print offset

SOH	F	C	A	D	L	A	w	P	P	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	N	-	-	M	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: current print offset

Set ribbon save On/Off

SOH	F	C	D	J	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – Off

N = 1 – On

Enquire ribbon save On/Off

SOH	F	C	D	J	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

I/O parameters**Set IN signal level**

SOH	F	C	M	D	C	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (inputs 1-8): 2 – increased and decreased
 1 – increased
 0 – decreased
 s – I/O signal by interface
 x – I/O signal blocked

Enquire signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (outputs 1-8): 1 – signal level 1
 0 – signal level 0
 s – I/O signal by interface
 x – I/O signal blocked

Enquire OUT signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set I/O protocol port

SOH	F	C	M	D	E	-	r	T	C	P	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Port: Off
 COM1
 COM2
 TCP

Enquire I/O protocol port

SOH	F	C	M	D	E	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set software input

SOH	F	C	M	D	F	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (inputs 1-8): 1 – set software input
 0 – delete software input
 - – not considering software input
 p – pulse, execute software input once

Example: Enter a start impulse = FCMDf-rP-----

Enquire current status of software inputs

SOH	F	C	M	D	F	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	0	1	2	3	4	5	6	7	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set software output

SOH	F	C	M	D	G	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

1-8 (outputs 1-8): 1 – set software output
 0 – delete software output

Set debounce start signal

SOH	F	C	S	D	C	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: debounce time start signal in ms (0 ... 100)

Enquire debounce start signal

SOH	F	C	S	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set start signal delay

SOH	F	C	S	D	D	-	r	N	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: start signal delay in 1/100 s (0 ... 999)

Enquire start signal delay

SOH	F	C	S	D	D	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set cancel continuous print (operating mode)

SOH	F	C	S	D	F	A	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off
1 = On

Enquire cancel continuous print (operating mode)

SOH	F	C	S	D	F	A	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set output signal 'print ready' active

SOH	F	C	S	D	J	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Off; at print start the 'print ready' signal is inactive.
1 = On; at print start the 'print ready' signal remains active.

Enquire output signal 'print ready' active

SOH	F	C	S	D	J	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	-	p	p	p	p	p	p	P	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = current setting (see above)

Save configuration permanent

In case you want to save the described settings permanent into the printer, then you have to transmit the following command to the printer.

SOH	F	X	-	-	-	-	r	N	-	-	-	-	-	-	-	ETB
N: 0 = save current parameter																
1 = set all parameters to default values																
Then the print module performs a restart																

Readout configuration

SOH	F	X	-	-	-	-	w	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

The printer sends as answer all current settings as parameter sets.

Status enquiry

Host computer can receive information about the printer by the serial interface.
The status enquiry has the following data format:

SOH	S	ETB	S = ASCII's
-----	---	-----	-------------

Status return information:

After receiving the status enquiry the printer sends the corresponding status return information.

Data format of status enquiry

SOH	1. Byte								2. Byte								5. – 1. digit	ETB
	8	7	6	5	4	3	2	1	8	7	6	5	4	3	2	1		

1. Byte	=	1. status byte
		8. Bit = free 7. Bit = always set 6. Bit = free 5. Bit = 1 – active print order 0 – no. of pieces = 0 (no print order) 4. Bit = 1 – stop key activated 0 – stop key not activated 3. Bit = cutter error 0 – no error; 1 – error 2. Bit = labels 0 – no error; 1 – error 1. Bit = transfer ribbon 0 – no error; 1 – error
2. Byte	=	2. status byte
		8. Bit = free 7. Bit = free 6. Bit = free 5. Bit = free 4. Bit = free 3. Bit = memory card 2. Bit = mask set 1. Bit = printhead temperature
5.-1. position	=	number of pieces with 5 digits as ASCII characters min. '00000' / max. '65535'

AUTOSTATUS

The print modules are equipped with an auto status function, i.e. in certain operating modes the print module actively sends the corresponding status. This can be enquired by the serial interface.

To activate the auto status, the host computer has to send the following command to the print module:

SOH	G	1. Byte	2. Byte	ETB
-----	---	---------	---------	-----

Each of the below indicated message which is observed and send by the print module has to be transmitted with a set Bit (see table below 1. Byte and 2. Byte) to the print module via the auto state function. The print module sends after each performed condition the corresponding message (answer) to the host computer.

The following messages are provided:

- 1 Start of generation
- 2 End of generation
The print module sends this state in case data for a complete layout was generated. The test print was not taken into consideration.
For counters/date variables the print module sends for each layout a status cycle (start, end).
- 3 Start of printing
- 4 End of printing
The start of the print is send in case the generated data is send.
The end of the print is send in case the print of the layout is finished and the motor has stopped.
- 5 Start of cutting
- 6 End of cutting
This status describes the cutting. It can be checked for timeout and the end of the cut movement → error.
- 7 Start of feeding
- 8 End of feeding
This status is send in case an additional feeding (dispenser, cutter, tear off) is released.
- 9 Start of a print order
- 10 End of print order
This status signalises the start and end of a complete print order (1...99999 layouts). This status is active in all operating modes.
- 11 Error
This status message is send in case an error occurs.
- 12 Printing stopped
This message is send if the printing is stopped.
- 13 Printing resumed
This message is send if the printing is resumed.

The print module sends the auto status in the following format to the host computer:

SOH	G	1. Byte	2. Byte	ETB
-----	---	---------	---------	-----

1. Byte

8. Bit	7. Bit	6. Bit	5. Bit	4. Bit	3. Bit	2. Bit	1. Bit
start generating	end generating	start printing	end printing	start cutting	end cutting	start feeding	always 0

2. Byte

8. Bit	7. Bit	6. Bit	5. Bit	4. Bit	3. Bit	2. Bit	1. Bit
end feeding	start print order	end print order	error	free	printing stopped	printing resumed	always 0

Attention: Bit 1 has to be in 1. Byte and 2. Byte always 0, otherwise the print module possibly could recognise SOH or ETB.

At the status message of the print module to the host computer always at least 1 Bit is set. However, it could be occur that several Bits are set at the same time.

At the status demand of the host computer to the print module it is also possible that several Bits are set at the same time.

The auto status demand is saved in the print module, i.e. it is set to 0 after switching off/on. Therefore it is necessary to demand it anew after each time the print module is switched on.

Example:

The print module should observe the start of a print order. For this the host computer sends the following demand to the print module.

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

After the condition is fulfilled (= start of the print order) the print module sends the following message to the host computer:

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

With regard to the contents the answer corresponds always to the format set.

CHARACTER SETS

	Bitmap Fonts													Vector Fonts						
	ID	01	02	03	04	05	07	21	22	23	24	28	29	1/2	3/4	5/6	7/8	9/10	11/12	
		7x9 10x14	10x14 15x21	15x21 22x31	32x45 48x67	15x26 ¹⁾ 22x39 ¹⁾	10x18 ¹⁾ 15x27 ¹⁾	1,0; 13	1,8; 21	2,6; 31	5,6; 67	4,0; 48	0,8; 9	Helvetica Bold	Helvetica Roman	Swiss Light	Basket- ville	Brush Script	Mono- space	
GEM Germn		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
GEM English		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
GEM French		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
GEM Swedish		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
GEM Danish		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
CP 437 (German)		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
CP 850 (multilingual West European)		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
CP 852 (multilingual East European)		5)	5)	5)	5)	5)	5)	5)	5)	5)	5)	5)	5)	6)	6)	6)	6)	6)	6)	6)
CP1250 (Latin 2; Central European)		3)	3)	3)	3)	3)	3)	3)	3)	3)	3)	3)	3)	2)	2)	6)	6)	6)	2)	2)
CP1251 (Cyrillic)		6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	4)	4)	6)	6)	6)	4)	4)
CP1252 ANSI (Latin 1, West European)		2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)	2)
CP1253 (Greek)		6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	4)	4)	6)	6)	6)	4)	4)
CP1254 (Latin 5, Turkish)		6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	4)	4)	6)	6)	6)	4)	4)
CP 1257 (Baltic)		6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	6)	4)	4)	6)	6)	6)	4)	4)
		¹⁾ descenders ²⁾ standard ³⁾ at the moment not available, can be replaced by vector fonts (ID3; ID11) ⁴⁾ on demand, beginning with version 1.41a ⁵⁾ on demand, only 200 dpi print modules ⁶⁾ not available																		

Beginning with version 1.41a different character sets were offered but as default the print modules are equipped with Latin 1.

Following languages are supported:

Afrikaans	English	Italian	Serbian
Albanian	Estonian	Latvian	Slovak
Basque	Faeroese	Lithuanian	Slovenian
Belarusian	Finnish	Macedonian (FYROM)	Spanish
Bulgarian	French	Norwegian (Bokmal)	Swahili
Catalan	German	Norwegian (Nynorsk)	Swedish
Croatian	Greek (modern, monotonic)	Polish	Turkish
Czech	Hungarian	Portuguese	Ukrainian
Danish	Icelandic	Romanian	
Dutch	Indonesian	Russian	

Outline of the most important character sets for Central and East European languages

Codepage	Supported languages
1251 (Cyrillic)	Russian, Bearusian, Serbian, Bulgarian, Ukrainian, Macedonian
1250 (Latin 2, Central European)	Romanian, Slovak, Hungarian, Slovenian, Croatian, Serbian, Polish, Czech
852 (multilingual, Eas European)	Polish, Czech, Romanian, Slovak, Hungarian, Slovenian, Croatian, Serbian
1257 (Baltic)	Estonian, Latvian, Lithuanian

International ANSI character font

ANSI	Dec.	HEX	ANSI	Dec.	HEX	ANSI	Dec.	HEX	ANSI	Dec.	HEX	ANSI	Dec.	HEX
SP	32	20	Q	81	51	,	130	82	³	179	B3	ä	228	E4
!	33	21	R	82	52	f	131	83	´	180	B4	å	229	E5
"	34	22	S	83	53	”	132	84	μ	181	B5	æ	230	E6
#	35	23	T	84	54	…	133	85	¶	182	B6	ç	231	E7
\$	36	24	U	85	55	†	134	86	·	183	B7	è	232	E8
%	37	25	V	86	56	‡	135	87	ˆ	184	B8	é	233	E9
&	38	26	W	87	57	^	136	88	˚	185	B9	ê	234	EA
'	39	27	X	88	58	‰	137	89	°	186	BA	ë	235	EB
(	40	28	Y	89	59	Š	138	8A	»	187	BB	ì	236	EC
)	41	29	Z	90	5A	Š	139	8B	¼	188	BC	í	237	ED
*	42	2A	[	91	5B	Œ	140	8C	½	189	BD	î	238	EE
+	43	2B	\	92	5C		141	8D	¾	190	BE	ï	239	EF
,	44	2C	]	93	5D	Ž	142	8E	¿	191	BF	ð	240	F0
-	45	2D	^	94	5E		143	8F	À	192	C0	ñ	241	F1
.	46	2E	~	95	5F		144	90	Á	193	C1	ò	242	F2
/	47	2F		96	60	‘	145	91	Â	194	C2	ó	243	F3
0	48	30	a	97	61	’	146	92	Ã	195	C3	ô	244	F4
1	49	31	b	98	62	“	147	93	Ä	196	C4	õ	245	F5
2	50	32	c	99	63	”	148	94	Å	197	C5	ö	246	F6
3	51	33	d	100	64	•	149	95	Æ	198	C6	÷	247	F7
4	52	34	e	101	65	—	150	96	Ç	199	C7	ø	248	F8
5	53	35	f	102	66	—	151	97	È	200	C8	ù	249	F9
6	54	36	g	103	67	~	152	98	É	201	C9	ú	250	FA
7	55	37	h	104	68	™	153	99	Ê	202	CA	û	251	FB
8	56	38	i	105	69	š	154	9A	Ë	203	CB	ü	252	FC
9	57	39	j	106	6A	›	155	9B	Ì	204	CC	ý	253	FD
:	58	3A	k	107	6B	œ	156	9C	Í	205	CD	þ	254	FE
;	59	3B	l	108	6C		157	9D	Î	206	CE	ÿ	255	FF
<	60	3C	m	109	6D	ž	158	9E	Ï	207	CF			
=	61	3D	n	110	6E	Ÿ	159	9F	Ð	208	D0			
>	62	3E	o	111	6F		160	A0	Ñ	209	D1			
?	63	3F	p	112	70	ı	161	A1	Ò	210	D2			
@	64	40	q	113	71	¢	162	A2	Ó	211	D3			
A	65	41	r	114	72	£	163	A3	Ô	212	D4			
B	66	42	s	115	73	¤	164	A4	Õ	213	D5			
C	67	43	t	116	74	¥	165	A5	Ö	214	D6			
D	68	44	u	117	75		166	A6	×	215	D7			
E	69	45	v	118	76	§	167	A7	Ø	216	D8			
F	70	46	w	119	77	¨	168	A8	Ù	217	D9			
G	71	47	x	120	78	©	169	A9	Ú	218	DA			
H	72	48	y	121	79	ª	170	AA	Û	219	DB			
I	73	49	z	122	7A	«	171	AB	Ü	220	DC			
J	74	4A	{	123	7B	¬	172	AC	Ý	221	DD			
K	75	4B		124	7C	-	173	AD	Þ	222	DE			
L	76	4C	}	125	7D	®	174	AE	ß	223	DF			
M	77	4D	~	126	7E	—	175	AF	à	224	E0			
N	78	4E		127	7F	°	176	B0	á	225	E1			
O	79	4F	€	128	80	±	177	B1	â	226	E2			
P	80	50		129	81	²	178	B2	ã	227	E3			

Codepage 437

Dec.	Dec.	Dec.	Dec.	Dec.
32		81 Q	130 é	179
33 !		82 R	131 â	180
34 ' ,		83 S	132 à	181
35 #		84 T	133 â	182
36 \$		85 U	134 å	183
37 %		86 V	135 ç	184
38 &		87 W	136 ê	185
39 ' ,		88 X	137 ë	186
40 (		89 Y	138 è	187
41)		90 Z	139 ï	188
42 *		91 [	140 î	189
43 +		92 \	141 ì	190
44 ,		93]	142 Ä	191
45 -		94 ^	143 Å	192
46 .		95 _	144 É	193
47 /		96 `	145 æ	194
48 0		97 a	146 Æ	195
49 1		98 b	147 ô	196
50 2		99 c	148 ö	197
51 3		100 d	149 ò	198
52 4		101 e	150 û	199
53 5		102 f	151 ù	200
54 6		103 g	152 ÿ	201
55 7		104 h	153 Ö	202
56 8		105 i	154 Ü	203
57 9		106 j	155 ¢	204
58 :		107 k	156 £	205
59 ;		108 l	157 ¥	206
60 <		109 m	158	207
61 =		110 n	159	208
62 >		111 o	160 á	209
63 ?		112 p	161 í	210
64 @		113 q	162 ó	211
65 A		114 r	163 ú	212
66 B		115 s	164 ñ	213 €
67 C		116 t	165 Ñ	214
68 D		117 u	166	215
69 E		118 v	167 °	216
70 F		119 w	168	217
71 G		120 x	169	218
72 H		121 y	170	219
73 I		122 z	171 ½	220
74 J		123 {	172 ¼	221
75 K		124 ¡	173	222
76 L		125 }	174 «	223
77 M		126 ~	175 »	224
78 N		127	176	225 ß
79 O		128 Ç	177	226
80 P		129 ü	178	227
				228
				229
				230 μ
				231
				232
				233
				234
				235
				236
				237 Ø
				238
				239
				240
				241
				242
				243
				244
				245
				246
				247
				248 °
				249
				250
				251
				252
				253
				254
				255

94

Codepage 852*

Dec.	Dec.	Dec.	Dec.	Dec.
32	81 Q	130 é	179	228 ń
33 !	82 R	131 â	180	229 ñ
34 '	83 S	132 ä	181 Á	230 Š
35 #	84 T	133 ù	182 Â	231 š
36 \$	85 U	134 ć	183 Ě	232 Ř
37 %	86 V	135 ç	184 Ş	233 Ú
38 &	87 W	136 ĺ	185	234 ř
39 '	88 X	137 ë	186	235 Ů
40 (	89 Y	138 Ö	187	236 ý
41)	90 Z	139 õ	188	237 Ý
42 *	91 [	140 î	189 Ž	238 ț
43 +	92 \	141 Ž	190 ž	239 ´
44 ,	93]	142 Ä	191	240 -
45 -	94 ^	143 Č	192	241 '
46 .	95 _	144 É	193	242
47 /	96 `	145 Ĺ	194	243
48 0	97 a	146 Í	195	244 —
49 1	98 b	147 ô	196	245 §
50 2	99 c	148 ö	197	246 ÷
51 3	100 d	149 Ľ	198 Ą	247 „
52 4	101 e	150 ĩ	199 ă	248 °
53 5	102 f	151 Š	200	249 “
54 6	103 g	152 ś	201	250 ·
55 7	104 h	153 Ö	202	251 ü
56 8	105 i	154 Ü	203	252 Ř
57 9	106 j	155 Ě	204	253 ř
58 :	107 k	156 t	205	254
59 ;	108 ĺ	157 Ł	206	255
60 <	109 m	158 x	207	
61 =	110 n	159 č	208 đ	
62 >	111 o	160 á	209 Đ	
63 ?	112 p	161 í	210 Ď	
64 @	113 q	162 ó	211 Ě	
65 A	114 r	163 ú	212 d	
66 B	115 s	164 Ą	213 Ň	
67 C	116 t	165 ą	214 í	
68 D	117 u	166 Ż	215 î	
69 E	118 v	167 ž	216 ě	
70 F	119 w	168 Ę	217	
71 G	120 x	169 ę	218	
72 H	121 y	170	219	
73 I	122 z	171 ż	220	
74 J	123 {	172 Č	221 Ť	
75 K	124 128	173 ş	222 Ů	
76 L	125 129	174 «	223	
77 M	126 ~	175 »	224 Ó	
78 N	127 Δ	176	225 ß	
79 O	128 Ç	177	226 Ô	
80 P	129 ů	178	227 Ñ	

* option

* option

97

98

99

100

101

FONT EXAMPLES

Bitmap fonts (not proportional)

Font 01 (8 x 11) ratio 3:3
Font 02 (12 x 17) ratio 3:3
Font 03 (18 x 26) ratio 2:2
Font 04 (40 x 56) ratio 1:1
Font 05 (18 x 32 with descender) ratio 2:2
Font 07 (12 x 22 with descender) ratio 2:2

Bitmap fonts (proportional)

Font 21 (10 proportional) ratio 3:3
Font 22 (18 proportional) ratio 2:2
Font 23 (26 proportional) ratio 2:2
Font 24 (56 proportional) ratio 1:1
Font 28 (40 proportional) ratio 1:1
Font 29 (8 proportional) ratio 5:5

Vector fonts

Absender (Baskerville) Das ist ein Musteretikett
Gold, Petra (Swiss Light) für die Darstellung der
Name, Vorname (Helvetica Bold) Schriftarten (Monospace)
Goldstraße 456 (Swiss Light)
Straße, Hausnummer (Helvetica Bold)
23456 Golddorf (Swiss Light)
PLZ, Ort (Helvetica Bold)

Musterlieferung
Bitte bestätigen Sie
den Empfang. (Brush Script)

Empfänger (Baskerville)
Mustermann, Max (Helvetica Roman)
Name, Vorname (Helvetica Bold)
Musterstraße 123 (Helvetica Roman)
Straße, Hausnummer (Helvetica Bold)
45678 Musterstadt (Helvetica Roman)
PLZ, Ort (Helvetica Bold)

INDEX

A

ANSI, character set	92
autostatus	88, 89
Aztec code, mask set	26

B

back speed (intermittent mode), parameter set.....	83
bar code	
mask set.....	17
rrtation	6
bitmap fonts, font examples.....	102
brake power (continuous mode), parameter set.....	80
buzzer, parameter set.....	54

C

cancel continuous print (parameter set)	
continuous mode.....	82
intermittent mode	86
character sets	
ANSI.....	92
Codepage 437	93
Codepage 850	94
Codepage 852	95
Codepage 857	96
GEM Danish.....	101
GEM English	98
GEM French.....	99
GEM German	97
GEM Swedish	100
general information	90
check digit (variable definition)	46
CODABLOCK F, mask set	23
Codepage 437, character set	93
Codepage 850, character set	94
Codepage 852, character set	95
Codepage 857, character set	96
codepage, parameter set.....	53
columns	
number, parameter set.....	49
width, parameter set	50
compact flash card	
change directory	71
create directory	71
delete directory	71
delete directory path	71
delete layout.....	70
drive status.....	72
format card	70
load file.....	70
readout free memory space	71
save layout.....	70
size of cf card	72
transfer file	72
compressed air (sensors), parameter set.....	61
configuration	
readout.....	87
save permanent	87

connector assignment RS485/RS422, serial data transmission	3
continuous mode (parameter sets)	
brake power	80
cancel continuous print	82
check material speed at print start	77
encoder resolution	78
feedback distance	79
feedback speed	80
in signal level	81
material feed/encoder turn	78
material speed	78
operating mode	77
out signal level	81
output signal 'print ready' active	82
print offset	77
printhead time	79
ribbon save mode	79
software input	81
software output	82
start signal delay	82
synchronization	79
transfer ribbon motor power	80
contrast, parameter set	49
counter (extended), variables	36
counter, variables	35
cover condition (sensors), parameter set	61
currency, variable	41
custom logo, parameter set	64

D

data format	
explanation	8
general information	7
data memory, parameter set	57
DataMatrix, mask set	21
date/time	
date	65
summer/wintertime	66
summertime begin	67
summertime end	67
time	65
time shifting	67
variable	37, 38, 39, 40
datumpoint, setting	6
debounce start signal (intermittent mode), parameter set	86
default layout on/off, parameter set	55
device parameters	
buzzer	54
codepage	53
default layout on/off	55
external print parameters	53
field handling	52
hotstart	55
keyboard layout	54
label change confirmation	55
operating mode	52
print after measuring	55
print module language	53
print position	52
transfer ribbon control	52
user guiding	54

DHCP support, parameter set	59
E	
emulation, parameter set.....	76
encoder resolution (continuous mode), parameter set.....	78
EPC calculation (variable definition).....	45
error (readout)	
ID, parameter set	73
text, parameter set	73
error (reset), parameter set	73
ETB, parameter set	56
example	
graphic, PCX format.....	33
mask set.....	30
text set.....	30
external print parameters, parameter set	53
F	
feed, parameter set	75
feedback	
distance (continuous mode), parameter set	79
speed (continuous mode), parameter set	80
field attributes/properties, definition.....	9
field handling, parameter set	52
Field name, definition	10, 11, 12, 13
flip layout, parameter set	50
font examples	
bitmap fonts (not proportional)	102
bitmap fonts (proportional)	102
vector fonts	102
function group (password), parameter set.....	68
G	
gateway address (network), parameter set.....	58
GEM Danish, character set	101
GEM English, character set.....	98
GEM French, character set	99
GEM German, character set.....	97
GEM Swedish, character set.....	100
graphic	
general format.....	31
internal, mask set.....	28
PCX format, example.....	33
PCX format, general information	32
rotation	6
GS1 DataBar (RSS), mask set	24
GS1 DataMatrix, mask set.....	22
GS1-128 parser (variable definition)	44
H	
hotstart, parameter set	55
I	
I/O parameters (continuous mode)	
continuous print.....	82
in signal level	81
out signal level	81
software input.....	81
software output	82
start signal delay	82

I/O parameters (intermittent mode)	
cancel continuous print	86
debounce start signal	86
I/O protocol port	85
in signal level	84
out signal level	85
output signal 'print ready' active	82, 86
software input	85
software output	85
start signal delay	86
I/O protocol port (intermittent mode), parameter set	85
in signal level (parameter set)	
continuous mode)	81
intermittent mode	84
interface	
all interface parameters	56
date memory	57
interface protocol	56
SOH/ETB	56
unknown interrogative set, reaction	57
intermittent mode (parameter sets)	
back speed	83
cancel continuous print	86
debounce start signal	86
I/O protocol port	85
in signal level	84
operating mode	83
out signal level	85
output signal 'print ready' active	86
print offset	84
print speed	83
ribbon save	84
software impulse	85
software output	85
start signal delay	86
interrogative sets (unknown), reaction	57
IP address (network), parameter set	58
ITF 14, mask set	18

K

keyboard layout, parameter set	54
--------------------------------------	----

L

layout change confirmation, parameter set	55
layout parameters	
column width	50
contrast	49
flip layout	50
flip/rotate label	51
layout alignment	49
layout length in 1/100 mm	48
layout width in 1/100 mm	48
layouts/cycle	48
material selection	49
number of columns	49
printing lines	50
rotate layout	50
layouts	
alignment, parameter set	49
Length in 1/100 mm, parameter set	48
Width in 1/100 mm, parameter set	48

layouts/cycle, parameter set	48
line, mask set	27
lines (number), parameter set	50
link field, variables	34

M

MAC address (network), parameter set	59, 60
machine parameters (continuous mode)	
encoder resolution	78
material feed	78
material speed	77, 78
operating mode	77
print offset	77
machine parameters (intermittent mode)	
back speed	83
operating mode	83
print offset	84
print speed	83
ribbon save	84
mask set	
Aztec Code	26
bar code	17
CODABLOCK F	23
DataMatrix	21
example	30
graphic internal	28
GS1 DataBar (RSS)	24
GS1 DataMatrix	22
ITF 14	18
line	27
MAXICODE	20
PDF417	19
QR Code	25
rectangle	27
text	15, 16
material	
feed per encoder turn (continuous mode), parameter set	78
Selection, parameter set	49
speed (continuous mode), parameter set	78
speed at print start signal (continuous mode), parameter set	77
MAXICODE, mask set	20
memory card data (variable definition)	44
mileage	
print module, parameter set	64
printhead, parameter set	64
mode selection, parameter set	52

N

netmask (network), parameter set	58
network	
DHCP support	59
gateway address	58
IP address	58
MAC address	59, 60
netmask	58
NTP server IP	60
NTP status	60
printer name	59
reset network device	61
time zone (hour offset)	61
transmission mode	59

NTP server IP (network), parameter set.....	60
NTP status (network), parameter set	60
O	
online/offline, parameter set	62
operating mode (parameter sets)	
continuous mode.....	77
intermittent mode	83
out signal level (parameter set)	
continuous mode)	81
intermittent mode	85
output signal 'print ready' active (parameter set)	
continuous mode.....	82
intermittent mode	86
P	
parallel data transmission	
connection.....	5
general information	4
parameter sets	
cancel print orders	76
compact flash card.....	70, 71, 72
continuous mode.....	77
date/time	65
device parameters	52
emulation.....	76
error ID, readout.....	73
error text, readout	73
feed	75
interface	56
layout parameters	48
machine parameters (intermittent mode).....	83
network (option)	58
password.....	68, 69
password favorites menu	69
password function menu	69
password memory card.....	69
password printing manually	69
quantity (print order).....	74
reset error.....	73
ribbon feed	75
service functions	62
start printing	75
start/stop command	73
status print	75
test print	75
password	69
PDF417, mask set	19
print after measuring, parameter set	55
print module language, parameter set.....	53
print offset (parameter set)	
continuous mode.....	77
intermittent mode	84
print orders (cancel), parameter set	76
print position, parameter set	52
print speed (intermittent mode), parameter set	83
print start, parameter set	75
printer name (network), parameter set.....	59
printhead	
resistance, parameter set	63
temperature, parameter set	63

printhead time (continuous mode), parameter set	79
Q	
QR Code, mask set	25
quantity (print order), parameter set	74
R	
readout, configuration	87
rectangle, mask set	27
reprint action, parameter set	62
reset network device (network), parameter set	61
ribbon feed, parameter set	75
ribbon save (intermittent mode), parameter set	84
ribbon save mode (continuous mode)	
brake power	80
feedback distance	79
feedback speed	80
printhead move down time	79
ribbon save mode	79
synchronization	79
transfer ribbon motor power	80
rotate layout, parameter set	50
rotation	
bar code	6
graphic	6
text	6
RS232	
assignment, cable	2
hardware handshake	2
S	
save permanent, configuration	87
sensors	
compressed air	61
cover condition	61
serial data transmission	
connection RS232	2
connector assignment RS485/RS422	3
connector assignment, DSUB socket	1
xon/xoff protocol	1
service functions	
custom logo	64
mileage, print module	64
mileage, printhead	64
online/offline	62
printhead open/closed	62
printhead open/closed, parameter set	62
printhead resistance	63
printhead temperature	63
reprint action	62
transfer ribbon length	63
transfer ribbonpprior warning	63
shift variable, variables	42
software (continuous mode)	
software input	81
software output	82
software (intermittent mode)	
software input	85
software output	85
SOH, parameter set	56
start signal delay (continuous mode), parameter set	82

start signal delay (intermittent mode), parameter set.....	86
start/stop command, parameter set.....	73
status	
enquiry, data format	87
print, parameter set.....	75
return information, data format	87
substring (variable definition).....	47
summer/wintertime (parameter sets)	
automatical adjustment	66
summertime begin	67
summertime end	67
time shifting.....	67
synchronization (continuous mode), parameter set	79

T

test print, parameter set.....	75
text	
mask set.....	15, 16
rotation	6
set, example.....	30
set, general information	29
time zone (Network), parameter set	61
time, parameter set.....	65
transfer ribbon (parameter sets)	
control	52
length	63
motor power (continuous mode), parameter set.....	80
Prior warning.....	63
prior warning diameter	63
transmission mode (network), parameter set	59

U

user guiding	
parameter set.....	54
variable definition	43

V

variables	
check digit	46
counter	35
currency variable.....	41
date/time	37, 38, 39, 40
EPC calculation.....	45
extended counter	36
GS1-128 parser	44
link field	34
memory card data	44
shift variable	42
substring.....	47
text structure	34
user guiding	43
vector fonts, font examples.....	102

X

x offset, parameter set.....	48
------------------------------	----



Carl Valentin GmbH
Neckarstraße 78 – 86 u. 94 . 78056 Villingen-Schwenningen
Phone +49 7720 9712-0 . Fax +49 7720 9712-9901
info@carl-valentin.de . www.carl-valentin.de