

ILX

Interface Description



Copyright by Carl Valentin GmbH / 7974015A.0823

Information on the scope of delivery, appearance, performance, dimensions, and weight reflect our knowledge at the time of printing.

We reserve the rights to make modifications.

All rights, including those regarding the translation, are reserved.

No part of this document may be reproduced in any form (print, photocopy, or any other method) or edited, copied, or distributed electronically without written permission from Carl Valentin GmbH.

Due to the constant further development of our devices discrepancies between manual and device can occur.

Please check www.carl-valentin.de for the latest update.

Trademarks

All named brands or trademarks are registered brands or registered trademarks of their respective owners and may not be separately labelled. It must not be concluded from the missing labelling that it is not a registered brand or a registered trademark.

Carl Valentin printing systems comply with the following EU directives:

CE Low-Voltage Directive (2014/35/EU)

Electromagnetic Compatibility Directive (2014/30/EU)



Carl Valentin GmbH

Postfach 3744
78026 Villingen-Schwenningen
Neckarstraße 78 – 86 u. 94
78056 Villingen-Schwenningen

Phone +49 7720 9712-0
Fax +49 7720 9712-9901

E-Mail info@carl-valentin.de
Internet www.carl-valentin.de

Table of Contents

1	Serial Data Transmission	5
1.1	Connector Assignment (9-pin DSUB Socket)	5
1.2	Connection Plan RS232	6
2	Parallel Data Transmission	7
2.1	Connection Plan	7
3	Text, Bar Code, Graphic	9
3.1	Definition of Rotation	9
3.2	Definition of Datum Point	9
4	Data Format	11
4.1	Explication	12
4.2	Definition of Field Attributes/Field Properties (optional)	13
4.3	Field Name	14
4.4	Field Selection by Free Definable Field Number	18
5	Mask Set	19
5.1	Text	19
5.2	One-Dimensional Bar Code	21
5.3	ITF Bar Code	22
5.4	PDF417	23
5.5	MAXICODE	24
5.6	DataMatrix	25
5.7	GS1 DataMatrix	26
5.8	CODABLOCK F	27
5.9	GS1 DataBar (RSS Code)	28
5.10	QR Code	29
5.11	Aztec Code	30
5.12	Rectangle	31
5.13	Line	31
5.14	Internal Graphic	32
6	Text Set	33
6.1	Examples	34
7	Graphic Set	35
7.1	General Graphic Format	35
7.2	Graphic in PCX Format	35
7.3	Example PCX File	36
8	Variables	37
8.1	Set Structure	37
8.2	Link Field	37
8.3	Counter	38
8.4	Extended Counter	39
8.5	Date and Time	40
8.6	Format Identifier (Date & Time)	41
8.7	Currency Variable	44
8.8	Shift Variable	45
8.9	User Guiding	46
8.10	User Guiding with Mask	47
8.11	Memory Card Data	48
8.12	GS1-128 Parser	48
8.13	EPC Calculation (Electronic Product Code)	49
8.14	Check Digit	50
8.15	Substring	51

9	Parameter Sets	53
9.1	Label Parameters	53
9.2	Photocell.....	58
9.3	Printer Parameters	60
9.4	Dispenser I/O.....	65
9.5	Interface.....	71
9.6	Network	73
9.7	Offset Values	77
9.8	Service Functions	78
9.9	Date & Time.....	82
9.10	Password.....	85
9.11	Compact Flash Card	87
9.12	Printing	91
9.13	Emulation.....	94
10	Parameter Sets for Options	95
10.1	Label Applicator.....	95
11	Configuration & Status	101
11.1	Autostatus.....	102
12	Monitored Printing.....	105
12.1	Short Introduction	105
12.2	Parameter Sets (Host – Printer)	105
12.3	Direct Enquiry	106
12.4	Answer Sets (Printer – Host).....	106
12.5	Sample Label.....	108
13	Font Examples	109
13.1	Bitmap Fonts (Not Proportional).....	109
13.2	Bitmap Fonts (Proportional)	109
13.3	Vector Fonts	109
14	Index	111

1 Serial Data Transmission


1.1 Connector Assignment (9-pin DSUB Socket)





Pin	Signal	Description
2	T x D	Transmitting data line
3	R x D	Receiving data line
5	GND	GND signal
7	CTS	HW Handshake
8	RTS	HW Handshake

1.2 Connection Plan RS232

Software Handshake

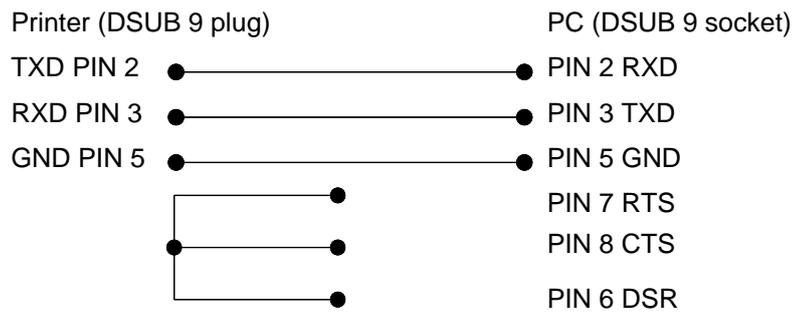

Hardware Handshake

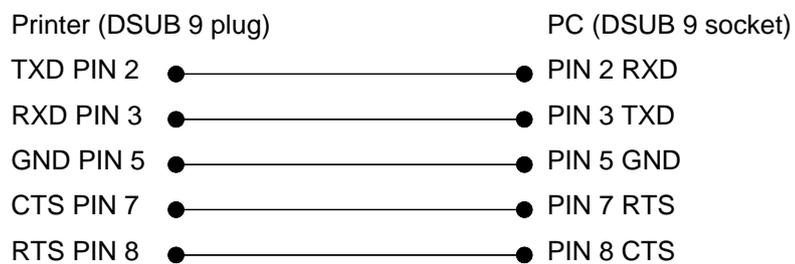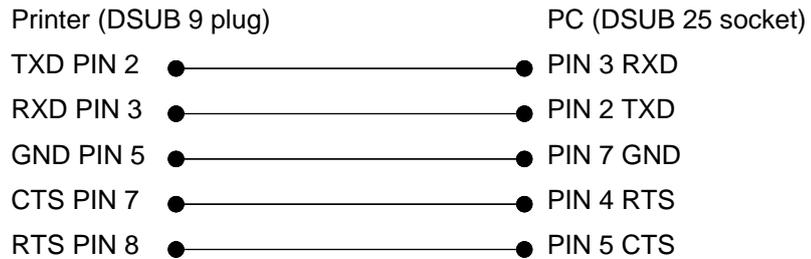


2 Parallel Data Transmission

2.1 Connection Plan

Signal Pin no.	Signal name	Direction	Function
1	$\overline{\text{STROBE}}$	(Input)	The $\overline{\text{STROBE}}$ signal indicates that data can be received. The impulse width to the receiving line has to be 0,5 μs at least.
2	DATA 0	(Input)	The signals are data bits sent to the printer. A HIGH level corresponds to logical 1 and a LOW level to logical 0.
3	DATA 1	(Input)	
4	DATA 2	(Input)	
5	DATA 3	(Input)	
6	DATA 4	(Input)	
7	DATA 5	(Input)	
8	DATA 6	(Input)	
9	DATA 7	(Input)	
10	ACK/	(Output)	An impulse of approx. 12 μs confirms data input for a LOW level and signals the further listening watch of the printer.
11	BUSY	(Output)	A HIGH level indicates that the printer cannot receive any data. On the following conditions the signal HIGH is possible: <ol style="list-style-type: none"> 1) for data input (impulse for each sign) 2) during a printing process 3) in Offline status 4) for printer failures
12	PE	(Output)	A HIGH level indicates that paper is used up.
13	SELECT	(Output)	High Online
14	AUTOFEED		
15	FAULT/	(Output)	Signal goes to LOW, in case <ol style="list-style-type: none"> 1) the paper is used up 2) the printer is Offline or <ol style="list-style-type: none"> 3) an error occurs.
16	INIT/	(Input)	A LOW level initializes the printer
17	SELECTIN/	(Input)	A LOW level informs the printer to be addressed
18-25	GND		

3 Text, Bar Code, Graphic


3.1 Definition of Rotation

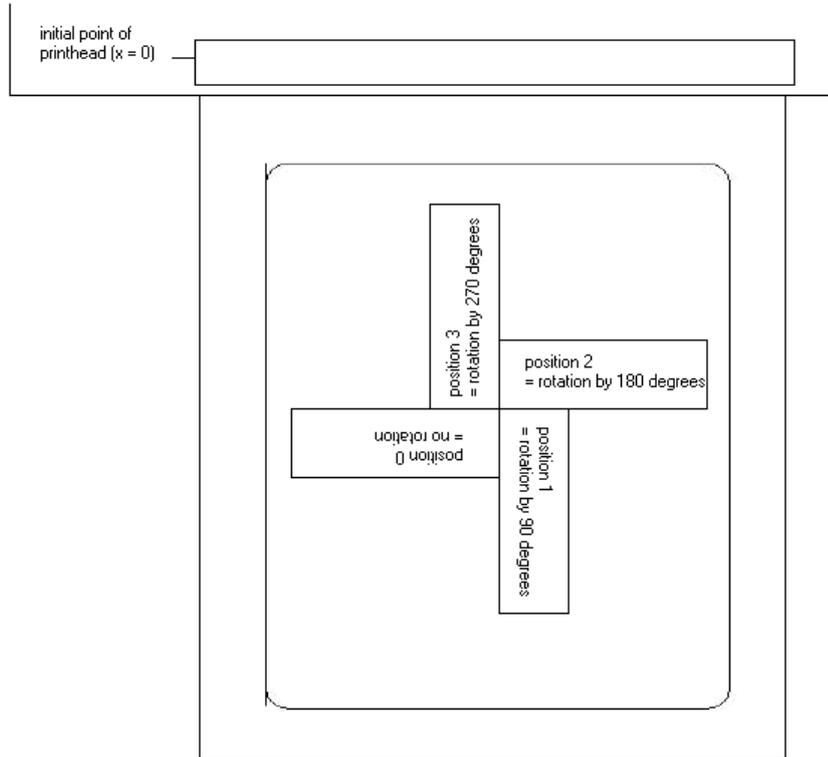

3.2 Definition of Datum Point

The so-called datum point is the relation point for indication of position. In the meantime the datum point is also the point at which the selected object is rotated.

To determine the datum point in the mask sets, the possible datum points are numbered from left top (1) to right bottom (9). The default datum point is left bottom (7). This datum point is also used even if no indication is found in the mask set.

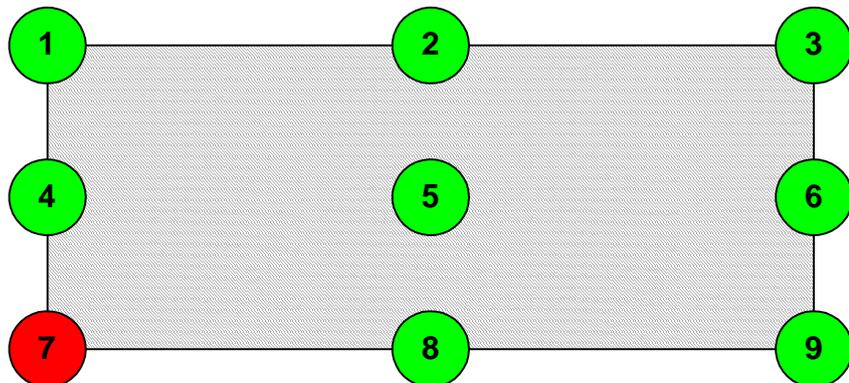

4 Data Format

The data format consists of four parties:

- Mask set
 - Text
 - Graphic
 - Command
- For a n-line label the following has to be transmitted:
 - n - mask sets
 - n - text sets
 - n - graphic sets (if necessary)
 - 1 - command set



NOTICE!

The command set always has to be transmitted at the end!

To each text on a label belong one MASK SET and one TEXT SET with the same field number.

To each code on a label belong one MASK SET, one TEXT SET and one CODE SET with the same field number.

To each box or line on a label belongs only one MASK SET.

To each graphic on a label belong several GRAPHIC SETS according to its size res. height, e.g. a graphic with a height of 10 mm needs 80 graphic sets.

Examples

Label with 3 lines of text:	3 mask sets 3 text sets 1 command set
Label with 2 lines of text, 1 box and 3 lines	6 mask sets 2 text sets 1 command set

For ALL data sets the following is valid:

Each set starts with

SOH = start of header → HEX format 01

Each set ends with

ETB = end of data transmission block → HEX-Format 17

Alternatively, the start character SOH can be set to 5E_{Hex}, the end character ETB to 5F_{Hex}. This is necessary if the connected system (e.g. UNIX) cannot transfer control signs.

All other data sets → ASCII format, but they will be transmitted as hexadecimal characters.

Example

A = identification of mask set - transmission: 41_{HEX}

n = field number '01' - transmission: 30_{HEX}, 31_{HEX}

4.1 Explication

x coordinate: Distance from right label rim in mm
Measured from the right label rim up to the lower left point of the corresponding line

y coordinate: Distance from upper label rim in mm
Measured from the beginning of the label down to the lower left point of the corresponding line

Bitmap fonts (not proportional)

01 = Font 01	0,8 x 1,1 mm	127 characters
02 = Font 02	1,2 x 1,7 mm	255 characters
03 = Font 03	1,8 x 2,6 mm	255 characters
04 = Font 04	4,0 x 5,6 mm	127 characters
05 = Font 05	1,8 x 3,2 mm (descender)	255 characters
06 = Font 06	1,5 x 2,9 mm	127 characters
07 = Font 07	1,2 x 2,2 mm (descender)	255 characters

Bitmap fonts (proportional)

21 = Font 21	(1,0; 13)	255 characters
22 = Font 22	(1,8; 21)	255 characters
23 = Font 23	(2,6; 31)	255 characters
24 = Font 24	(5,6; 67)	255 characters
28 = Font 28	(4,0; 48)	255 characters
29 = Font 29	(0,8; 9)	255 characters



NOTICE!

In order to reach best print results it is recommended always to choose the biggest possible font.

Vector fonts (proportional)

When in mode 'proportional text', the height and width of text have to be entered in mm.
These values refer to the capital 'M', i.e. the values of other characters are changing in proportion.

Vector fonts (autoscale)

When in autoscale mode, height and width of text has to be entered in mm.
The height of the text refers to all capital letters. When using small characters and descenders the height is changing in proportion. When entering the width, the complete file has to be considered. The text will be adjusted automatically, which means that the width of the characters is changing.

4.2 Definition of Field Attributes/Field Properties (optional)

Explanation

Additionally to mask set 'AM[] ...' the possibility was created to define further field properties. In order to achieve a high flexibility, the field properties received own names/identifications. Therefore the sequence as well as the number of field properties is free. If necessary, the mask set 'AC[]' is transferred additionally to mask set 'AM[]' to the printer.

Structure mask set

(SOH)AC[]at1=*value*;at2= *value*;...(ETB)

Attribute (at):	Description
BT BW QZ	ITF 14 (see page 22) bearer bar type bearer bar width quiet zone in 1/100 mm
NAME	Field name (see page 14) definition of field name
FN	Field number (see page 18) Free definable field number


This table is constantly extended. The current version is available on demand.

4.3 Field Name

Application (customized)

When printing systems are connected to a computer system or machine controls, there is often the requirement that variable data is to be inserted into an existing layout. This data contents come from the superordinate computer system (database) or a machine control (e.g. PLC, scale, ERP system, etc.). Basically, it was always possible to integrate variable data into a 'loaded' layout (mask). The access to certain fields has been effected via the field index, i.e. a consecutive number. This field index is generated by Labelstar Office and can also change with layout changes, whereby the data allocation to the computer system/control is no longer correct.

Example

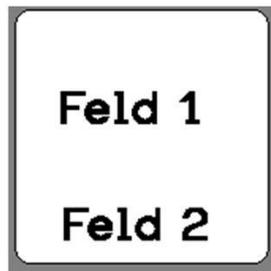

Print data

```
...
// TEXT (1/100 mm)
(SOH)AM[1]2405;803;0;1;2;4;1;1;0(ETB)
(SOH)BM[1]Feld 1(ETB)
// TEXT (1/100 mm)
(SOH)AM[2]421;856;0;1;2;4;1;1;0(ETB)
(SOH)BM[2]Feld 2(ETB)
// LINES: 2
...
```

The print data contains the definitions for the two text fields. The field index is always in '[']' of the mask or text setting.

If the text field 'Feld 1' is deleted on the label and then recreated, it gets a new index. In this case '2'. The text field 'Feld 2' gets the index '1'. As a result, an assignment via the field index is used only to a limited extent, without manual post-processing of the layout data.

Explanation

As an alternative to the field index, the assignment can also be made via the field name. A change in the field index has no longer any influence, and a changed layout is still filled in the right places with variable data of the computer system/control system.

Labelstar Office: The print data is supplemented by the following line:

(SOH)AC[1]NAME="*Field name*"(ETB)


The field content defined via the text block can be changed by the computer system/control with the following command:

(SOH)BV[*Field name*]Feld 2(ETB)

This results in the following standard procedure for the connection to a high-level control and/or computer system.

Label design with Labelstar Office

The field names are automatically transferred by Labelstar Office.

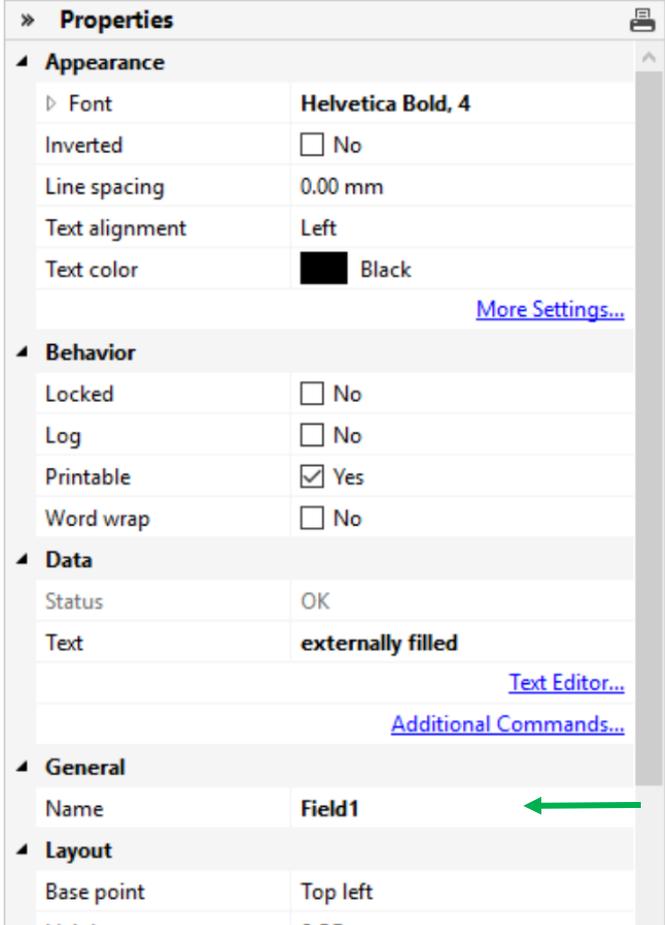


The screenshot shows the 'Properties' dialog box with the following settings:

- Appearance:**
 - Font: Helvetica Bold, 4
 - Inverted: No
 - Line spacing: 0.00 mm
 - Text alignment: Left
 - Text color: Black
- Behavior:**
 - Locked: No
 - Log: No
 - Printable: Yes
 - Word wrap: No
- Data:**
 - Status: OK
 - Text: externally filled
- General:**
 - Name: Field1 (indicated by a green arrow)
- Layout:**
 - Base point: Top left



The desired field name (Field1) is entered in the properties of the text field.

For text fields, a printer-internal font must be used. The printer-internal fonts are marked by a printer symbol in the list.

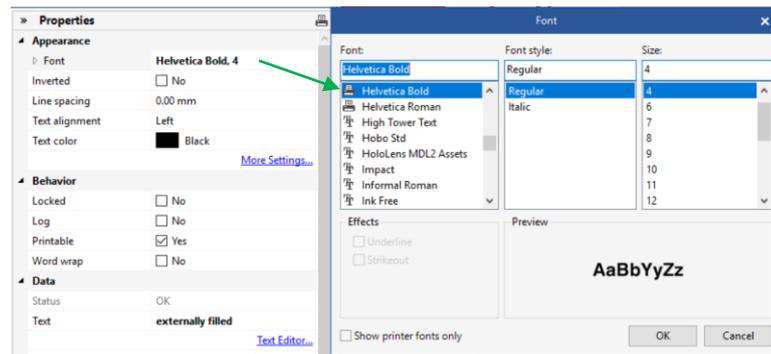

Export to a print file and save the layout in the external controller

When the label design is finished, the label is exported to a print file. For this, Labelstar Office uses the function **File – Export – Create Print Template**.

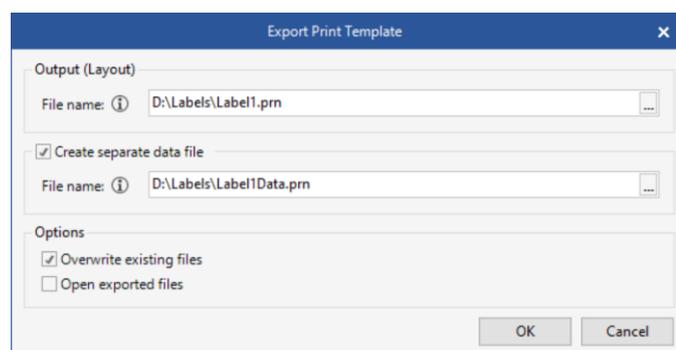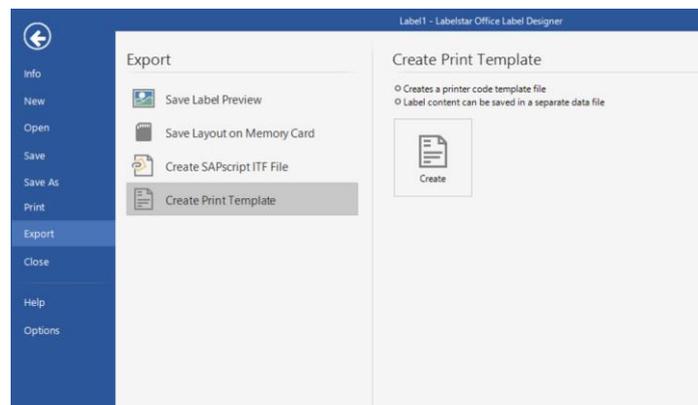


The option **Create separate data file** must be selected, otherwise the line (SOH)**FBC---r-----**(ETB) is included in the print file, which would immediately release a print procedure.

By starting a print procedure, this print file (layout definition / mask definition) is transferred from the controller/computer system to the printing system first.

Save the layout on the memory card of the printer

As an alternative to 'Export to a print file' the label layout is saved on the memory card of the printing system. For this, the memory card tool from Labelstar Office can be used.

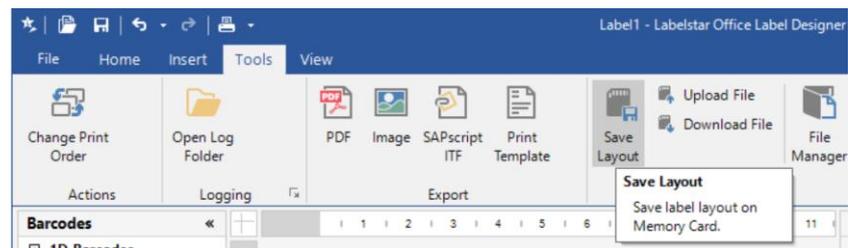

The layout must be called by the controller/computer system **before** filling the variable fields.

The following parameter set is used:

(SOH)**FMA---rfilename**(ETB)

The path name is determined when saving and possibly contains a path.

Example: "A:\Standard\eti1".

Filling the variable fields by the controller/computer system

The higher-level control can select the variable fields by the field names and set the contents. Subsequently, the print job is restarted.

Example	(SOH)FMB---rfilename(ETB)	Loading the layout from mc
	(SOH)BV[ArtBez]screws(ETB)	Filling the field "ArtBez" with "screws"
	(SOH)BV[ArtNr]123456789(ETB)	Filling the field "ArtNr" with "123456789"
	(SOH)FBC---r------(ETB)	Start printing

4.4 Field Selection by Free Definable Field Number

With the following described attribute, it is possible to assign a free definable field number to a field. This field number does not have to be clear, i.e. several fields can have the same field number. In this way the same field contents can be assigned to different fields.

The following attribute identification is defined:

Attribute: **FN**

Description: free definable field number

After the field number was assigned with AC mask statement,

```
(SOH) AC [n] FN=nr (ETB)
```

n = field index

nr = free definable field number

it is possible to access to the field and/or the fields with the new BF text statement:

```
(SOH) BF [nr] text (ETB)
```

nr = field number

text = field contents

```
Example // Assignment of field number field 1 and field 2
(SOH) AM[1]1000;2500;0;4;2;7;400;400;0 (ETB)
(SOH) AC [1] FN=100 (ETB)
(SOH) AM[2]2000;2500;0;30;2;4000;9;3;0;1 (ETB)
(SOH) AC [2] FN=100 (ETB)

// Access to field 1 and field 2 by field number
(SOH) BF [100]1234567890 (ETB)
```

5 Mask Set

5.1 Text

AM[n]y;x;p;a;d;z;dy;dx;lp;dp																			
A	identification for mask set																		
M	identification for protocol version																		
n	field number																		
y	Y coordinate in 1/100 mm																		
x	X coordinate in 1/100 mm																		
p	identification for phantom field 0 = print 1 = no print																		
a	identification for field type 1 = bitmap font 2 = bitmap font inverse 4 = vector font 5 = vector font autoscale 6 = vector font inverse 7 = vector font autoscale inverse																		
d	rotation 0 = 0° 2 = 180° 1 = 90° 3 = 270°																		
z	character set not proportional bitmap fonts (1+2)																		
	<table> <tr> <td>01 = FONT 01</td> <td>0,8 x 1,1 mm</td> <td>127 characters</td> </tr> <tr> <td>02 = FONT 02</td> <td>1,2 x 1,7 mm</td> <td>255 characters</td> </tr> <tr> <td>03 = FONT 03</td> <td>1,8 x 2,6 mm</td> <td>255 characters</td> </tr> <tr> <td>04 = FONT 04</td> <td>4,0 x 5,6 mm</td> <td>127 characters</td> </tr> <tr> <td>05 = FONT 05</td> <td>1,8 x 3,2 mm - descender</td> <td>255 characters</td> </tr> <tr> <td>07 = FONT 07</td> <td>1,2 x 2,2 mm - descender</td> <td>255 characters</td> </tr> </table>	01 = FONT 01	0,8 x 1,1 mm	127 characters	02 = FONT 02	1,2 x 1,7 mm	255 characters	03 = FONT 03	1,8 x 2,6 mm	255 characters	04 = FONT 04	4,0 x 5,6 mm	127 characters	05 = FONT 05	1,8 x 3,2 mm - descender	255 characters	07 = FONT 07	1,2 x 2,2 mm - descender	255 characters
	01 = FONT 01	0,8 x 1,1 mm	127 characters																
02 = FONT 02	1,2 x 1,7 mm	255 characters																	
03 = FONT 03	1,8 x 2,6 mm	255 characters																	
04 = FONT 04	4,0 x 5,6 mm	127 characters																	
05 = FONT 05	1,8 x 3,2 mm - descender	255 characters																	
07 = FONT 07	1,2 x 2,2 mm - descender	255 characters																	
character set proportional bitmap fonts (1+2)																			
<table> <tr> <td>21 = FONT 21</td> <td>1,0 mm; 13 Pixel</td> <td>255 characters</td> </tr> <tr> <td>22 = FONT 22</td> <td>1,8 mm; 21 Pixel</td> <td>255 characters</td> </tr> <tr> <td>23 = FONT 23</td> <td>2,6 mm; 31 Pixel</td> <td>255 characters</td> </tr> <tr> <td>24 = FONT 24</td> <td>5,6 mm; 67 Pixel</td> <td>255 characters</td> </tr> <tr> <td>28 = FONT 28</td> <td>4,0 mm; 48 Pixel</td> <td>255 characters</td> </tr> <tr> <td>29 = FONT 29</td> <td>0,8 mm; 9 Pixel</td> <td>255 characters</td> </tr> </table>	21 = FONT 21	1,0 mm; 13 Pixel	255 characters	22 = FONT 22	1,8 mm; 21 Pixel	255 characters	23 = FONT 23	2,6 mm; 31 Pixel	255 characters	24 = FONT 24	5,6 mm; 67 Pixel	255 characters	28 = FONT 28	4,0 mm; 48 Pixel	255 characters	29 = FONT 29	0,8 mm; 9 Pixel	255 characters	
21 = FONT 21	1,0 mm; 13 Pixel	255 characters																	
22 = FONT 22	1,8 mm; 21 Pixel	255 characters																	
23 = FONT 23	2,6 mm; 31 Pixel	255 characters																	
24 = FONT 24	5,6 mm; 67 Pixel	255 characters																	
28 = FONT 28	4,0 mm; 48 Pixel	255 characters																	
29 = FONT 29	0,8 mm; 9 Pixel	255 characters																	
character set vector fonts (4-7)																			
<table> <tr> <td>01 = Helvetica Bold</td> </tr> <tr> <td>02 = Helvetica Bold italics</td> </tr> <tr> <td>03 = Helvetica Roman</td> </tr> <tr> <td>04 = Helvetica Roman italics</td> </tr> <tr> <td>05 = Swiss Light</td> </tr> <tr> <td>06 = Swiss Light italics</td> </tr> <tr> <td>07 = Baskerville</td> </tr> <tr> <td>08 = Baskerville italics</td> </tr> <tr> <td>09 = Brush Script</td> </tr> <tr> <td>10 = Brush Script italics</td> </tr> <tr> <td>11 = Monospace</td> </tr> <tr> <td>12 = Monospace italics</td> </tr> <tr> <td>17 = OCR-A</td> </tr> <tr> <td>18 = OCR-A italics</td> </tr> <tr> <td>19 = OCR-B</td> </tr> <tr> <td>20 = OCR-B italics</td> </tr> </table>	01 = Helvetica Bold	02 = Helvetica Bold italics	03 = Helvetica Roman	04 = Helvetica Roman italics	05 = Swiss Light	06 = Swiss Light italics	07 = Baskerville	08 = Baskerville italics	09 = Brush Script	10 = Brush Script italics	11 = Monospace	12 = Monospace italics	17 = OCR-A	18 = OCR-A italics	19 = OCR-B	20 = OCR-B italics			
01 = Helvetica Bold																			
02 = Helvetica Bold italics																			
03 = Helvetica Roman																			
04 = Helvetica Roman italics																			
05 = Swiss Light																			
06 = Swiss Light italics																			
07 = Baskerville																			
08 = Baskerville italics																			
09 = Brush Script																			
10 = Brush Script italics																			
11 = Monospace																			
12 = Monospace italics																			
17 = OCR-A																			
18 = OCR-A italics																			
19 = OCR-B																			
20 = OCR-B italics																			

dy	extension in direction Y bitmap fonts factor 0...9 vector fonts character size in 1/100 mm vector fonts autoscale field height
dx	extension in direction X bitmap fonts factor 0-9 vector fonts character size in 1/100 mm vector fonts autoscale field width
lp	distance between single characters in 1/100 mm
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.4 PDF417

AM[n]y;x;p:a;d;s;rw;rh;ec;z;dp;c;r	
A	identification for mask set
M	identification for protocol version
n	Field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 50 = PDF417
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	symbol size
rw	relation width
rh	relation height
ec	error correction level 0 - ECC Level = 0 1 - ECC Level = 2 2 - ECC Level = 6 3 - ECC Level = 14 4 - ECC Level = 30 5 - ECC Level = 62 6 - ECC Level = 126 7 - ECC Level = 254 8 - ECC Level = 510
z	style 0 = standard 1 = truncated 2 = naked 3 = bare
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom
c	number of columns 0 = automatic, 1-30
r	number of rows 0 = automatic, 3-90

5.5 MAXICODE

AM[n]y;x;p;a;d;0;sn;ns;m;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 51 = MAXICODE
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
0	dummy
sn	symbol number
ns	quantity of symbols
m	mode 2 = Structured Message (US Carrier) 3 = Structured Message (International Carrier) 4 = Default message
0	dummy
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.6 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp																															
A	identification for mask set																														
M	identification for protocol version																														
n	field number																														
y	Y position in 1/100 mm																														
x	X position in 1/100 mm																														
p	identification for phantom field 0 = print 1 = no print																														
a	identification for field type 52 = DataMatrix																														
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°																														
s	symbol size in 1/100 mm																														
aw	relation width																														
ah	relation height																														
ec	Error Correction <table border="0"> <tr> <td>0 - ECC Type = 0</td> <td>ECC Level = 0</td> <td>Overhead = 0 %</td> </tr> <tr> <td>1 - ECC Type = 2*</td> <td>ECC Level = 40</td> <td>Overhead = 33 %</td> </tr> <tr> <td>2 - ECC Type = 3</td> <td>ECC Level = 50</td> <td>Overhead = 25 %</td> </tr> <tr> <td>3 - ECC Type = 6</td> <td>ECC Level = 80</td> <td>Overhead = 33 %</td> </tr> <tr> <td>4 - ECC Type = 8</td> <td>ECC Level = 100</td> <td>Overhead = 50 %</td> </tr> <tr> <td>5 - ECC Type = 9*</td> <td>ECC Level = 110</td> <td>Overhead = 75 %</td> </tr> <tr> <td>6 - ECC Type = 10*</td> <td>ECC Level = 120</td> <td>Overhead = 50 %</td> </tr> <tr> <td>7 - ECC Type = 11*</td> <td>ECC Level = 130</td> <td>Overhead = 67 %</td> </tr> <tr> <td>8 - ECC Type = 12</td> <td>ECC Level = 140</td> <td>Overhead = 75 %</td> </tr> <tr> <td>9 - ECC Type = 26</td> <td>ECC Level = 200</td> <td>Overhead = 0 %</td> </tr> </table>	0 - ECC Type = 0	ECC Level = 0	Overhead = 0 %	1 - ECC Type = 2*	ECC Level = 40	Overhead = 33 %	2 - ECC Type = 3	ECC Level = 50	Overhead = 25 %	3 - ECC Type = 6	ECC Level = 80	Overhead = 33 %	4 - ECC Type = 8	ECC Level = 100	Overhead = 50 %	5 - ECC Type = 9*	ECC Level = 110	Overhead = 75 %	6 - ECC Type = 10*	ECC Level = 120	Overhead = 50 %	7 - ECC Type = 11*	ECC Level = 130	Overhead = 67 %	8 - ECC Type = 12	ECC Level = 140	Overhead = 75 %	9 - ECC Type = 26	ECC Level = 200	Overhead = 0 %
0 - ECC Type = 0	ECC Level = 0	Overhead = 0 %																													
1 - ECC Type = 2*	ECC Level = 40	Overhead = 33 %																													
2 - ECC Type = 3	ECC Level = 50	Overhead = 25 %																													
3 - ECC Type = 6	ECC Level = 80	Overhead = 33 %																													
4 - ECC Type = 8	ECC Level = 100	Overhead = 50 %																													
5 - ECC Type = 9*	ECC Level = 110	Overhead = 75 %																													
6 - ECC Type = 10*	ECC Level = 120	Overhead = 50 %																													
7 - ECC Type = 11*	ECC Level = 130	Overhead = 67 %																													
8 - ECC Type = 12	ECC Level = 140	Overhead = 75 %																													
9 - ECC Type = 26	ECC Level = 200	Overhead = 0 %																													
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)																														
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom																														

* not supported from printer

5.7 GS1 DataMatrix

AM[n]y;x;p;a;d;s;aw;ah;ec;f;dp																															
A	identification for mask set																														
M	identification for protocol version																														
n	field number																														
y	Y position in 1/100 mm																														
x	X position in 1/100 mm																														
p	identification for phantom field 0 = print 1 = no print																														
a	identification for field type 59 = GS1 DataMatrix																														
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°																														
s	symbol size in 1/100 mm																														
aw	relation width																														
ah	relation height																														
ec	Error Correction <table border="0"> <tr> <td>0 - ECC Type = 0</td> <td>ECC Level = 0</td> <td>Overhead = 0 %</td> </tr> <tr> <td>1 - ECC Type = 2*</td> <td>ECC Level = 40</td> <td>Overhead = 33 %</td> </tr> <tr> <td>2 - ECC Type = 3</td> <td>ECC Level = 50</td> <td>Overhead = 25 %</td> </tr> <tr> <td>3 - ECC Type = 6</td> <td>ECC Level = 80</td> <td>Overhead = 33 %</td> </tr> <tr> <td>4 - ECC Type = 8</td> <td>ECC Level = 100</td> <td>Overhead = 50 %</td> </tr> <tr> <td>5 - ECC Type = 9*</td> <td>ECC Level = 110</td> <td>Overhead = 75 %</td> </tr> <tr> <td>6 - ECC Type = 10*</td> <td>ECC Level = 120</td> <td>Overhead = 50 %</td> </tr> <tr> <td>7 - ECC Type = 11*</td> <td>ECC Level = 130</td> <td>Overhead = 67 %</td> </tr> <tr> <td>8 - ECC Type = 12</td> <td>ECC Level = 140</td> <td>Overhead = 75 %</td> </tr> <tr> <td>9 - ECC Type = 26</td> <td>ECC Level = 200</td> <td>Overhead = 0 %</td> </tr> </table>	0 - ECC Type = 0	ECC Level = 0	Overhead = 0 %	1 - ECC Type = 2*	ECC Level = 40	Overhead = 33 %	2 - ECC Type = 3	ECC Level = 50	Overhead = 25 %	3 - ECC Type = 6	ECC Level = 80	Overhead = 33 %	4 - ECC Type = 8	ECC Level = 100	Overhead = 50 %	5 - ECC Type = 9*	ECC Level = 110	Overhead = 75 %	6 - ECC Type = 10*	ECC Level = 120	Overhead = 50 %	7 - ECC Type = 11*	ECC Level = 130	Overhead = 67 %	8 - ECC Type = 12	ECC Level = 140	Overhead = 75 %	9 - ECC Type = 26	ECC Level = 200	Overhead = 0 %
0 - ECC Type = 0	ECC Level = 0	Overhead = 0 %																													
1 - ECC Type = 2*	ECC Level = 40	Overhead = 33 %																													
2 - ECC Type = 3	ECC Level = 50	Overhead = 25 %																													
3 - ECC Type = 6	ECC Level = 80	Overhead = 33 %																													
4 - ECC Type = 8	ECC Level = 100	Overhead = 50 %																													
5 - ECC Type = 9*	ECC Level = 110	Overhead = 75 %																													
6 - ECC Type = 10*	ECC Level = 120	Overhead = 50 %																													
7 - ECC Type = 11*	ECC Level = 130	Overhead = 67 %																													
8 - ECC Type = 12	ECC Level = 140	Overhead = 75 %																													
9 - ECC Type = 26	ECC Level = 200	Overhead = 0 %																													
f	format ID of data 0 - Format ID = 11 (numeric, 2000 characters)* 1 - Format ID = 1 (numeric, 500 characters) 2 - Format ID = 2 (alphabetical, 500 characters) 3 - Format ID = 3 (alphabetical + pointers, 500 characters) 4 - Format ID = 4 (alphanumeric, 500 characters) 5 - Format ID = 5 (7 Bit, 500 characters) 6 - Format ID = 6 (8 Bit, 500 characters) 7 - Format ID = 7 (pre-programmed, 500 characters)* 8 - Format ID = 12 (alphabetical, 2000 characters) 9 - Format ID = 14 (alphanumeric, 2000 characters)																														
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom																														

* not supported from printer

5.8 CODABLOCK F

AM[n]y;x;p;a;d;h;nc;nl;m;s;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = np printout
a	identification for field type 53 = CODABLOCK F
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
h	line height in symbol
nc	quantity of characters/line
nl	quantity of lines
m	mode
s	module size
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.9 GS1 DataBar (RSS Code)

AM[n]y;x;p;a;d;s;m;k;t;0;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 54 = GS1 DataBar (RSS)
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
s	number of segments per line [2...22]
m	module width [1 ...12]
k	separator height [1,2]
t	symbol type 1 = GS1 DataBar Omnidirectional (RSS-14) 2 = GS1 DataBar Truncated (RSS-14 Truncated) 3 = GS1 DataBar Stacked (RSS-14 Stacked) 4 = GS1 DataBar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional) 5 = GS1 DataBar Limited (RSS Limited) 6 = GS1 DataBar Expanded (RSS Expanded)
0	not used
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.10 QR Code

AM[n]y;x;p;a;d;mo;cs;ms;cw;ec;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 57 = QR Code
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
mo	code model 1 = Code Model 1 2 = Code Model 2
cs	character set N = numeric A = alphanumeric B = 8-bit byte K = kanji
ms	masking -1 = auto 0-7 = mask x 8 = no masking
cw	line width in 1/100 mm per module possible values: 0-800
ec	error correction (restoring capacity) L = 7 % M = 15 % Q = 25 % H = 30 %
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.11 Aztec Code

AM[n]y;x;p;a;d;h;f;ec;m;0;dp																																							
A	identification for mask set																																						
M	identification for protocol version																																						
n	field number																																						
y	Y position in 1/100 mm																																						
x	X position in 1/100 mm																																						
p	identification for phantom field 0 = print 1 = no print																																						
a	identification for field type 61 = Aztec Code																																						
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°																																						
h	symbol size in 1/100 mm (max 1 cm)																																						
f	format <table style="width: 100%; border: none;"> <tr> <td>0 = Auto</td> <td>19 = C79xC79</td> </tr> <tr> <td>1 = C15xC15 Compact</td> <td>20 = C83xC83</td> </tr> <tr> <td>2 = C19xC19 Compact</td> <td>21 = C87xC87</td> </tr> <tr> <td>3 = C23xC23 Compact</td> <td>22 = C91xC91</td> </tr> <tr> <td>4 = C27xC27 Compact</td> <td>23 = C95xC95</td> </tr> <tr> <td>5 = C19xC19</td> <td>24 = C101xC101</td> </tr> <tr> <td>6 = C23xC23</td> <td>25 = C105xC105</td> </tr> <tr> <td>7 = C27xC27</td> <td>26 = C109xC109</td> </tr> <tr> <td>8 = C31xC31</td> <td>27 = C113xC113</td> </tr> <tr> <td>9 = C37xC37</td> <td>28 = C117xC117</td> </tr> <tr> <td>10 = C41xC41</td> <td>29 = C121xC121</td> </tr> <tr> <td>11 = C45xC45</td> <td>30 = C125xC125</td> </tr> <tr> <td>12 = C49xC49</td> <td>31 = C131xC131</td> </tr> <tr> <td>13 = C53xC53</td> <td>32 = C135xC135</td> </tr> <tr> <td>14 = C57xC57</td> <td>33 = C139xC139</td> </tr> <tr> <td>15 = C61xC61</td> <td>34 = C143xC143</td> </tr> <tr> <td>16 = C67xC67</td> <td>35 = C147xC147</td> </tr> <tr> <td>17 = C71xC71</td> <td>36 = C151xC151</td> </tr> <tr> <td>18 = C75xC75</td> <td></td> </tr> </table>	0 = Auto	19 = C79xC79	1 = C15xC15 Compact	20 = C83xC83	2 = C19xC19 Compact	21 = C87xC87	3 = C23xC23 Compact	22 = C91xC91	4 = C27xC27 Compact	23 = C95xC95	5 = C19xC19	24 = C101xC101	6 = C23xC23	25 = C105xC105	7 = C27xC27	26 = C109xC109	8 = C31xC31	27 = C113xC113	9 = C37xC37	28 = C117xC117	10 = C41xC41	29 = C121xC121	11 = C45xC45	30 = C125xC125	12 = C49xC49	31 = C131xC131	13 = C53xC53	32 = C135xC135	14 = C57xC57	33 = C139xC139	15 = C61xC61	34 = C143xC143	16 = C67xC67	35 = C147xC147	17 = C71xC71	36 = C151xC151	18 = C75xC75	
0 = Auto	19 = C79xC79																																						
1 = C15xC15 Compact	20 = C83xC83																																						
2 = C19xC19 Compact	21 = C87xC87																																						
3 = C23xC23 Compact	22 = C91xC91																																						
4 = C27xC27 Compact	23 = C95xC95																																						
5 = C19xC19	24 = C101xC101																																						
6 = C23xC23	25 = C105xC105																																						
7 = C27xC27	26 = C109xC109																																						
8 = C31xC31	27 = C113xC113																																						
9 = C37xC37	28 = C117xC117																																						
10 = C41xC41	29 = C121xC121																																						
11 = C45xC45	30 = C125xC125																																						
12 = C49xC49	31 = C131xC131																																						
13 = C53xC53	32 = C135xC135																																						
14 = C57xC57	33 = C139xC139																																						
15 = C61xC61	34 = C143xC143																																						
16 = C67xC67	35 = C147xC147																																						
17 = C71xC71	36 = C151xC151																																						
18 = C75xC75																																							
ec	error correction (only if format = 0) 1 = 10 % 2 = 23 % 3 = 36 % 4 = 50 %																																						
m	mode 0 = data 1 = runes (figures 0-255) 2 = Unicode (8 Bit ASCII) 3 = GS1 (not yet available)																																						
0	dummy																																						
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom																																						

5.12 Rectangle

AM[n]y;x;p;a;h;b;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = print 1 = no print
a	identification for field type 10 = rectangle
h	rectangle height in 1/100 mm
b	rectangle height in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.13 Line

AM[n]y;x;p;a;d;l;s;m;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
p	identification for phantom field 0 = printout 1 = no printout
a	identification for field type 11 = line
d	rotation 0 = horizontal 1 = vertical
l	length in 1/100 mm
s	line width in 1/100 mm
m	line type; 1 digit
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

5.14 Internal Graphic

AM[n]y;x;p;a;d;dy;dx;dp	
A	identification for mask set
M	identification for protocol version
n	field number
y	Y position in 1/100 mm
x	X position in 1/100 mm
P	identification for phantom field 0 = print 1 = no print
a	identification for field type 3 = internal graphic
d	rotation 0 = 0° 1 = 90° 2 = 180° 3 = 270°
dy	rotation in direction Y
dx	rotation in direction X
dp	datum point 1 = left top 2 = centre top 3 = right top 4 = left centre 5 = centre centre 6 = right centre 7 = left bottom (default) 8 = centre bottom 9 = right bottom

6 Text Set

BM[n]text	
B	identification for text set
M	identification for extended protocol
n	field number
text	data contents, text

BV[n]text	
B	identification for text set
V	identification for selection by field name
n	field name
text	data contents, text

BF[n]text	
B	identification for text set
F	identification for selection by free definable field number
n	field number
text	data contents, text

6.1 Examples

Mask set

Mask statement	[SOH]AM[1]2000;4000;0;1;0;2;1;1;0[ETB]
field number	_____
y position 20 mm	_____
x position 40 mm	_____
no phantom field	_____
bitmap font	_____
position 0	_____
font 2	_____
extension in y direction 1	_____
extension in x direction 1	_____
no blank pixel	_____

Texts set

Text statement	[SOH]BM[1]this is a test [ETB]
field number 1	_____
text "this is a test"	_____

Text set with variable definition:

[SOH]BM[125]=CN(0,0,3,1,1)000[ETB]

Example label

ASCII data	Identification
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ ^{C_R} ^{L_F}	mask set for bar code
⊗BM[1]444444444444⊕ ^{C_R} ^{L_F}	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F}	five mask sets vector font / proportional font
⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F}	
⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ ^{C_R} ^{L_F}	
⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ ^{C_R} ^{L_F}	
⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ ^{C_R} ^{L_F}	
⊗BM[2]Art.Nr. ⊕ ^{C_R} ^{L_F}	five appropriate text sets
⊗BM[3]444444⊕ ^{C_R} ^{L_F}	
⊗BM[4]Artikelbezeichnung⊕ ^{C_R} ^{L_F}	
⊗BM[5]EUR⊕ ^{C_R} ^{L_F}	
⊗BM[6]99,-- ⊕ ^{C_R} ^{L_F}	
⊗FBA000r06000000⊕	number of lines
⊗FBBA00r00001000⊕	number of items
⊗FBC000r00000000⊕	start

: graphic data in PCX format

⊗: SOH (1_{hex} bzw 5E_{hex})

⊕: ETB (17_{hex} bzw. 5F_{hex})

^{C_R}: CarriageReturn (0D_{hex})

^{L_F}: LineFeed (0A_{hex})

- It is recommended to observe that directly after the final sign (ETB) no separator res. fill character such as $C_R L_F$ is indicated.
- The printer supports the following PCX versions: 5, 3, 2 and 0.
- It is necessary that the corresponding PCX-file is available as monochrome (black/white).
- The graphic has to be available in the original size as the printer is not able to change the size by itself.

**NOTICE!**

Before print start, indicated by parameter set 'FBC', the definition of field number, lines and pieces has to be effected via the parameter sets (FBA res. FBB).

7.3 Example PCX File

-*** PCX_GRAPHIC-INFO ***-

⊗AX0010015300100941⊕#####	
⊗AM[1]3600;4600;0;33;0;1500;0;4;1;1⊕ $C_R L_F$	mask set for bar code
⊗BM[1]444444444444⊕ $C_R L_F$	appropriate text set
⊗AM[2]600;4700;0;4;0;1;300;200;24⊕ $C_R L_F$ ⊗AM[3]600;3100;0;4;0;1;400;300;24⊕ $C_R L_F$ ⊗AM[4]1100;4700;0;4;0;1;400;300;24⊕ $C_R L_F$ ⊗AM[5]1800;4700;0;4;0;1;300;200;24⊕ $C_R L_F$ ⊗AM[6]1900;3700;0;4;0;1;600;400;24⊕ $C_R L_F$	five mask set vector font / proportional font
⊗BM[2]Art.Nr. ⊕ $C_R L_F$ ⊗BM[3]44444⊕ $C_R L_F$ ⊗BM[4]Artikelbezeichnung⊕ $C_R L_F$ ⊗BM[5]EUR⊕ $C_R L_F$ ⊗BM[6]99,-- ⊕ $C_R L_F$	five appropriate text sets
⊗FBA00r06000000⊕	set number of lines (FBA...)
⊗FBBA00r00001000⊕	set quantity (FBBA...)
⊗FBC000r00000000⊕	start print order (FBC...)

: Grafikdaten im PCX Format
⊗: SOH (1_{hex} bzw 5E_{hex})
⊕: ETB (17_{hex} bzw. 5F_{hex})
 C_R : CarrigeReturn (0D_{hex})
 L_F : LineFeed (0A_{hex})

8 Variables

8.1 Set Structure

```
SOH BM [n] = v v ( p1 p2 p... pn ) t1 t2 t... t70 ETB
```

= start of function
 vv variable type
 SC link field
 CN counter
 CC extended counter
 CL date/time
 CU currency variable
 SH shift variable
 MD memory card data
 (start of variable parameter block
 p1...pn variable parameter
) end of variable parameter block



NOTICE!

In case you want to print a text which corresponds exactly to the variable definition then you have to place '!' before.

```
SOH BM [n] ! = v v ( p1 p2 p... pn ) t1 t2 t... t70 ETB
```

8.2 Link Field

```
SOH BM [n] = S C ( p1 ; p2 ; p... ; pn ) t1 t2 t... t70 ETB
```

=SC identification of link field
 p1...pn identification of link elements (field number or constant text)
 field number is entered without leading '0'
 constant text is included in " but these marks are not printed



NOTICE!

Reference fields can be constant text or variables but no link fields.

Example

=SC(1;2;3) --> Printout: Field1Field2Field3

=SC(1;"constant";2) --> Printout: Field1constantField2

8.3 Counter

```
SOH BM [n] = C N ( t ; m ; c ; +/- s ; i ; h ; r ) t1 t2 t... t70 ETB
```

= CN	identification counter
t	type of counter 0 numerical 1 letters only 2...36 radix, base of the counter
m	function mode 0 standard 1 return to start value 2 enter the start value at the beginning of printing (default = existing start value) 3 enter the start value at the beginning of printing (default = last final number) 4 reset start value at cycle end (only for DPM IIIi) 5 reset start value by I/O signal 6 time-controlled resetting 7 time-controlled resetting with input of initial value (default = last final value)
c	digit where the numbering starts counting
+/-	direction + adding - subtracting
s	step width
i	update interval (number of labels with identical number)
h	time by which the counter is reset (function mode 6 and 7) in format 'HH:MM' e.g. 00:00 = reset counter at 0:00 (optional, only for function mode 6 and 7)
r	reset value (optional, only for function mode 6 and 7; default = text and/or initial value) Limitation: The time-controlled resetting of counter variable is only effected in case of an active print order. If a print order is cancelled before the specified time and afterwards again restarted then no resetting of counter value is effected.
t1, t2, ...	text res. start value of counter

Example:

Input: =CN(10;7;4;+1;1;06:00;0001)1234

The enquiry for the initial value is effected at print start and
at 6:00 the counter variable is reset to value 0001.

8.4 Extended Counter

SOH	BM	[n]	=	C	C	(+/-	s	;	i	;	m	;	z	;	n	;	x)	t	ETB
-----	----	-----	---	---	---	---	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

= CC	identification of numeric counter
+/-	direction
	+ counter adding
	- counter subtracting
s	step width
i	update interval (number of labels with identical number)
m	function mode
	0 standard
	1 return to start value
	2 enter the start value at the beginning of printing (default = existing start value)
	3 enter the start value at the beginning of printing (default = last final number)
	4 reset start value at cycle end (only for DPM IIIi)
	5 set min. / max. value
	6 set start value
	7 print end
z	leading zeros
	0 no leading zeros
	1 printout with leading zeros
n	minimum value (max. -999999999)
x	maximum value (max. 999999999)
t	start value (the number of digits determines the format for the printout with leading zeros (max. 999999999)

Example:

Input: =CC(+1;2;5;0;1,999)0050

Printout: 50, 51, ... 999, 1, 2, ...

8.5 Date and Time

```
SOHBM[n]=CL(m;d;i;n;c;mo;pd;pm;md;mm;rw;ws)t1t...t70ETB
```

= CL identification date/time

m month offset to the actual date

d day offset to the actual date

i update interval

(0 = at the beginning of a print order, 1 = each label)

Optional parameters

n minute offset to the actual time
(negative entry/value possible)

c correction month overflow

(0 = change to the next month, 1 = remain in current month)

Optional parameters for BBE date

mo input mode

0: standard; display current date of real time clock

1: display calculated date, modification possible

2: display calculated date, no modification possible

pd max. positive correction days

pm max. positive correction months

md max. negative correction days

mm max. negative correction months

Optional parameters for rounded date

rw rounded weekday: 1 = Sunday ... 7 = Saturday; 0 = no rounding

ws start of week, format: "D-HH:MM",
e.g. 1-00:00 = Sunday, 0:00 Uhr

Example

Actual date as per Real Time Clock: 22.01.10

Input: =CL(0;0;0)<DD.MO.> Printout: 08.12.

Input: =CL(2;1;0)<DD.MO.> Printout: 09.02.

Example for BBE date

Input: =CL(0;0;0;0;0;1;3;2;3;2)<DD.MO.>

At print start the calculated date is displayed at the printer and can be modified (+/- 3 days and +/- 2 months):

Display: ID_1 DD:MO:YY
ID_1 08.12.11

Example for rounded date

The beginning of the week is on Sunday (08.12.) at 00:00. The date of Monday should be printed the whole week.

Input: =CL(0;0;0;0;0;0;0;0;0;2;1-00:00)<DD.MO.>

Current date	Rounded date
07.12. 23:59:59	02.12.
08.12. 00:00:00	09.12.
09.12.	09.12.
14.12. 23:59:59	09.12.
15.12. 00:00:00	16.12.

8.6 Format Identifier (Date & Time)

Standard format	
HH	Hours 2-digit (24 hours)
HE	Hours 2-digit (12 hours)
MI	Minutes 2-digit
SS	Seconds 2-digit
AM	AM/PM output
DD	Day 2-digit
MO	Month 2-digit
YYYY	Year 4-digit
YY	Year 2-digit
Y	Year 1-digit
WW	Calendar week
DW	Day of week (Sunday = 0)
DW1	Day of week (Sunday = 1)
DwX	Day of week An arbitrary ASCII character can be used for x, from which it is counted consecutively.
DOWxxxxxx	Day of week - variable For x, any ASCII character can be used. The first ,x' denominates Sunday, the next denominates Monday and so on until Saturday For each weekday a character must be created
DOY	Day of year 3-digit (First January = 1)
DY	Day of year 3-digit (First January = 0)
Examples	
DD.MO.YY	22.01.10
MO/DD/YYYY	01/22/2010
YY-MO-DD	10-01-22
YYMODD	100122

The format identifier 'HE' and 'AM'/'am'/'Am' are supplemented. Therefore the output of hours in 12-hours mode is possible. By the additional output of format identifier 'AM' the output of time in american/english format is possible.

Example

```
=CL(0;0;0;0)<HH:MI:SS>      --> 15:30:00
=CL(0;0;0;0)<HE:MI:SS>      --> 03:30:00
=CL(0;0;0;0)<HE:MI:SS AM>   --> 03:30:00 PM
=CL(0;0;0;0)<HE:MI:SS am>   --> 03:30:00 pm
=CL(0;0;0;0)<HE:MI:SS Am>   --> 03:30:00 p.m.
```

By separating the output of time and AM/PM output in 2 text fields, also the following output format is possible:

```
--> 03:30:00 pm
```

Extended format	
XMO	Name of month short
XSO	Name of month long
XSD	Weekday short
XLD	Weekday long
For X you can enter the country identification of desired language	
C = Canadian D = Danish E = English F = French G = German I = Italian N = Dutch O = Norwegian S = Spanish U = Finnish W = Swedish	
Examples:	
DD.EMO.YY	22.JAN.10
DD.ESO YYYY	22. January 2010
ELD,DD.GMO.YY	Friday, 22. JAN.10
ESD,DD.MO.YY	FR, 22.01.10

Extended format - XMO

C	JA	FE	MR	AL	MA	JN	JL	AU	SE	OC	NO	DE
D	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC
E	JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
F	JAN	FEV	MAR	AVR	MAI	JUIN	JUIL	AOU	SEP	OCT	NOV	DEC
G	JAN	FEB	MRZ	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DEZ
I	GEN	FEB	MAR	APR	MAG	GIU	LUG	AGO	SET	OTT	NOV	DIC
N	JAN	FEB	MRT	APR	MEI	JUN	JUL	AUG	SEP	OKT	NOV	DEC
O	JAN	FEB	MAR	APR	MAI	JUN	JUL	AUG	SEP	OKT	NOV	DES
S	ENE	FEB	MAR	ABR	MAY	JUN	JUL	AGO	SEP	OCT	NOV	DIC
U	TAM	HEL	MAA	HUH	TOU	KES	HEI	ELO	SYU	LOK	MAR	JOU
W	JAN	FEB	MAR	APR	MAJ	JUN	JUL	AUG	SEP	OKT	NOV	DEC

Extended format - XSO

C	January	February	March	April	May	June
D	Januar	Februar	Marts	April	Maj	Juni
E	January	February	March	April	May	June
F	Janvier	Février	Mars	Avril	Mai	Juin
G	Januar	Februar	Maerz	April	Mai	Juni
I	Gennaio	Febbraio	Marzo	Aprile	Maggio	Giugno
N	Januari	Februari	Maart	April	Mei	Juni
O	Januar	Februar	Mars	April	Mai	Juni
S	Enero	Febrero	Marzo	Abril	Mayo	Junio
U	Tammikuu	Helmikuu	Maaliskuu	Huhtikuu	Toukokuu	Kesaekuu
W	Januari	Februari	Mars	April	Maj	Juni

C	July	August	September	October	November	December
D	Juli	August	September	Oktober	November	December
E	July	August	September	October	November	December
F	Juillet	Août	Septembre	Octobre	Novembre	Décembre
G	Juli	August	September	Oktober	November	Dezember
I	Luglio	Agosto	Settembre	Ottobre	Novembre	Dicembre
N	Juli	Augustus	September	Oktober	November	December
O	Juli	August	September	Oktober	November	Desember
S	Julio	Agosto	Septiembre	Octubre	Noviembre	Diciembre
U	Heinaekuu	Elokuu	Syyskuu	Lokakuu	Marraksuu	Joulukuu
W	Juli	Augusti	September	Oktober	November	December

Extended format - XSD

C	SUN	MON	TUE	WED	THU	FRI	SAT
D	SO	MA	TI	ON	TO	FR	LO
E	SUN	MON	TUE	WED	THU	FRI	SAT
F	DIM	LUN	MAR	MER	JEU	VEN	SAM
G	SO	MO	DI	MI	DO	FR	SA
I	DOM	LUN	MAR	MER	GIO	VEN	SAB
N	ZO	MA	DI	WO	DO	VR	ZA
O	SO	MA	TI	ON	TO	FR	LO
S	DOM	LUN	MAR	MIE	JUE	VIE	SAB
U	SU	MA	TI	KE	TO	PE	LA
W	SO	LA	TI	ON	TO	FR	LO

Extended format - XLD

C	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
D	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
E	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
F	Dimanche	Lundi	Mardi	Mercredi	Jeudi	Vendredi	Samedi
G	Sonntag	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag
I	Domenica	Lunedì	Martedì	Mercoledì	Giovedì	Venerdì	Sabato
N	Zondag	Maandag	Dinsdag	Woensdag	Donderdag	Vrijdag	Zaterdag
O	Søndag	Mandag	Tirsdag	Onsdag	Torsdag	Fredag	Lørdag
S	Domingo	Lunes	Martes	Miércoles	Jueves	Viernes	Sábado
U	Sunnuntai	Maanantai	Tiistai	Keski-viikko	Torstai	Perjantai	Lauantai
W	Söndag	Måndag	Tisdag	Onsdag	Torsdag	Fredag	Lördag

8.7 Currency Variable

SOH	BM	[n]	=	C	U	(a	;	b	;	c	;	d	;	e	;	f	;	g)	t1	t2	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	------	-----	-----

= CU Signification of variable Euro

a ANSI-Code of thousand separator as decimal figure

b ANSI-Code of comma separator as decimal figure

c Quantity of numbers after the comma as decimal figure

d Operand A Before the processing the variable Euro

e Operand B calculates the term

f Operand C A x B
C

g Rounding format

t1, t2, ... Format string, is indicated by "< >"

Example:

In case the contents of field 20 has to be converted from USD into EUR the definition of variable for the user defined format is as follows:

```
B01 '=CU(46;44;2;20;"1,0";"0,68861";"0,01")Result: <>Euro'
B20 1.250,44 USD
```

```
Printout:          1.250,44 USD
Result:           1.815,89 Euro'
```

* 1 USD = 0,68861 Euro (11.01.2010)

8.8 Shift Variable

```
SOH BM [n] = S H ( ) t1 t2 t... t70 ETB
```

= SH identification of shift variable



NOTICE!

The shift variable did not need any parameters. The settings for the output are defined with the corresponding parameter sets. (see above)

Beispiel

The shift times are defined: 00:00 - 11:59 "Shift1"
 12:00 - 23:59 "Shift2"

```
=SH() Printout at 10:00 Uhr: "Shift1"
=SH() Printout at 13:00 Uhr: "Shift2"
```

Set shift times

```
SOH F C I D - - r N N H H M M h h m m ETB
```

NN = ID [01 ... 24]
 HH = start hour
 MM = start minute
 hh = end hour
 mm = end minute

Get shift variable

```
SOH F C I D - - w N N p p p p p p p p p p ETB
```

Answer

```
SOH A N N H H M M h h m m p p p p p p p p ETB
```

Set shift text

```
SOH F C I E - - r N N T T T T T T T T T T ETB
```

NN = ID [01 ... 10]
 T = max. 24 characters

Get shift variable

```
SOH F C I E - - w N N p p p p p p p p ETB
```

Answer

```
SOH A N N ; T T T T T T T T T T ; p p p p p p p p ETB
```

8.9 User Guiding

```
SOH BM [n] = U G ( c ; t ; m ; ap ; ae ; sp ) t1 t2 t... t70 ETB
```

= UG identification user guiding

c start position for the entry

t type of entry
 0 numerical
 1 alphanumerical

m mode of entry
 0 do not jump over special characters
 1 jump over special characters


ap alignment at printing
 0 aligned to the right side

ae alignment at entry
 0 aligned to the right side

sp prompt text for the variable, max. 24 characters
 The entry has to be included in ".

Example

Entry: =UG(1;0;0;0;0;"Enter article no.")<123456>
 Display:

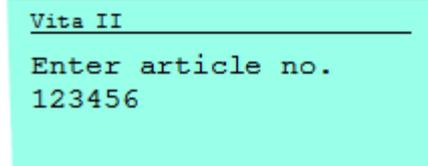

```
Vita II
-----
Enter article no.
123456
```


8.10 User Guiding with Mask

```
SOH|BM|[n]=UM(c;t;m;ap;ae;sp;d;ma)t1t2t...t70|ETB
```

= UM	identification user guiding with mask
c	start position for the entry
t	type of entry (is ignored with existing mask definition) 0 numerical 1 alphanumerical
m	mode of entry (is ignored with existing mask definition) 0 do not jump over special characters 1 jump over special characters
ap	alignment at printing 0 aligned to the right side
ae	alignment at entry (always left aligned with existing mask definition) 0 right aligned 1 left aligned, cursor at the beginning of the text 2 left aligned, cursor at the start position 3 right aligned, remove fill characters 4 left aligned, cursor at the beginning of the text, remove fill characters 5 left aligned, cursor at the start position, remove fill characters
sp	prompt text for the variable, max. 24 characters The entry has to be included in ".
d	deleting setpoint value 0 setpoint value remains at key entry (inserting mode) 1 with first key press the setpoint value disappears 2 setpoint value is retained (overwrite mode)
ma	definition of mask possible mask characters are 9 numbers only # only numbers and leading signs ? letters only a alphanumeric characters (letters and numbers) C any characters

Example

Entry: =UM(1;0;0;0;0;"Enter article no.";0;"999-aa")<123-xx>
Display:

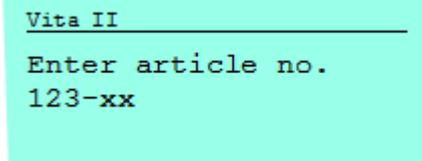

```
Vita II
Enter article no.
123-xx
```

8.11 Memory Card Data

```
SOH|BM|[n]=MD(FN="filename";SE='x';CH=x;SC="x";SF="x";RC="x")ETB
```

= MD	identification of memory card data
FN	file name of table onto memory card with CSV data
SE	Separator sign (default = ';')
CH	column name in the first line (0 = no, 1 = yes)
SC	name and/or number of column that should be referenced
SF	field name and/or field index of field onto the label, which contains the searched data
RC	name and/or number of column, which contains the data to be printed




NOTICE!

If in parameter SF a field name is indicated, this must have been defined for the appropriate field by an AC attribute statement!

Example

```
AC[1]NAME="FCODE"
BM[2]=MD(FN="a:\daten.csv";SE=';';CH=1;SC="Farbcode";SF="FCODE";
RC="IC-Nummer")
```

Field 1	Output Field 2
00001	121478242
23252	784587448

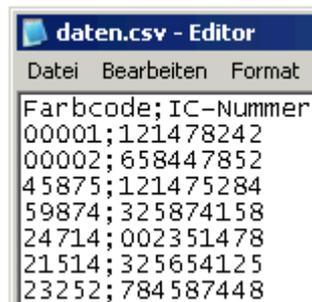

8.12 GS1-128 Parser



NOTICE!

By means of this variable type, the content of an application identifier in a GS1-128 bar code can be determined.

```
SOH|BM|[n]=A|(|p;Ai)|ETB
```

= AI	identification of GS1-128 parser
p	identification of the link element (field number)
Ai	application identifier

Example

```
Field 1 ="00123456789012345675" GS1-128 with AI00
=AI(1;"00") Printout: 123456789012345675
```

8.13 EPC Calculation (Electronic Product Code)

SOH BM [n] = E P C (M ; L ; F ; P ; N1 ; {N2}) ETB

- = EPC identification of EPC calculation
- M coding method
- L length of manufacturer number (company prefix)
- F filter value
- P verification of check digit
- N1 identification of link element (field number)
- N2 identification of link element (field number) - optional

For more information, visit the following web sites:
www.epcglobalinc.org or www.gs1.org

Param.	Value range		
M	0 = coding method SSCC96	3 = coding method GRAI96	
	1 = coding method SGTIN96	4 = coding method GIAI96	
	2 = coding method SGLN96		
L	6...12		
F	Coding	Filter value	Binary
	SSCC96	All Others	000
Undefined		001	
Logistical / Shipping Unit		010	
SGTIN96	All Others	000	
	Retail Consumer Trade Item	001	
	Standard Trade Item Grouping	010	
	Single Shipping/ Consumer Trade Item	011	
SGLN	All Others	000	
	Physical Location	001	
GRAI	All Others	000	
	GIAI	All Others	000
P	0 = no verification; 1 = verification		
N1, N2	any		

Example 1

Field 1 ="00123456789012345675" GS1-128 with AI00
 Field 2 =AI(1;"00") --> Printout: 123456789012345675
 Field 3 =EPC(0;12;0;1;2) --> Printout: 3100DA7557D32C38E7000000
 The EPC is calculated with the content of Field 2. The coding method SSCC96 is used. In Field 2 a valid NVE must be represented (18-digit, correct check digit).

Example 2

Field 1 ="4141234567890128254123" GS1-128 with AI00, AI254
 Field 2 =AI(1;"414") --> Printout: 1234567890128
 Field 3 =AI(1;"254") --> Printout: 123
 Field 4 =EPC(2;10;0;0;2;3) --> Printout: 3208499602D218000000007B
 The EPC is calculated with the content of Field 2 and Field 3. The coding method SGLN96 is used. In Field 2 a valid ILN must be represented (13-digit). In the example, Field 3 contains an optional serial number. No verification of check digit of ILN (8) is effected.

* only when using option RFID

8.14 Check Digit

SOH	BM	[n]	=	C	D	(d	;	s	;	l	;	t	;	w	;	m	;	r	;	o)	t1	t...	t70	ETB
-----	----	-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	------	-----	-----

= CD Identification of check digit

d Data for check digit calculation (field number of constant text)
Constant text is enclosed in "".

s Start position within data

1 ...n Start calculation at digit x

l Check digit type

0 Modulo 10 (weighting 3)

1 Modulo 11

2 Modulo 43

3 Modulo 47 (weighting 15)

4 Modulo 47 (weighting 20)

5 Modulo 103

6 Customized

Optional parameters for customized check digit

w Weighting.

Constant text enclosed in "" - contains the individual weighting values or an interval.

Individual values: "x₁,x₂"

Interval: "x₁...x₂"

m Modulo

r Add result to

o Print only one digit

0 No

1 Yes

Example

Entry: =CD("123456789012";0;0;0)

Printout: 8

Entry: =CD("1234567890";0;0;6;"1,3";10;10;1)

Printout: 5

8.15 Substring

SOH	BM	[n]	=	SS	(d	;	s	;	l)	ETB
-----	----	-----	---	----	---	---	---	---	---	---	---	-----

- = SS Identification of substring
- d Data used for substring extraction (field number or field name or constant text.
Constant text is enclosed in "").
- s Start position within data. If this parameter is omitted, the substring extraction starts with the 1st character of the data string.
1 n Start at digit x
- l Number of digits. If this parameter is omitted, all characters from the start position to the end of the data string are returned.
1 ...n At the start position x digits

Example:

Entry: =SS("1234567890";4;3)
Printout: 456
Field "ARTIKELNR" has the contents "370012330295"

Entry: =SS(ARTIKELNR;1;4)
Printout: 3700

9 Parameter Sets

9.1 Label Parameters

Set label photocell type

```
SOH F C D E - - r N - - - - - - ETB
```

N: 0 = transmission photocell normal
 N: 1 = not used
 N: 2 = transmission photocell inverse
 N: 3 = not used
 N: 4 = not used

Get label photocell type

```
SOH F C D E - - w p p p p p p p p ETB
```

Answer

```
SOH A N - - - - - - p p p p p p p p ETB
```

Set label type

```
SOH F C D A - - r N - - - - - - ETB
```

N: 0 = change to adhesive labels (automatically measure process)
 N: 1 = change to continuous labels

Get label type

```
SOH F C D A - - w p p p p p p p p ETB
```

Answer

```
SOH A N - - - - - - p p p p p p p p ETB
```

Measure label

In case of loading a new label roll, start measuring by this command.

```
SOH F C B - - - r - - - - - - - - ETB
```

The current label and gap length in the printer can be sent to the Host computer:

```
SOH F C B - - - w p p p p p p p p ETB
```

After this command the printer sends the following answer:

Answer

```
SOH A E E E E S S S S p p p p p p p p ETB
```

EEEE = label length in mm (ASCII)
 SSSS = gap length in mm (ASCII)

Set label length in 1/100 mm

SOH F C C L - - r N N N N N N N N - ETB

N = value of label length in 1/100 mm, 7 digit ASCII number

Get label length in 1/100 mm

SOH F C C L - - w N N N N N N N N - ETB

Answer

SOH A N N N N N N N N - p p p p p p p p ETB

Set gap length in 1/100 mm

SOH F C C M - - r M M M M M - - - ETB

M = value of gap length in 1/100 mm, 5 digit ASCII number

Get gap length in 1/100 mm

SOH F C C M - - w M M M M M - - - ETB

Answer

SOH A M M M M M - - - p p p p p p p p ETB

Set label width in 1/100 mm

SOH F C C O - - r N N N N N N N N ETB

N = indication of label width in 1/100 mm, 7 digit ASCII number

Get label width in 1/100 mm

SOH F C C O - - w P P P P P P P P ETB

Answer

SOH A N N N N N N N N - p p p p p p p p ETB

Set label error length in mm

SOH F C D G A - r N N N - - - - ETB

NNN = indication of label error length in mm (1 ... 999)

Get label error length

SOH F C D G A - w p p p p p p p p ETB

Answer

SOH A N N N - - - - p p p p p p p p ETB

Set label synchronization

SOH F C D G B - r N - - - - - - ETB

N: 0 = Off

N: 1 = On

Get label synchronization

SOH F C D G B - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set number of columns

SOH F C C H A - r N - - - - - - ETB

N = number of columns (1 ... 9)

Get number of columns

SOH F C C H A - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set column width

SOH F C C H B - r N N N - - - - - ETB

NNN = indication of column width in 1/10 mm (0 ... 999)

Get column width

SOH F C C H B - w p p p p p p p p ETB

Answer

SOH A N N N - - - - - - p p p p p p p p ETB

Set label alignment

SOH F C C J - - r N - - - - - - ETB

N: 0 = left

N: 1 = centre

N: 2 = right

Get label alignment

SOH F C C J - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set contrast

SOH	F	C	A	B	-	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: indication of contrast in % (010 ... 200)
 necessary to transmit a 3 digit ASCII number.

Get contrast

SOH	F	C	A	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set flip label

SOH	F	C	D	O	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = flip label Off
 N: 1 = flip label On

Get flip label

SOH	F	C	D	O	-	-	w	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set rotate label

SOH	F	C	D	N	-	-	r	X	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

X: 0 = rotate label Off
 X: 1 = rotate label On

Get rotate label

SOH	F	C	D	N	-	-	w	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	X	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set mode flip/rotate label

SOH	F	C	D	S	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = flip/rotate label at the centre point of label
 N: 1 = flip/rotate label at the centre point of printhead

Get mode flip/rotate label

SOH	F	C	D	S	-	-	w	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set material selection

SOH	F	C	D	N	C	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN: indication of material

0 = type 1

1 = type 2

Get material selection

SOH	F	C	D	N	C	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set rotate label in 90 degrees

SOH	F	C	D	N	D	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = 0°

N: 1 = 90°

N: 2 = 180°

N: 3 = 270°

Get rotate label in 90 degrees

SOH	F	C	D	N	D	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set scan position

SOH	F	C	D	E	A	-	r	N	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NN = indication of scan position in % of the set label length (01 ... 99)
value depends on the label length

Get scan position

SOH	F	C	D	E	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set sensitivity of transmission photocell

SOH	F	C	D	E	B	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = indication of photocell sensitivity

3 digit ASCII number (001 ... 255)

Get sensitivity of transmission photocell

SOH	F	C	D	E	B	-	w	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

9.2 Photocell

Get minimal measured level at label photocell (label parameter A)

```
SOH F C M A A - w p p p p p p p p ETB
```

Answer

```
SOH A N N N - - - - p p p p p p p p ETB
```

NNN = value of measured level, 3 digit ASCII number in 1/100 V

Get maximal measured level at label photocell (label parameter B)

```
SOH F C M A B - w p p p p p p p p ETB
```

Answer

```
SOH A N N N - - - - p p p p p p p p ETB
```

NNN = value of measured level, 3 digit ASCII number in 1/100 V

Set switching threshold at label photocell (label parameter C)

```
SOH F C M A C - r N N N - - - - ETB
```

NNN = value of switching threshold, 3 digit ASCII number in 1/100 V
value is automatically calculated at measuring process at
printer ($\min + \frac{\max - \min}{3}$)

Get switching threshold

```
SOH F C M A C - w p p p p p p p p ETB
```

Answer

```
SOH A N N N - - - - p p p p p p p p ETB
```

NNN = value at measured switching threshold
3 digit ASCII number in 1/100 V

Get current value at transfer ribbon photocell

```
SOH F C M B A - w p p p p p p p p ETB
```

Answer

```
SOH A N - - - - - p p p p p p p p ETB
```

N: 0 = transfer ribbon inserted

N: 1 = no transfer ribbon

Get current value at label photocell

SOH	F	C	M	B	B	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: value at label photocell, 3 digit ASCII number in 1/100 V

Get status at dispenser photocell

SOH	F	C	M	B	E	A	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = no label at photocell

N: 1 = label at photocell

Set switching threshold of dispenser photocell is taken into consideration.

9.3 Printer Parameters

Set print speed

SOH	F	C	A	A	-	-	r	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN: Indication of print speed in mm/s

ILX 5X, 8X, 10X = 300 mm/s

It is necessary to transmit a 3 digit ASCII number

Get print speed

SOH	F	C	A	A	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set transfer ribbon control On/Off

SOH	F	C	D	B	-	-	r	N	M	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 1 = transfer ribbon control On

N: 0 = transfer ribbon control Off

M: 0 = weak sensibility

M: 1 = strong sensibility

Get transfer ribbon On/Off

SOH	F	C	D	B	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	M	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set field handling

SOH	F	C	D	K	-	-	r	N	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = field handling Off

N: 1 = graphic received

N: 2 = delete graphic

N: 3 = restore graphic

Get field handling

SOH	F	C	D	K	-	-	w	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set printer language

SOH	F	C	D	I	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = German	N: 8 = Italian	N: 15 = not used
N: 1 = English	N: 9 = Danish	N: 16 = Ukrainian
N: 2 = French	N: 10 = Polish	N: 17 = Turkish
N: 3 = Spanish	N: 11 = Greek	N: 18 = Swedish
N: 4 = Finish	N: 12 = Hungarian	N: 19 = Norwegian
N: 5 = Czech	N: 13 = Russian	N: 20 = Estonian
N: 6 = Portuguese	N: 14 = Chinese	N: 21 = Romanian
N: 7 = Netherlands		

Get printer language

SOH	F	C	D	I	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set external printer parameters

SOH	F	C	C	P	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = only parameter settings by interface for label length, gap length and label width are taken into consideration.
 N: 1 = parameter settings by interface are processed
 N: 2 = parameter settings by interface are not taken into consideration

Get external printer parameters

SOH	F	C	C	P	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set Codepage

SOH	F	C	C	N	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = Codepage 1252 West European (former ANSI)
 N: 1 = Codepage 437 English
 N: 2 = Codepage 850 Western European
 N: 3 - 8 = not used
 N: 9 = Codepage 852 Slavic
 N: 10 = Codepage 857 Turkish
 N: 11 = Codepage 1250 Central and East European
 N: 12 = Codepage 1251 Cyrillic
 N: 13 = Codepage 1253 Greek
 N: 14 = Codepage 1254 Turkish
 N: 15 = Codepage 1257 Baltic
 N: 16 = WGL4 (UTF-8 coded data transmission)

Please find the tables referring to the above mentioned character sets on www.carl-valentin.de/Downloads.

Get Codepage

SOH	F	C	C	N	-	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set customized entry

SOH F C D U - - r N - - - - - - ETB

- N: 0 = Off No question appears at the display. In this case the stored default value is printed.
- N: 1 = On The question referring the customized variable appears once before the print start at the display.
- N: 2 = Auto The question referring the customized variable appears again after print end. Additionally a query appears demanding the number of copies that should be print.
- N: 3 = Auto without quantity:
The question referring the customized variable appears again after print end. However, the same number of copies is printed. This number was defined once at the start of the print order.

Get customized entry

SOH F C D U - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set keyboard layout

SOH F C C K - - r N - - - - - - ETB

- N: 0 = German
- N: 1 = English
- N: 2 = French
- N: 3 = Greek
- N: 4 = Spanish
- N: 5 = Swedish
- N: 6 = US American
- N: 7 = Russian

Get keyboard layout

SOH F C C K - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set sound level of key click (buzzer)

SOH F C C B - - w p p p p p p p p ETB

- N: 0 = buzzer Off
- N: 1-7 = sound level of key click

Get sound level of key click (buzzer)

SOH F C C B - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set brightness of display (contrast)

SOH F C C B B - r N N N - - - - ETB

NNN = value range of display brightness 045 ... 075

Get display brightness

SOH F C C B B - w p p p p p p p p ETB

Answer

SOH A N N N - - - - p p p p p p p p ETB

Set hotstart On/Off

SOH F C D W - - r N - - - - - - ETB

N: 0 = Off

N: 1 = On

Get hotstart On/Off

SOH F C D W - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set autoload

SOH F C D X - - r N - - - - - - ETB

N: 0 = Off

N: 1 = On

Get autoload

SOH F C D X - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set standard label On/Off

SOH F C M K E - r N - - - - - - ETB

N: 0 = Off (default) - print start without label definition signalizes error

N: 1 = On - standard label is printed without label definition

Get standard label On/Off

SOH F C M K E - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set backfeed operating mode

SOH F C M R A - r N - - - - - - ETB

N: 0 = standard
 N: 1 = automatic
 N: 2 = no backfeed
 N: 3 = optimized

Get backfeed operating mode

SOH F C M R A - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p P p p p p p ETB

Set backfeed delay

SOH F C M R B - r N N N - - - - - ETB

NNN: indication of delay time, 3 digit ASCII number in 1/100s

Get backfeed delay

SOH F C M R B - w p p p p p p p p ETB

Answer

SOH A N N N - - - - - - p p p p p p p p ETB

Set label change confirmation

SOH F C S D F C r N - - - - - - ETB

N: 0 = Off
 N: 1 = On

Get label change confirmation

SOH F C S D F C w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set label synchronization at switching on

SOH F C C A - - r N - - - - - - ETB

N: 0 = Off
 N: 1 = Measure
 N: 2 = Label feed

Get synchronization at switching on

SOH F C C A - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

9.4 Dispenser I/O

Set dispenser mode

```
SOH F C D C - - r N - - - - - ETB
```

N: 0 = Dispenser mode Off

N: 1 = External I/O static

N: 2 = Dispenser photocell

N: 3 = External I/O static continuous

N: 4 = Dispenser photocell continuous

N: 5 = External I/O dynamic

N: 6 = External I/O dynamic continuous

Get dispenser mode

```
SOH F C D C - - w p p p p p p p p ETB
```

Answer

```
SOH A N - - - - - p p p p p p p p ETB
```

Set dispenser level photocell

```
SOH F C C F - - r V N N - - - - - ETB
```

V = pre-sign of offset (always +)

NN = offset value, 2 digit ASCII number in 1/10 Volt (5 ... 40)

Get dispenser level photocell

```
SOH F C C F - - w p p p p p p p p ETB
```

Answer

```
SOH A V N N - - - - - p p p p p p p p ETB
```

Set sensitivity of dispenser photocell

```
SOH F C C F A - r N N N - - - - - ETB
```

NNN = Indication of photocell sensitivity

3 digit ASCII number (001 ... 255)

Get sensitivity of dispenser photocell

```
SOH F C C F A - w p p p p p p p p ETB
```

Answer

```
SOH A V N N - - - - - p p p p p p p p ETB
```

Get status of I/O inputs

SOH	F	C	M	D	A	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Inputs 1-8 / IO port 1-8:

1 = Port active
 0 = Port not active
 - = Port not connected, signal blocked or output

Get status of I/O inputs

SOH	F	C	M	D	A	B	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Inputs 1-16 / IO port 1-16:

1 = Port active
 0 = Port not active
 - = Port not connected, signal blocked or output

Get status of I/O outputs

SOH	F	C	M	D	B	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Outputs 1-8 / IO port 9-16:

1 = Port active
 0 = Port not active
 - = Port not connected, signal blocked or input

Get status of I/O outputs

SOH	F	C	M	D	B	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Outputs 1-16 / IO port 1-16:

1 = Port active
 0 = Port not active
 - = Port not connected, signal blocked or input

Set IN signal level

SOH	F	C	M	D	C	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 1-8 (dispenser inputs 1-8):

2 = Increased and decreased
 1 = Increased
 0 = Decreased
 s = I/O signal by interface
 x = I/O signal blocked

Only possible for IO ports that are specified as input.

Get IN signal level

SOH	F	C	M	D	C	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set IN signal level

SOH	F	C	M	D	C	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser inputs 1-16):

2 = Increased and decreased
 1 = Increased
 0 = Decreased
 s = I/O signal by interface
 x = I/O signal blocked

Only possible for IO ports that are specified as input.

Get IN signal level

SOH	F	C	M	D	C	B	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 9-16 (dispenser outputs 1-8):

1 = Signal level 1
 0 = Signal level 0
 s = I/O signal by interface
 x = I/O signal blocked

Only possible for IO ports that are specified as output.

Get OUT signal level

SOH	F	C	M	D	D	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set OUT signal level

SOH	F	C	M	D	D	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser output 1-16):

1 = Signal level 1
 0 = Signal level 0
 s = I/O signal by interface
 x = I/O signal blocked

Only possible for IO ports that are specified as output.

Get OUT signal level

SOH	F	C	M	D	D	B	w	p	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	---	---	---	---	---	---	---	-----

Set software input

SOH	F	C	M	D	F	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO port 1-8 (dispenser inputs 1-8):

1 = Set software input
 0 = Delete software input
 - = Ignore software input
 P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

Example: Activate a start impulse
 (SOH)FCMDF-rP------(ETB)

Set software input

SOH	F	C	M	D	F	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO port 1-16 (dispenser inputs 1-16):

1 = Set software input
 0 = Delete software input
 - = Ignore software input
 P = Pulse, run software input once

Only possible for IO ports whose input signal levels are activated for interface.

An IO port that was set (1) must be deleted (0) first to activate a function when next setting (1).

Example: Activate a start impulse
 (SOH)FCMDFBrP------(ETB)

Set software output

SOH	F	C	M	D	G	-	r	1	2	3	4	5	6	7	8	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

IO Port 9-16 (dispenser outputs 1-8):

1 = Set software output
 0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set software output

SOH	F	C	M	D	G	B	r	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	-----

IO Port 1-16 (dispenser outputs 1-16):

1 = Set software output
 0 = Delete software output

Only possible for IO ports whose output signal levels are activated for interface.

Set dispenser offset

SOH	F	C	S	D	A	-	r	V	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

V = prefix of offsets (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get dispenser offset

SOH	F	C	S	D	A	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	V	N	N	N	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set start signal delay

SOH	F	C	S	D	D	-	r	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNN = start signal delay in 1/100 s (0 ... 999)

Get start signal delay

SOH	F	C	S	D	D	-	w	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set save start signal

SOH F C S D E - r N - - - - - ETB

N: 0 = Off

N: 1 = On

Get save start signal

SOH F C S D E - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

Set cancel continuous printing (operating mode)

SOH F C S D F A r N - - - - - ETB

N: 0 = Off

N: 1 = On

Get cancel continuous printing (operating mode)

SOH F C S D F A w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

Dispenser photocell**Get status of dispenser photocell**

SOH F C M B E A w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

N: 0 = no label at photocell

N: 1 = label at photocell

The set switching threshold of dispenser photocell is taken into consideration.

9.5 Interface

By means of the following commands the parameters of the serial interface can be set. Note that after sending one of the commands also the host computer changes the corresponding parameter of its interface to allow further communication of host computer-printer. For all interface commands the interface is fixed with x. The following values are allowed:

x = 1 ⇒ COM 1

x = 2 ⇒ COM 2

In all other cases automatically the first serial interface is addressed. In the answers the addressed interface is also returned.

Set all interface parameters

```
[SOH]FCFFx-rm;b;p;d;s[ETB]
```

m = mode (0 = Off, 1 = On, 2 = On, without error message)

b = baud rate (2400, 4800, 9600, 19200, 38400, 115200)

p = parity (n = no parity, e = even parity, o = odd parity)

d = number of data bits (7, 8)

s = number of stop bits (1, 2)

Get all interface parameters

```
[SOH]FCFFx-wpppppppp[ETB]
```

Answer

```
[SOH]Ax;m;b;p;d;s;pppppppp[ETB]
```

Example: activate interface COM1 and set 9600 Baud, no parity, 8 data bits, 2 stop bits
[SOH]FCFF1-r1;9600;n;8;2[ETB]

Interface protocol

There are two different interface protocols available. Usually SOH = 01_{Hex} and ETB = 17_{Hex}. However there are host computers (e.g. AS/400), which cannot work with these characters. Therefore you can switch SOH = 5E_{Hex} and ETB = 5F_{Hex}. The host computer has to change the corresponding parameter as well.

Set SOH and ETB

```
[SOH]FCGC--rN-----[ETB]
```

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}

N: 1 = SOH = 5E_{Hex}, ETB = 5F_{Hex}

Get SOH and ETB

```
[SOH]FCGC--Wpppppppp[ETB]
```

Answer

```
[SOH]AN-----pppppppp[ETB]
```

N: 0 = SOH = 01_{Hex}, ETB = 17_{Hex}

N: 1 = SOH = 5E_{Hex}, ETB = 5F_{Hex}

N: 2 = other character combination

Data memory

Set data memory

SOH F C G D - - r M - - - - - ETB

M: 0 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 1 = Off, after receiving FBCA0r or FBDA0r the interface is locked until the end of the print order, i.e. you cannot write more data in the receiving buffer.

M: 2 = Extended, after starting a print order write more data in the receiving buffer. These data is processed during the print and the next label is prepared.

Get data memory

SOH F C G D - - W p p p p p p p p ETB

Answer

SOH A M - - - - - p p p p p p p p ETB

Set reaction to unknown interrogative set

SOH F C G E A - r N - - - - - ETB

N = value range between 0 and 3

Get reaction to unknown questions

SOH F C G E A - w p p p p p P p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

9.6 Network

```
SOH F C L A - - r C 0 A 8 0 0 1 5 ETB
```

All network parameter sets start in the third column with a 'L'. Column 4 shows the identification for the corresponding network parameter. Column 5 can show another sub-identification.

Because of the fact that the argument size is limited to 8 characters, the IP addresses (IP address, network mask, gateway address) which consist of 32 bit are transmitted in HEX presentation.

For all data which is transmitted in HEX presentation (also the MAC address) it is allowed to use capital as well as small letters.

In contrary to the parameter settings of the other interfaces, the settings of the following sets were saved immediately onto Flash, i.e. it is not necessary to save the currently set configuration before switching off the printer so the modifications are still available after switching on.

So that the made modifications become active, also without printer Reset it is necessary to transmit a corresponding Z set which effects a Reset of the network devices.

Set IP address (e.g. 192.168.0.21)

```
SOH F C L A - - r C 0 A 8 0 0 1 5 ETB
```

Get IP address

```
SOH F C L A - - w p p p p p p p ETB
```

Answer

```
SOH A C 0 A 8 0 0 1 5 p p p p p p p ETB
```

Set netmask (e.g. 255.255.255.0)

```
SOH F C L B - - r F F F F F F 0 0 ETB
```

Get netmask

```
SOH F C L B - - w F F F F F F 0 0 ETB
```

Answer

```
SOH A F F F F F F 0 0 p p p p p p p ETB
```

Set Gateway address (e.g. 192.168.0.1)

```
SOH F C L C - - r C 0 A 8 0 0 0 1 ETB
```

Get Gateway address

```
SOH F C L C - - w p p p p p p p ETB
```

Answer

```
SOH A C 0 A 8 0 0 0 1 p p p p p p p ETB
```

Set transmission mode (e.g. auto recognition)

SOH F C L D - - r 0 - - - - - ETB

0 = auto recognition

1 = 10 MBit/s half duplex

2 = 10 MBit/s full duplex

3 = 100 MBit/s half duplex

4 = 100 MBit/s full duplex

Get transmission mode

SOH F C L D - - w 0 - - - - - ETB

Answer

SOH A 0 - - - - - p p p p p p p p ETB

Set DHCP support

SOH F C L E - - r N ETB

N: 0 = Off

N: 1 = On

Get DHCP support

SOH F C L E - - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

Assign printer name

SOH F C L F - - R N N N N N N N N N N N N ETB

N = printer name can consist of max. 11 characters

[A...Z, a...z, 0...9, -, -]

Get printer name

SOH F C L F - - w p p p p p p p p ETB

Answer

SOH A N N N N N N N N ; p p p p p p p p ETB

Set MAC address (e.g. 00-07-4A-43-19-08)

SOH F C L M B - r 0 0 0 7 4 A - - ETB

SOH F C L M A - r 4 3 1 9 0 8 - - ETB

SOH F C L M C - r 0 0 0 7 4 A 1 9 0 8 ETB

A MAC address has a width of 48 bit and is normally indicated in hexadecimals.

With the B record our identifier of the MAC address can be changed. All our machines start with 00-07-4A as default. This corresponds to the Memory-Pool which the MAC address committee assigned to us to guarantee that the MAC address is world-wide manufacturer-spreading unique.

With the A record any address can be set in our pool.

With the C record any address in our pool and the identification of the MAC address can be set/changed at the same time.

Get MAC address

```
SOH F C L M B - w p p p p p p p p p ETB
```

```
SOH F C L M A - w p p p p p p p p p ETB
```

```
SOH F C L M C - w p p p p p p p p p ETB
```

Answer

```
SOH A 0 0 0 7 4 A - - p p p p p p p p ETB
```

```
SOH A 4 3 1 9 0 8 - - p p p p p p p p ETB
```

```
SOH A 0 0 0 7 4 A 4 3 1 9 0 8 p p p p p p p p ETB
```

NTP Server

NTP (Network Time Protocol) is a standardized Internet protocol permitting the synchronization of real-time clocks of network participants. The printer connects itself with a time server and align every 60 minutes its internal real-time clock with that of the time server in order to correct possible differences.

The address of server (IP address) can be freely configured in the printer. The communication is effected by UDP and the fixed set port 123. The service in the printer is deactivated by transmitting the server address 0.0.0.0.

The time servers work together with the coordinated world time (UTC) and therefore an additional time shift is needed compared to the reference time. For Germany it is e.g. +1 hour.

The current state of the connexion can be queried with a status set.

Set NTP Server IP

```
SOH F C L N I - r N ETB
```

$N = X.X.X.X$ ($X = 0 \dots 255$)

Get NTP Server IP

```
SOH F C L N I - w p p p p p p p p p ETB
```

Answer

```
SOH A N N N N N N N N N p p p p p p p p ETB
```

0.0.0.0 deactivates the NTP service

Readout NTP status

SOH F C L N S - w p p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p p ETB

N: 0 = Off

N: 1 = OK

N: 2 = Error

Set time zone (hour offset)

SOH F C L N Z - r N ETB

N: -12, 12

Get time zone (hour offset)

SOH F C L N Z - w p p p p p p p p p ETB

Answer

SOH A N N N N N N N N N p p p p p p p p p ETB

Reset Network Device

SOH F C L Z - - r ----- ETB

For this set is no enquiry possible. This set causes that modifications made by the transfer of the previous sets become effective.

9.7 Offset Values

Set Y offset

```
SOH F C C D - - r V N N N - - - - ETB
```

V = offset prefix (+ or -)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get Y offset

```
SOH F C C D - - w p p p p p p p p p ETB
```

Answer

```
SOH A V N N N - - - - p p p p p p p p ETB
```

Set X offset

```
SOH F C C E - - r V N N N - - - - ETB
```

V = offset prefix (+ or -)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get X offset

```
SOH F C C E - - w p P p p p p p p p ETB
```

Answer

```
SOH A V N N N - - - - p p p p p p p p ETB
```

Set tear-off offset

```
SOH F C C G - - r V N N N - - - - ETB
```

V = offset prefix (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get tear off offset

```
SOH F C C G - - w p p p p p p p p p ETB
```

Answer

```
SOH A V N N N - - - - p p p p p p p p ETB
```

Set dispenser offset

```
SOH F C S D A - r V N N N - - - - ETB
```

V = offset prefix (always +)

NNN = offset value, 3 digit ASCII number in 1/10 mm

Get dispenser offset

```
SOH F C S D A - w P p p p p p p p ETB
```

Answer

```
SOH A V N N N - - - - p p p p p p p p ETB
```

9.8 Service Functions

Set zero point adjustment (Y value)

SOH F C C R - - r V N N N - - - - ETB

Get zero point adjustment (Y value)

SOH F C C R - - w p p p p p p p p p ETB

V: offset prefix (+ or -)

NNN: offset value

3 digit ASCII number in 1/100 mm (-999 ... +999)

Answer

SOH A V N N N - - - - p p p p p p p p ETB

Set zero point adjustment (X value)

SOH F C C T - - r V N N N - - - - ETB

Get zero point adjustment (X value)

SOH F C C T - - w p p p p p p p p p ETB

V: offset prefix (+ or -)

NNN: offset value

NNN: 3 digit ASCII number in 1/100 mm (-999 ... +999)

Answer

SOH A V N N N - - - - p p p p p p p p ETB

Set Online / Offline

SOH F C M K C - r M - - - - - - ETB

M: 0 = Offline Off

M: 1 = Offline On

Get Online / Offline

SOH F C M K C - w p p p p p p p p p ETB

Answer

SOH A M - - - - - - p p p p p p p p ETB

After changing by interface the display is automatically new initialized (by activated online/offline changing to online indication).

Set reprint action

SOH F C M K D - r N - - - - - ETB

Get reprint action

SOH F C M K D - w p p p p p p p p ETB

N: 0 = complete reprint

N: 1 = empty reprint

Answer

SOH A N - - - - - p p p p p p p p ETB

Set winder output

SOH F C M P - - r N - - - - - ETB

N: 0 = Off

N: 1 = On

Get winder output

SOH R C M P - - W p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

Get printhead temperature

SOH F C M C - - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

NNN = value of temperature, 3 digit ASCII number in degrees

Set transfer ribbon prior warning

SOH F C M L A - r N - - - - - ETB

N: 0 = Off

N: 1 = On

Get transfer ribbon prior warning

SOH F C M L A - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p P p p p p ETB

Set diameter for transfer ribbon prior warning

SOH F C M L B - r N N N - - - - ETB

NNN = 030 ... 090 diameter in mm

Get transfer ribbon prior warning

SOH F C M L B - w p p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p p ETB

Get current transfer ribbon diameter

SOH F C M L C - w - - - - - - - - ETB

Answer

SOH A N N N - - - - - p p p p p p p p p ETB

Set mode for transfer ribbon prior warning

SOH F C M L D A r N - - - - - - - - ETB

N: 0 = Warning

N: 1 = Reduced speed

N: 2 = Error

Get mode for transfer ribbon prior warning

SOH F C M L D A w p p p p p p p p p ETB

Answer

SOH A N - - - - - - - p p p p p p p p p ETB

Set reduced speed (ribbon prior warning)

SOH F C M L D B r N N N - - - - - ETB

NNN = V_{\min} ... V_{\max} : reduced print speed
(depending on printer type)**Get reduced speed (ribbon prior warning)**

SOH F C M L D B w p p p p p p p p p ETB

Answer

SOH A N N N - - - - - p p p p p p p p p ETB

Set printhead resistance

SOH F C M G - - r N N N N N - - - ETB

NNNNN = value of resistance in Ohm.

Get printhead resistance

SOH F C M G - - w p p p p p p p p ETB

Answer

SOH A N N N N N - - - p p p p p p p p ETB

Set print length correction

SOH F C M T - - r V N N N - - - - ETB

V: offset prefix (+ or -)

NNN: print length correction value

3 digit ASCII number in 1/10 % (-100 ... +100)

Get print length correction

SOH F C M T - - w p p p p p p p p ETB

Answer

SOH A V N N N - - - - p p p p p p p p ETB

Set custom logo

SOH F C N R A - r N - - - - - - ETB

N: 0 = Off

N: 1 = On

Get custom logo

SOH F C N R A - w p p p p p p p p ETB

Answer

SOH A N - - - - - - - p p p p p p p p ETB

Paper counter

The paper counter (kilometer value) of printer as well as of printhead can only be enquired by interface and not reset to 0.

Get paper counter of printer

```
SOH F C H A - - w p p p p p p p p ETB
```

Answer

```
SOH A N N N N N N N N N p p p p p p p p ETB
```

Get paper counter of printhead

```
SOH F C H B - - w p p p p p p p p ETB
```

Answer

```
SOH A N N N N N N N N N p p p p p p p p ETB
```

NNNNNNNN = kilometer value of printer and/or printhead in meters
(e.g. '00000123' = 123 m)

9.9 Date & Time**Set date**

```
SOH F C I A - - r D D M O Y Y D W ETB
```

DD = day of month

MO = month

YY = year

DW = day of week ('00' = Sunday)

Get date

```
SOH F C I A - - w p p p p p p p p ETB
```

Answer

```
SOH A D D M O Y Y D W p p p p p p p p ETB
```

Set time

```
SOH F C I B - - r H H M I S S A M ETB
```

HH = hours

MI = minutes

SS = seconds

AM = mode ('am' = 12 hours mode AM, 'pm' = 12 hours mode PM,

'—' = 24 hours mode)

Get time

```
SOH F C I B - - w p p p p p p p p ETB
```

Answer

```
SOH A H H M I S S A M p p p p p p p p ETB
```

Automatically adjust clock for daylight saving changes

Because of the fact that there is no world-wide regulation if and when a changing of time between summer and wintertime (normal time) in the individual countries takes place, we distinguish between the following four formats for the definition for beginning and end of summertime.

F 0:	European format start of summertime = last Sunday in March end of summertime = last Sunday in October W: week (1 = first, ..., 5 = last) WD: day of week (0 = Sunday, ..., 6 = Saturday) MM: month (01 = January, ..., 12 = December)
F 1:	Fix date with indication of year DD: day MM: month (01 = January, ..., 12 = December) YY: year
F 2:	Fix date without indication of year DD: day MM: month (01 = January, ..., 12 = December)
F 3:	Week day after day in month WD: day of week (0 = Sunday, ..., 6 = Saturday) DD: after day (only the first day is taken into consideration) MM: month (01 = January, ..., 12 = December)

Set automatically adjust clock for daylight saving changes

SOH F C I G - - r N - - - - - ETB

Get automatically adjust clock for daylight saving changes

SOH F C I G - - w p p p p p p p p ETB

Answer

SOH A N - - - - - p p p p p p p p ETB

N: 0 = Automatically adjust clock for daylight saving changes Off
N: 1 = Automatically adjust clock for daylight saving changes On

Set beginning of summertime

F 0: SOH F C I H - - r F W ; W D ; M M ; H H ; M M ETB

F 1: SOH F C I H - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I H - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I H - - r F W D ; D D ; M M ; H H ; M M ETB

Get beginning of summertime

SOH F C I H - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set end of summertime

F 0: SOH F C I I - - r F W ; W D ; M M ; H H ; M M ETB

F 1: SOH F C I I - - r F D D ; M M ; Y Y ; H H ; M M ETB

F 2: SOH F C I I - - r F D D ; M M ; H H ; M M ETB

F 3: SOH F C I I - - r F W D ; D D ; M M ; H H ; M M ETB

Get end of summertime

SOH F C I I - - w p p p p p p p p ETB

Answer

SOH A F W W D M M p p p p p p p p ETB

The answer depends on each set format.

Set time shifting

SOH F C I J - - r N N N - - - - ETB

NNN = minutes

Get time shifting

SOH F C I J - - w p p p p p p p p ETB

Answer

SOH A N N N p p p p p p p p ETB

9.10 Password

Set password

SOH	F	C	K	A	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = input of password

4 digit ASCII number in mm (0000 ... 9999)

Get password

SOH	F	C	K	A	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set function group

SOH	F	C	K	B	-	-	r	A	B	C	D	E	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

A: Function menu

0 = password Off

1 = password On

B: CF card

0 = password Off

1 = standard directory allowed

2 = password On

C: not assigned

D: Printer guiding

0 = password Off

1 = not assigned

2 = Password On

E: Favorites menu

0 = password Off

1 = password On

Get function group

SOH	F	C	K	B	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	a	b	c	d	e	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Set password function menu

SOH F C K D A - r N N N N - - - - ETB

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get password function menu

SOH F C K D A - w p p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

Set password favorites menu

SOH F C K D B - r N N N N - - - - ETB

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Enquire password favorites menu

SOH F C K D B - w p p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

Set password memory card

SOH F C K D C - r N N N N - - - - ETB

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get password memory card

SOH F C K D C - w p p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

Set password printing manually

SOH F C K D D - r N N N N - - - - ETB

NNNN = input of password
4 digit ASCII number in mm (0000 ... 9999)

Get printing manually

SOH F C K D D - w p p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

9.11 Compact Flash Card

Save a label onto Compact Flash card

SOH F M A O - - r P ETB

- O: In case a label with the entered name exists already then the label is overwritten without an enquiry. If you enter another value as 0, an enquiry appears demanding if you want to overwrite.
- P: File name of the label which is to save. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Load a file from Compact Flash card

SOH F M B - - - r P ETB

- P: File name of the layout which is to load. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Delete a layout from Compact Flash card

SOH F M C - - - r P ETB

- P: File name of the layout which is to delete. Drive and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Format Compact Flash card

SOH F M D - - - r P ETB

- P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is formatted.

Readout contents of CF card

SOH F M G O - - r P ETB

- O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
- P: Optional drive identification with colon (e.g. A:).
In case no drive is indicated, then the currently selected is read out.

Answer

SOH File name/directory name ETB

- A list of all file entries is indicated, each entry is included in (SOH) and (ETB).

Readout free memory space

SOH F M H O - - w X p p p p p p p p ETB

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.

X = Drive [A,B] (optional)

Answer

SOH A X n n n n - - - p p p p p p p p ETB

X = Drive [A,B]

n = Memory space in KB

Create directory

SOH F M I O - - r P ETB

O: In case a label with the entered name already exists, then it is overwritten without an enquiry.

If you enter another value as O, an enquiry appears demanding if you want to overwrite.

P = Drive and path indication

Delete directory

SOH F M J - - - r P ETB

P = Drive and path indication

**NOTICE!**

The current directory cannot be deleted.

Delete directory path

SOH F M J A - - - r P ETB

Deletes the indicated directory including all containing sub-directories and files.

Change standard directory

SOH F M K - - - r P ETB

P = Drive and path indication

Readout current directory

SOH F M K - - - w ETB

Answer

SOH A P ETB

P = Current directory

Set standard directory for file selection via I/O

SOH F M K B - - r N ETB

N = directory path

Get standard directory for file selection via I/O

SOH F M K B - - w p p p p p p p p ETB

Antwort

SOH A N - - - - - p p p p p p p p ETB

Transfer file from printing system

SOH F M L - - - w P ETB

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH A F * S ETB Data

F = File name
S = File size in Byte
Data = Binary data

Enquiry if the file exists

SOH F M M - - - w P ETB

P: File name of file which is to transfer. Drive name and path name are optional, i.e. the file name is allowed to have more than 8 characters but is limited to 79.

Answer

SOH A X P ETB Daten

X: 0 = File does not exist
1 = File exists
P = File name

Readout size of Compact Flash card

SOH F M P O - - w X ETB

O: In case O is indicated, no error messages are displayed at the printing display e.g. if no card is inserted.
X: Drive [A,B] (optional)

Answer

SOH A D n n n n - - - X ETB

X = Drive [A,B]
n = Memory in KB
D = enquired drive

Get drive status

SOH	F	M	S	-	-	-	w	X	ETB
-----	---	---	---	---	---	---	---	---	-----

X - Drive [A,B]

Answer

SOH	A	X	S	ETB
-----	---	---	---	-----

X = Drive [A,B]

S = Status

0: no storage medium

1: not formatted

2: ready

3: not determinable

9.12 Printing

Set number of lines (n digits)

```
SOH F B A A - - r N ETB
```

N = number of lines in ASCII (1, 10, 100, ...)

Get number of lines

```
SOH F B A A - - w p p p p p p p p ETB
```

Answer

```
SOH A N - - - - - p p p p p p p p ETB
```

Start/Stop Command

In addition to the actual start/stop command, the print order can also be interrupted via the parameter/remote record.

```
SOH F D - - - - r N - - - - - ETB
```

N: 0 = stop printing

N: 1 = continue printing

N: 2 = cancel print order if it is already stopped

Reset error

Reset error

```
SOH F C M H - - r N N N N - - - - ETB
```

NNNN = current error ID or '9999'

Get error

```
SOH F C M H - - w p p p p p p p p ETB
```

Answer

```
SOH A N N N N 0 0 0 0 p p p p p p p p ETB
```

Get error ID and error text

```
SOH F C M H A - w p p p p p p p p ETB
```

Answer

```
SOH A N N N N ; error text ; p p p p p p p p ETB
```

Item number of print order

By means of this command the Host computer can enquire following item numbers:

Total number of current print order

SOH	F	B	B	A	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of labels which are still to print

SOH	F	B	B	B	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Number of already printed labels

SOH	F	B	B	C	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

At the end of one of these commands the printer returns the corresponding number as ASCII value (4 res. 5 digits) in the answer set.

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

With this set it is also possible to transmit the item number of print order to the printer.

Item number of print order

SOH	F	B	B	A	-	-	r	N	N	N	N	N	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNNN = 5 digits item number of order

Start printing

```
SOH F B C - - - r S - - - - - ETB
```

This command starts the print order which is actually set in the printer. The current parameters such as print mode, speed, initialization etc. are used.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
 S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

```
SOH F B D - - - r S - - - - - ETB
```

Start printing (see above) but without tear off offset.

```
SOH F B E - - - r n n n n n n n n ETB
```

With this command the printjob identifier which appears in "printing" res. "stopped" window is assigned to a print order. If only blanks are transmitted, then the printjob identifier is deleted and the display shows "noname".

Initialization of page handling

```
SOH F B F - - - r ETB
```

Selection of current page

```
SOH F B G - - - r P ETB
```

P = current page number [1 ... 9]

Select order of pages to be printed

```
SOH F B H - - - r P1 P2 P3 ETB
```

P₁; P₂;...= pages to be printed

Generation of page without print start

```
SOH F B I - - - r S ETB
```

With this command the corresponding page is only generated, i.e. no print start signal is sent.

S = x: sorted (e.g. pages 1-5, then again 1-5 etc. are printed)
 S = 1: unsorted (page 1 is printed x times, then page 2 x times, etc.)

Feed**Parameter set to release a feed**

SOH	F	E	-	-	-	-	r	-	-	-	-	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Test print**Parameter set to release a test print**

SOH	F	F	-	-	-	-	r	-	-	-	-	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Status print**Parameter set to print a status print**

SOH	F	C	M	Q	-	-	r	N	-	-	-	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = printer settings

N: 1 = bar codes

N: 2 = fonts

Cancel print orders**Parameter set to cancel all active print orders**

SOH	F	G	A	-	-	-	r	N	-	-	-	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: - = Cancel active print orders and delete all label data

N: 1 = Cancel active print orders and receive new label data

With the execution of this command:

- possible upcoming errors are confirmed
- possible upcoming customized entries are cancelled

9.13 Emulation**Set emulation**

SOH	F	Z	-	-	-	-	r	N	-	-	-	-	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N: 0 = CVPL (Carl Valentin Programming Language)

N: 1 = ZPL II® (Zebra Programming Language)

Get emulation

SOH	F	Z	-	-	-	-	w	p	p	p	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	-	p	p	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

10 Parameter Sets for Options

10.1 Label Applicator

Set operating mode

SOH	F	C	P	A	-	-	r	N	-	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – Off

N = 1 – Stamp on

N = 2 – Blow on

N = 3 – Roll on

Get operating mode

SOH	F	C	P	A	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = Current operating mode (see above)

Set application mode

SOH	F	C	P	B	-	-	r	N	-	-	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = 0 – Print-Apply

N = 1 – Apply-Print

Get application mode

SOH	F	C	P	B	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	-	-	-	-	-	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

N = Current application mode (see above)

Set support delay On

SOH	F	C	P	C	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Delay time in ms [0 ... 2500]

Get support delay On

SOH	F	C	P	C	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Current support delay On (see above)

Set support delay Off

SOH F C P D - - r N N N N - - - - ETB

NNNN = Delay time in ms [0 ... 2500]

Get support delay Off

SOH F C P D - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current support delay Off (see above)

Set vacuum control

SOH F C P E - - r N - - - - - - ETB

N = 0 – Off

N = 1 – On

Get vacuum control

SOH F C P E - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

N = current vacuum control (see above)

Set blow time

SOH F C P F - - r N N N N - - - - ETB

NNNN = Blow time in ms [0 ... 2500]

Get blow time

SOH F C P F - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = current blow time (see above)

Set waiting position (blow on & apply print)

SOH F C P G - - r N - - - - - - ETB

N = 0 – Up

N = 1 – Down

Get waiting position (blow on & apply-print)

SOH F C P G - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

N = current waiting position (see above)

Set roll-on time

SOH	F	C	P	H	-	-	r	N	N	N	N	-	-	-	-	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Roll-on time in ms [0 ... 5000]

Get roll-on time

SOH	F	C	P	H	-	-	w	p	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N	N	N	N	-	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

NNNN = Current roll-on time (see above)

Get applicator inputs

SOH	F	C	P	I	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N ₁	N ₂	N ₃	N ₄	N ₅	-	-	-	p	p	p	p	p	p	p	ETB
-----	---	----------------	----------------	----------------	----------------	----------------	---	---	---	---	---	---	---	---	---	---	-----

N₁N₂N₃N₄N₅ = Current state of applicator input

N₁ = 1 - Pre-dispense key pressed

N₂ = 1 - Pad in final position up

N₃ = 1 - Pad in final position down

N₄ = 1 - Compressed air available

N₅ = 1 - Vacuum at pad available

Set applicator outputs

SOH	F	C	P	J	-	-	r	N ₁	N ₂	N ₃	N ₄	N ₅	N ₆	N ₇	-	ETB
-----	---	---	---	---	---	---	---	----------------	----------------	----------------	----------------	----------------	----------------	----------------	---	-----

N₁ = 1 - Move pad downwards

N₂ = 1 - Move pad upwards

N₃ = 1 - not assigned

N₄ = 1 - not assigned

N₅ = 1 - Blowing air On

N₆ = 1 - Supporting air On

N₇ = 1 - Vacuum (pad) On

Get applicator outputs

SOH	F	C	P	J	-	-	w	p	p	p	p	p	p	p	p	ETB
-----	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	-----

Answer

SOH	A	N ₁	N ₂	N ₃	N ₄	N ₅	N ₆	N ₇	-	p	p	p	p	p	p	p	ETB
-----	---	----------------	----------------	----------------	----------------	----------------	----------------	----------------	---	---	---	---	---	---	---	---	-----

N₁N₂N₃N₄N₅N₆N₇ = Current state of applicator outputs (see above)

Set cleaning time

SOH F C P K - - r N N N N - - - - ETB

NNNN = Cleaning time in ms [0 ... 2500]

Get cleaning time

SOH F C P K - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current cleaning time (see above)

Set timeout hub

SOH F C P L - - r N N N N - - - - ETB

NNNN = Moving up and down of pad in ms [0 ... 5000]

Get timeout hub

SOH F C P L - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - P p p p p p p p ETB

Set pressure control

SOH F C P M - - r N - - - - - - - - ETB

N = 0 – Off

N = 1 – On

Get pressure control

SOH F C P M - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - - - p p p p p p p p ETB

N = Current pressure control (see above)

Set pressure time

SOH F C P N - - r N N N N - - - - ETB

NNNN = Pressure time in ms [0 ... 5000]

Get pressure time

SOH F C P N - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current pressure time

Set vacuum delay On

SOH F C P O - - r N N N N - - - - ETB

NNNN = Delay time in ms [0 ... 2500]

Get vacuum delay On

SOH F C P O - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current vacuum delay (see above)

Set vacuum delay Off

SOH F C P P - - r N N N N - - - - ETB

NNNN = Delay time in ms [0 ... 2500]

Get vacuum delay Off

SOH F C P P - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current vacuum delay (see above)

Set brake valve delay (quick apply)

SOH F C P Q - - r N N N N - - - - ETB

NNNN = Delay time in ms [0 ... 2500]

Get brake valve delay (quick apply)

SOH F C P Q - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current vacuum delay (see above)

Set transverse axis

SOH F C P R - - r N - - - - - - ETB

N: 0 = Off

N: 1 = On

Get transverse axis

SOH F C P R - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set application signal

SOH F C P S - - r N - - - - - - ETB

N: 0 = Off

N: 1 = Print position

N: 2 = Apply position

Get application signal

SOH F C P S - - w p p p p p p p p ETB

Answer

SOH A N - - - - - - p p p p p p p p ETB

Set delay lower end position

SOH F C P U - - r N N N N - - - - ETB

NNNN = Delay time in ms [0 ... 1000]

Get delay lower end position

SOH F C P U - - w p p p p p p p p ETB

Answer

SOH A N N N N - - - - p p p p p p p p ETB

NNNN = Current delay time (see above)

11 Configuration & Status

Save configuration permanent

In case you want to save the described settings permanent into the printer, then you have to transmit the following command to the printer.

SOH F X - - - - r N - - - - - - - - ETB

N: 0 = save current parameter
 N: 1 = set all parameters to default values
 Then the print module performs a restart

Read configuration

SOH F X - - - - w - - - - - - - - ETB

The printer sends as answer all current settings as parameter sets.

Status enquiry

Host computer can receive information about the printer by the serial interface.

The status enquiry has the following data format:

SOH S ETB

Status return information

After receiving the status enquiry the printer sends the corresponding status return information.

Data format of status enquiry

SOH 1. Byte 2. Byte 5.-1. digit ETB
 8 7 6 5 4 3 2 1 8 7 6 5 4 3 2 1

1. Byte	=	1. Status byte
		8. Bit = free 7. Bit = always set 6. Bit = free 5. Bit = 1 = running print order 0 = no. of items (0 = no print order) 4. Bit = 1 = press stop key 0 = not pressed stop key 3. Bit = cutter error (0 = no error; 1 = error) 2. Bit = label material (0 = no error; 1 = error) 1. Bit = transfer ribbon (0 = no error; 1 = error)
2. Byte	=	2. Status byte
		8. Bit – 4. Bit = free 3. Bit = Compact Flash card 2. Bit = Mask set 1. Bit = Printhead temperature
5.-1. digit	=	number of pieces with 5 digits as ASCII characters min. '00000' / max. '65535'

11.1 Autostatus

The printers are equipped with an auto status function, i.e. in certain operating modes the printer actively sends the corresponding status. This can be enquired by the serial interface.

To activate the auto status, the host computer has to send the following command to the printer:

```
SOH G 1. Byte 2. Byte ETB
```

Each of the below indicated message which is observed and send by the printer has to be transmitted with a set Bit (see table below 1. Byte and 2. Byte) to the printer by means of auto state function. The printer sends after each performed condition the corresponding message (answer) to the host computer.

The following messages are provided:

- 1 Start of generation
- 2 End of generation
The printer sends this state in case data for a complete label was generated. The test print was not taken into consideration. For counters/date variables the printer sends for each label a status cycle (start, end).
- 3 Start of printing
- 4 End of printing
The start of the print is send in case the generated data is send. The end of the print is send in case the print of the label is finished and the motor has stopped.
- 5 Start of cutting
- 6 End of cutting
This status describes the cutting. It can be checked for timeout and the end of the cut movement → error.
- 7 Start of feeding
- 8 End of feeding
This status is send in case an additional feeding (dispenser, cutter, tear off) is released.
- 9 Start of a print order
- 10 End of print order
This status signalizes the start and end of a complete print order (1...99999 labels). This status is active in all operating modes.
- 11 Error
This status message is send in case an error occurs.
- 12 Printing stopped
This message is send if the printing is stopped.
- 13 Printing resumed
This message is send if the printing is resumed.

The printer sends the auto status in the following format to the host computer:

SOH	G	1. Byte	2. Byte	ETB
-----	---	---------	---------	-----

1. Byte

- | | |
|------------------------------|------------------------|
| 8. Bit = start of generation | 4. Bit = start cutting |
| 7. Bit = end of generation | 3. Bit = end of cut |
| 6. Bit = start printing | 2. Bit = start feeding |
| 5. Bit = end of print | 1. Bit = always 0 |

2. Byte

- | | |
|-------------------------------|---------------------------|
| 8. Bit = end of label feed | 4. Bit = free |
| 7. Bit = start of print order | 3. Bit = printing stopped |
| 6. Bit = end of print order | 2. Bit = print resumed |
| 5. Bit = error | 1. Bit = always 0 |



HINWEIS!

Bit 1 has to be in 1. Byte and 2. Byte always 0, otherwise the printer possibly could recognize SOH or ETB.

At the status message of the printer to the host computer always at least 1 Bit is set. However, it could be occur that several Bits are set at the same time.

At the status demand of the host computer to the printer it is also possible that several Bits are set at the same time.

The auto status demand is saved in the printer, i.e. it is set to 0 after switching off/on. Therefore it is necessary to demand it anew after each time the printer is switched on.

Example

The printer should observe the start of a print order. For this the host computer sends the following demand to the printer.

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

After the condition is fulfilled (= start of the print order) the printer sends the following message to the host computer:

SOH	G	00000000	01000000	ETB
-----	---	----------	----------	-----

With regard to the contents the answer corresponds always to the format set.

12 Monitored Printing

This protocol replaces the outdated Autostatus. In contrary to the Autostatus, this is not a binary protocol but a text-based protocol sending the commands as English clear text. The advantage is a very fast and simple error tracing and development. The disadvantage of a larger data volume plays nowadays a smaller role.

12.1 Short Introduction

In order to activate monitored printing:

(SOH)FHM---rSE(ETB)

(SOH)FHA---r2(ETB)

12.2 Parameter Sets (Host – Printer)

Formatting: # - SOH * - ETB

Command: Set monitoring mode.

Syntax: #FHM---rSEPnnnCnFn*

Example: #FHM---rSP10E*

Description: Activates the forwarding of certain events to the server. The results are:

S - (start/stop): print start, print end, stop printing, continue printing, cancel printing.

E – (error): Error occurred, error confirmed.

C – (photocell): Activates the photocell test (n=1)/disable (n=0)

F – Activates the encoder profile (n=1)/disable (n=0)

P – (progress): Print progress, indicates the number of already printed labels. In standard case, the interval between two events is a label. If a number behind the flag is indicated, an event every *nnn* labels is released (see example). With column printing the event is released, as soon as the entered interval was reached or exceeded for the first time (example: 3 columns, interval 4, 20 labels in total. Event at label 6,9,12 and 18).

Command: Activate, disable the monitoring.

Syntax: #FHA---rn*

Example: #FHA---r2*

Description: activated, deactivates the monitoring (n=[0,2]);
 ,0' – enables the monitoring after completion of print order,
 ,1' – reserved
 ,2' – activates the monitoring for the current port.

12.3 Direct Enquiry

Command: Requests print status.

Syntax: #FHS---r*

Example: #FHS---r*

Description: Invites the client to send the current status.

Command: User command to the sender of print order.

Syntax: #FHU---rData*

Example: #FHU---rSE*

Description: Sends #Data* to the sender of print order.
Max 100 characters.

12.4 Answer Sets (Printer – Host)

Event: Print start

Set: #HSStart-*Pagename-Labelsrequested**

Example: #HSStart-NoName1-100*

Description: Indicates the start of a print order, including page name and number of labels to be printed.

Event: Printing completed

Set: #HSDone-*Pagename-Labelsprinted**

Example: #HSDone-NoName1-100*

Description: Indicates the completion of a print order including page name and number of printed labels.

Event: Printing stopped

Set: #HSHold-*Pagename-Labelsprinted**

Example: #HSHold-NoName1-10*

Description: Indicates the stopping of print order including page name and number of printed labels. Occurs when the user stopped the print order and/or after occurrence of an error.

Event: Continue printing

Set: #HSContinue-*Pagename-Labelsprinted**

Example: #HSContinue-NoName1-55*

Description: Indicates the continuation of print order including page name and number of printed labels. Occurs when the user restarts the print order.

Event: Cancel printing

Set: #HSAborted-*Pagename-Labelsprinted**

Example: #HSAborted-NoName1-57*

Description: Indicates the cancelation of printing including page name and number of printed labels.


Event: Error**Set:** #HSError-*Pagename-Labelsprinted-ErrorID-Errormessage****Example:** #HSError-NoName1-57-28-Messerfehler***Description:** Indicates the occurrence of an error including page name, number of printed labels, error ID and error text.**Event:** Error confirmation at printer**Set:** #HSAck-*Pagename-Labelsprinted ****Example:** #HSAck-NoName1-57***Description:** Indicates the confirmation of an error including page name and number of printed labels.**Event:** Print progress**Set:** #HSPProgress-*Pagename-Labelsprinted ****Example:** #HSPProgress-NoName1-60***Description:** Indicates the progress of print order including page name and number of printed labels. This event is also returned as answer to status enquiry, if the printer is printing.**Event:** Photocell value**Set:** #HSPhotocell-DLS:xxx-RLS:xxx***Example:** #HSPhotocell-DLS:3.8-RLS:1.9***Description:** Returns the values of transmission and reflexion photocell. The verification takes place every 5 ms; only changes are sent.**Event:** Encoder profile**Set:** # HSEnc-Dist:xxx-Speed:xxx***Example:** # HSEnc-Dist:120-Speed:202***Description:** Generates the profile of speed development of the packaging machine during a print order.**Event:** Answer to status enquiry (#FHS---r*)**Description:** The respective current print event is returned.

12.5 Sample Label

A simple label with monitoring of all parameters with output of the progress – all 10 labels could look as following:

```
FHM---rSP10E
//Ueberwachung einschalten
FHA---r2
// JOBNAME: "ETIKETT1"
FBE---rETIKETT1
// TYPE: Endlosetiketten
// HEIGHT: 20.00 mm
// GAPLENGTH: 2.00 mm
// COLUMNS: 1
// COLUMN DISTANCE: 100.00 mm
FCDA--r1-----
FCCL--r0002000-
FCCM--r00000---
FCCHA-r1-----
FCCHB-r999-----
// SPEED: 50 mm/s
FCAA--r050-----
// CONTRAST: 200%
FCAB--r200-----
// LABELCONTROL: 0
FCDE--r0-----
// RIBBONCONTROL: 1
// RIBBONSENS: 0
FCDB--r10-----
// MATERIAL: Typ 1
FCDNA-r0-----
FCDNB-r1-----
FCDNC-r0000----
// SCAN MODE: 0
// SCAN PORT: 0
// NO READ: 0
// FEED LABEL: 0
FCDM--r0000----
// MIRROR LABEL: Nein
FCDO--r0-----
// TEXT (1/100 mm)
AM[1]1407;6907;0;4;0;3;398;398;8
BM[1]Test
// SETLINENO: 1 lines
FBAA--r1
// SETCOPIES: 1
FBBA--r00050---
// PRINT
FBC---r-----
```

The server output, for example, looks as follows:

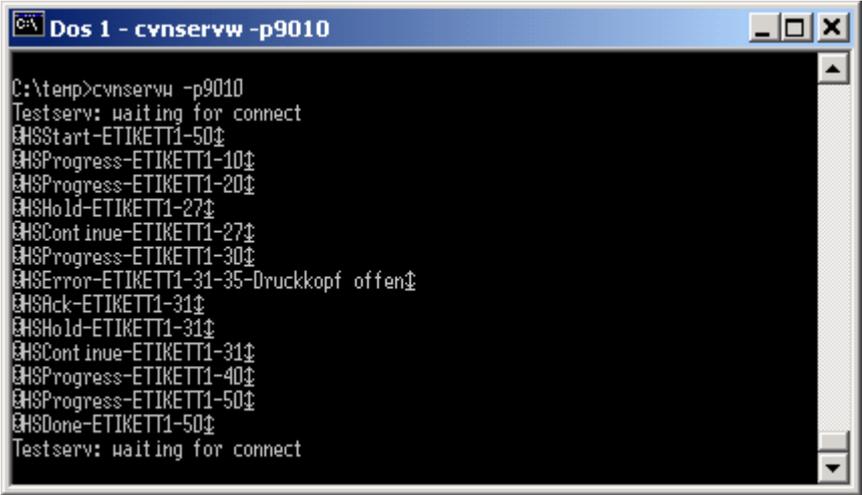

```
Dos 1 - cvnservw -p9010
C:\temp>cvnservw -p9010
Testserv: waiting for connect
@MSstart-ETIKETT1-50
@MSProgress-ETIKETT1-10
@MSProgress-ETIKETT1-20
@MSHold-ETIKETT1-27
@MSContinue-ETIKETT1-27
@MSProgress-ETIKETT1-30
@MSError-ETIKETT1-31-35-Druckkopf offen
@MSAck-ETIKETT1-31
@MSHold-ETIKETT1-31
@MSContinue-ETIKETT1-31
@MSProgress-ETIKETT1-40
@MSProgress-ETIKETT1-50
@MSDone-ETIKETT1-50
Testserv: waiting for connect
```

13 Font Examples

13.1 Bitmap Fonts (Not Proportional)

Font 01 (8 x 11) Verhältnis 3:3
 Font 02 (12 x 17) Verhältnis 3:3
 Font 03 (18 x 26) Verhältnis 2:2
 Font 04 (40 x 56) Verhältnis 1:1
 Font 05 (18 x 32 mit Unterlängen) Verhältnis 2:2
 Font 07 (12 x 22 mit Unterlängen) Verhältnis 2:2

13.2 Bitmap Fonts (Proportional)

Font 21 (10 proportional) Verhältnis 3:3
 Font 22 (18 proportional) Verhältnis 2:2
 Font 23 (26 proportional) Verhältnis 2:2
 Font 24 (56 proportional) Verhältnis 1:1
 Font 28 (40 proportional) Verhältnis 1:1
 Font 29 (8 proportional) Verhältnis 5:5

13.3 Vector Fonts

Absender (Baskerville) Das ist ein Musteretikett
 für die Darstellung der
 Gold, Petra (Swiss Light) Schriftarten (Monospace)

Name, Vorname (Helvetica Bold)
 Goldstraße 456 (Swiss Light)

Straße, Hausnummer (Helvetica Bold)

23456 Golddorf (Swiss Light)
 PLZ, Ort (Helvetica Bold)

Musterlieferung
Bitte bestätigen Sie
den Empfang. (Brush Script)

Empfänger (Baskerville)

Mustermann, Max (Helvetica Roman)
 Name, Vorname (Helvetica Bold)

Musterstraße 123 (Helvetica Roman)
 Straße, Hausnummer (Helvetica Bold)

45678 Musterstadt (Helvetica Roman)
 PLZ, Ort (Helvetica Bold)

14 Index

#

*FBAA, number of lines.....	91
*FBBA, total items of print order	92
*FBBB, labels still to print.....	92
*FBBC, already printed labels.....	92
*FBC, start printing.....	93
*FBD,start printing (w/o tear-off offset	93
*FBE, start printing (assign printjob identifier)	93
*FBF, initialisation of page handling	93
*FBG, selection of current page.....	93
*FBH, order of pages	93
*FBI, generation of page w/o print start	93
*FCAA, print speed	60
*FCAB, contrast	56
*FCB, measure label.....	53
*FCCA, label synchronization at switching on	64
*FCCB, buzzer	62
*FCCBB, contrast.....	63
*FCCD, y offset	77
*FCCE, x offset	77
*FCCF, dispenser level photocell	65
*FCCFA, sensitivity dispenser photocell.....	65
*FCCG, tear off offset	77
*FCCHA, column printing (no. of columns).....	55
*FCCHB, column printing (column width)	55
*FCCJ, alignment.....	55
*FCCK, keyboard layout	62
*FCCL, label length.....	54
*FCCM, gap length	54
*FCCN, codepage.....	61
*FCCO, label width	54
*FCCP, external printer parameters	61
*FCCR, zero point adjustmetn (y value)	78
*FCCT, zero point adjustment (x value).....	78
*FCDA, label type	53
*FCDB, transfer ribbon speed.....	60
*FCDC, operating mode (dispenser I/O).....	65
*FCDE, label photocell.....	53
*FCDEA, scan position	57
*FCDEB, sensitivity transmission photocell	57
*FCDGA, label error length	54
*FCDGB, synchronization	55
*FCDI, printer language	61
*FCDK, field handling.....	60
*FCDN, rotate label.....	56
*FCDNC, material selection	57
*FCDND, rotate label in 90 degrees	57
*FCDO, flip label	56
*FCDS, flip/rotate label	56
*FCDU, customized entry	62
*FCDW, hotstart.....	63
*FCDX, autoload	63

*FCFF, interface parameters	71
*FCGC, SOH/ETB.....	71
*FCGD, data memory	72
*FCGEA, reaction unknown questions	72
*FCHA, paper counter printer	82
*FCHB, paper counter printhead	82
*FCIA, date	82
*FCIB, time.....	82
*FCIG, automatic clock adjustment	83
*FCIH, beginning of summertime.....	84
*FCII, end of summertime	84
*FCIJ, time shifting.....	84
*FCKA, password.....	85
*FCKB, function group (password)	85
*FCKDA, password function menu	86
*FCKDB, password favorites menu	86
*FCKDC, password memory card.....	86
*FCKDD, password printing manually	86
*FCLA, IP address (network)	73
*FCLB, netmask (network).....	73
*FCLC, gateway address (network).....	73
*FCLD, transmission mode (network).....	74
*FCLE, DHCP support (network)	74
*FCLF, printer name (network)	74
*FCLMB, MAC address (network)	74
*FCLNI, NTP server IP (network)	75
*FCLNS, NTP status (network).....	76
*FCLNZ, time zone (network)	76
*FCLZ, reset network device (network)	76
*FCMAA, label parameter a	58
*FCMAB, label parameter b	58
*FCMAC, label parameter c	58
*FCMBA, transfer ribbon photocell	58
*FCMBB, label photocell	59
*FCMBEA, dispenser photocell	59, 70
*FCMC, printhead temperature.....	79
*FCMDA, I/O inputs	66
*FCMDAB, I/O inputs	66
*FCMDB, I/O outputs	66
*FCMDBB, I/O outputs.....	66
*FCMDC, in signal level.....	67
*FCMDCB, in signal level.....	67
*FCMDD, out signal level.....	67
*FCMDDB, out signal level	68
*FCMDF, software input.....	68
*FCMDFB, software input	68
*FCMDG, software output.....	69
*FCMDGB, software output	69
*FCMG, printhead resistance	81
*FCMH, reset error.....	91
*FCMHA, error ID/error text	91
*FCMKC, online/offline.....	78
*FCMKD, reprint action	79
*FCMKE, standard label	63
*FCMLA, ribbon prior warning	79
*FCMLB, ribbon prior warning diameter	80
*FCMLC, ribbon diameter	80

*FCMLDA, mode (ribbon prior warning)	80
*FCMLDB, reduced speed (ribbon prior warning)	80
*FCMP, winder output.....	79
*FCMQ, status print	94
*FCMRA, backfeed operating mode	64
*FCMRB, backfeed delay.....	64
*FCMT, print length correction.....	81
*FCNRA, custom logo.....	81
*FCPA, operating mode (applicator).....	97
*FCPB, application mode (applicator).....	97
*FCPC, support delay On (applicator)	97
*FCPD, support delay Off (applicator)	98
*FCPE, vacuum control (applicator)	98
*FCPF, blow time (applicator).....	98
*FCPG, waiting position (applicator).....	98
*FCPH, roll-on time (applicator).....	99
*FCPI, inputs (applicator).....	99
*FCPJ, outputs (applicator).....	99
*FCPK, cleaning time (applicator).....	100
*FCPL, timeout hub (applicator)	100
*FCPM, pressure control (applicator)	100
*FCPN, pressure time (applicator).....	100
*FCPO, vacuum delay On (applicator)	101
*FCPP, vacuum delay Off (applicator).....	101
*FCPQ, brake valve delay (quick apply).....	101
*FCPR, transverse axis (applicator)	102
*FCPS, application signal (applicator)	102
*FCPU, delay lower end position (applicator).....	102
*FCSDA, dispenser offset	77
*FCSDA, offset (dispenser I/O).....	69
*FCSDD, start signal delay	69
*FCSDE, save start signal	70
*FCSDFA, continuous printing (operating mode) cancel.....	70
*FCSDFC, label change confirmation.....	64
*FD, start/stop command	91
*FE, feed	94
*FF, test print	94
*FGA, cancel print order	94
*FMA, save label (CF card).....	87
*FMB, load file (cf card)	87
*FMC, delete layout (cf card)	87
*FMD, format (cf card)	87
*FMG, table of contents (cf card).....	87
*FMH, memory space (cf card)	88
*FMI, create directory (cf card)	88
*FMJ, delete directory (cf card).....	88
*FMJA, delete directory path (cf card)	88
*FMK, change directory (cf card)	88
*FMKB, standard directory via I/O (cf card).....	89
*FML, transfer file (cf card)	89
*FMM, enquiry if the file exists (cf card).....	89
*FMP, size of cf card.....	89
*FMS, drive status (cf card)	90
*FZ, emulation.....	94

A

application mode (label applicator), parameter set	97
application signal (label applicator), parameter set.....	102
applicator inputs (label applicator), parameter set	99
applicator outputs (label applicator), parameter set.....	99
autoload.....	63

B

backfeed	
delay	64
operating mode.....	64
blow time (label applicator), parameter set	98
brake valve delay (label applicator), parameter set	101
buzzer.....	62

C

cleaning time (label applicator), parameter set	100
clock adjustment, automatical	
beginning of summertime	84
end of summertime	84
time shifting.....	84
codepage.....	61
column printing	55
compact flash card	
change directory	88
create directory	88
delete directory	88
delete directory path	88
delete layout	87
drive status	90
enquiry if the file exists	89
format card.....	87
load file.....	87
readout free memory space.....	88
save label.....	87
size of cf card.....	89
standard directory via I/O.....	89
transfer file	89
configuration and status	
autostatus	104, 105
saving.....	103
status enquiry	103
status return information	103
contrast.....	56, 63
custom logo	81
customized entry	62

D

data format	
explanation	12
field attributes	13
field name	14, 15, 16, 17, 18
field properties	13
general information	11
Data format	
Field selection.....	18
data memory	72

date/time	
automatic clock adjustment	84
automatic clock adjustment	83
date	82
time	82
datum point (text, bar code, graphic)	9
delay lower end position (label applicator), parameter set.....	102
DHCP support, network.....	74
dispenser I/O	
continuous printing (operating mode)	70
dispenser level photocell	65
dispenser photocell.....	70
I/O inputs	66
I/O outputs	66
in signal level	67
mode	65
offset	69
out signal level	67, 68
save start signal	70
sensitivity dispenser photocell	65
software input	68
software output	69
start signal delay	69
dispenser photocell	59
dispenser, offset	77
display brightness.....	63
E	
emulation	94
external printer parameters	61
F	
feed.....	94
field handling	60
flip label	56
font examples	
bitmap fonts (not proportional).....	111
bitmap fonts (proportional).....	111
vector fonts	111
format identifier, date/time.....	41, 42, 43
G	
gap length.....	54
gateway address, network.....	73
generation, selected page	93
graphic set	
general graphic format.....	35
PCX format	35, 36
H	
hotstart.....	63
I	
in signal level (dispenser I/O)	67
initialisation of page handling	93
inputs I/O (dispenser I/O)	66

interface	
parameters.....	71
SOH/ETB.....	71
IP address, network.....	73
K	
keyboard layout.....	62
L	
label	
alignment.....	55
column printing.....	55
flip.....	56
label change confirmation.....	64
label error length.....	54
label photocell.....	53, 59
label type.....	53
length.....	54
measure.....	53
rotate.....	56
standard label.....	63
synchronization at switching on.....	64
width.....	54
label applicator	
application mode.....	97
application signal.....	102
applicator inputs.....	99
applicator outputs.....	99
blow time.....	98
brake valve delay.....	101
cleaning time.....	100
operating mode.....	97
pressure control.....	100
pressure time.....	100
roll-on time.....	99
support delay Off.....	98
support delay On.....	97
timeout hub.....	100
transverse axis.....	102
vacuum control.....	98
vacuum delay.....	101
label applicator (option)	
delay lower end position.....	102
label parameters	
column printing.....	55
contrast.....	56
flip label.....	56
gap length.....	54
label alignment.....	55
label error length.....	54
label length.....	54
label photocell.....	53
label rotation in 90 degrees.....	57
label type.....	53
label width.....	54
material selection.....	57
measure label.....	53

rotate label	56
scan position	57
sensitivity transmission photocell	57
synchronization	55
label photocell	
level maximal (label parameter b)	58
level minimal (label parameter a)	58
switching threshold (label parameter c)	58
label rotation in 90 degrees	57
line number	91

M

MAC address	75
mask set	
bar code Aztec code	30
bar code CODABLOCK F	27
bar code DataMatrix	25
bar code GS1 DataMatrix	26
bar code MAXICODE	24
bar code PDF417	23
bar code QR code	29
bar code, GS1 DataBar (RSS)	28
bar code, ITF	22
bar code, one-dimensional	21
internal graphic	32
line	31
rectangle	31
text	19, 20
material selection	57
measure, label	53
monitored printing	107, 108, 109, 110

N

netmask, network	73
network	
DHCP support	74
gateway address	73
IP address	73
MAC address	75
netmask	73
NTP server IP	75
NTP status	76
printer name	74
reset network device	76
time offser (hour offset)	76
transmission mode	74
NTP server IP	75
NTP status	76

O

offset values	
dispenser	77
tear off offset	77
x offset	77
y offset	77
online/offline	78
order (pages to print)	93
out signal level (dispenser I/O)	67, 68
outputs I/O (dispenser I/O)	66

P

paper counter	
printer	82
printhead	82
parallel data transmission, connection plan	7
parameter sets	
compact flash card	87, 88, 89, 90
data memory	72
date/time	82, 83, 84
dispenser I/O	65, 66, 67, 68, 69, 70
emulation	94
interface	71
interface protocol	71
label applicator, option	97, 98, 99, 100, 101
label parameters	53, 54, 55, 56, 57
network	73, 74, 75, 76
offset values	77
password	85, 86
password favorites menu	86
password function menu	86
password memory card	86
password printing manually	86
photocells	58, 59
printer parameters	60, 61, 62, 63
printing	91, 92, 93, 94
service functions	79, 80, 81
service funtions	78
password	85, 86
photocell	
dispenser photocell	59
label photocell	59
level maximal (label parameter b)	58
level minimal (label parameter a)	58
switching threshold	58
transfer ribbon photocell	58
photocell, label photocell	53
pressure control (label applicator), parameter set	100
pressure time (label applicator), parameter set	100
print length correction	81
print order, cancel	94
print speed	60
printer	
language	61
name	74
printer parameters	
autoload	63
backfeed, delay	64
backfeed, operating mode	64
buzzer	62
codepage	61
contrast	63
customized entry	62
external printer parameters	61
field handling	60
hotstart	63
keyboard layout	62
label change confirmation	64
label synchronization at switching on	64
print speed	60
printer language	61

standard label	63
transfer ribbon control.....	60
printhead	
resistance	81
temperature	79
printing	
cancel print orders	94
feed.....	94
generation of selected page	93
initialisation of page handling	93
item number of print order	92
number of lines	91
print order	93
reset error	91
selection of current page	93
start printing.....	93
start/stop command	91
status printing	94
test print.....	94
printing, start.....	93

R

reaction, unknown questions.....	72
reprint action.....	79
reset error	91
reset network device	76
roll-on time (label applicator), parameter set.....	99
rotate label.....	56
rotation (text, bar code, graphic)	9

S

scan position	57
sensitivity transmission photocell	57
serial data transmission	
connection plan RS232.....	6
connector assignment.....	5
service functions	
custom logo	81
online/offline.....	78
print length correction	81
printhead resistance	81
printhead temperature	79
reprint action	79
transfer ribbon prior warning.....	79
transfer ribbon prior warning, diameter.....	80
transfer ribbon prior warning, mode.....	80
transfer ribbon prior warning, reduced speed.....	80
winder output	79
zero point adjustment (x value)	78
zero point adjustment (y value)	78
software input (dispenser I/O)	68
software output (dispenser I/O)	69
SOH/ETB.....	71
speed.....	60
standard label.....	63
start/stop command.....	91
status print.....	94
support delay Off (label applicator), parameter set.....	98
support delay On (label applicator), parameter set.....	97
switching threshold, photocell	58

synchronization	55
synchronization at switching on	64

T

tear off offset	77
test print.....	94
text set	
example	34
general information.....	33
time zone (hour offset)	76
timeout hub (label applicator), parameter set.....	100
transfer ribbon photocell.....	58
transfer ribbon prior warning	79
diameter.....	80
mode.....	80
reduced speed	80
transmission mode	74
transverse axis (label applicator), parameter set.....	102

V

vacuum control (label applicator), parameter set.....	98
vacuum delay (label applicator), parameter set.....	101
variables	
check digit.....	50
counter	38
counter, extended.....	39
currency variable	44
date/time	40, 41, 42, 43
EPC (Electronic Product Code)	49
GS1-128 parser	48
link field	37
memory card data.....	48
set structure	37
shift variable.....	45
substring	51
user guiding	46
user guiding with mask	47

W

waiting position (label applicator), parameter set.....	98
winder output.....	79

X

x offset.....	77
---------------	----

Y

y offset.....	77
---------------	----

Z

zero point adjustment (x value)	78
zero point adjustment (y value)	78



Carl Valentin GmbH
Neckarstraße 78 – 86 u. 94 . 78056 Villingen-Schwenningen
Phone +49 7720 9712-0 . Fax +49 7720 9712-9901
info@carl-valentin.de . www.carl-valentin.de